



- U.S.A. : **KUBOTA TRACTOR CORPORATION**  
1000 Kubota Drive, Grapevine, TX 76051  
Telephone : 888-4KUBOTA
- Canada : **KUBOTA CANADA LTD.**  
5900 14th Avenue, Markham, Ontario, L3S 4K4, Canada  
Telephone : (905)294-7477
- France : **KUBOTA EUROPE S.A.S**  
19-25, Rue Jules Vercey, Z.I. BP88, 95101 Argenteuil Cedex, France  
Telephone : (33)1-3426-3434
- Italy : **KUBOTA EUROPE S.A.S Italy Branch**  
Via Grandi, 29 20068 Peschiera Borrome (MI) Italy  
Telephone : (39)02-51650377
- Germany : **KUBOTA (DEUTSCHLAND) GmbH**  
Senefelder Str. 3-5 63110 Rodgau /Nieder-Roden, Germany  
Telephone : (49)6106-873-0
- U.K. : **KUBOTA (U.K.) LTD.**  
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.  
Telephone : (44)1844-214500
- Spain : **KUBOTA ESPAÑA S.A.**  
Avenida Recomba No.5, Poligno Industrial la Laguna, Leganes, 28914 (Madrid) Spain  
Telephone : (34)91-508-6442
- Australia : **KUBOTA TRACTOR AUSTRALIA PTY LTD.**  
25-29 Permas Way, Truganina, VIC 3029, Australia  
Telephone : (61)-3-9394-4400
- Malaysia : **SIME KUBOTA SDN. BHD.**  
No.3 Jalan Sepadu 25/123 Taman Perindustrian Axis,  
Seksyen 25, 40400 Shah Alam, Selangor Darul Ehsan Malaysia  
Telephone : (60)3-736-1388
- Philippines : **KUBOTA PHILIPPINES, INC.**  
232 Quirino Highway, Baesa, Quezon City 1106, Philippines  
Telephone : (63)2-422-3500
- Taiwan : **SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.**  
16, Fengping 2nd Rd, Taliiao Shiang Kaohsiung 83107, Taiwan R.O.C.  
Telephone : (886)7-702-2333
- Indonesia : **PT KUBOTA MACHINERY INDONESIA**  
Tower A at EightyEight@Kasablanka Lantai 16  
Jalan Raya Casablanka Kav. 88, Jakarta 12870 Indonesia  
Telephone : (62)-21-29568-720
- Thailand : **SIAM KUBOTA CORPORATION CO., LTD.**  
101/19-24 Moo 20, Navanakorn Industrial Estate, Tambon Khlongnueng, Amphur Khlongluang,  
Pathumthani 12120, THAILAND  
Telephone : (66)2-909-0300
- Korea : **KUBOTA KOREA CO., LTD.**  
41-27, Jayumyeok-gil, Baeksan-myeon, Gimje-si, Jeollabuk-do, Korea  
Telephone : (82)-63-544-5822
- India : **KUBOTA AGRICULTURAL MACHINERY INDIA PVT. LTD.**  
No.15, Medavakkam Road, Sholinganallur, Chennai-600119, T.N., India  
Telephone : (91)44-6104-1500
- Vietnam : **KUBOTA VIETNAM CO., LTD.**  
Lot B-3A2-CN, My Phuoc 3 Industrial Park, Ben Cat District, Binh Duong Province, Vietnam  
Telephone : (84)-650-3577-507

KUBOTA Corporation

English, French, German (Europe)  
Code No.  
N° de code. K3623-7185-2  
Code-Nr.

S  
T  
F  
-  
3  
6

# OPERATOR'S MANUAL KUBOTA FOLDABLE ROPS

- Original instructions -

# MANUEL DE L'UTILISATEUR KUBOTA CADRE DE SÉCURITÉ ROPS PLIABLE

- Traduction de la notice originale -

# BEDIENUNGSANLEITUNG KLAPPBARES KUBOTA-ROPS

- Übersetzung der Originalanleitung -

ENGLISH

FRANÇAIS

DEUTSCH



SFF-36

1BDAIAAAP0930

## OPERATING FOLDABLE ROPS



### WARNING

To avoid serious injury or death:

- Always use the seat belt when the ROPS is installed.
- Do not use the seat belt if a foldable ROPS is down or there is no ROPS.




### CAUTION

To avoid personal injury:

- When raising or folding the ROPS, apply parking brake, stop the engine and remove the key.
  - Always perform function from a stable position from the rear of the machine.
  - Fold the ROPS down only when absolutely necessary and fold it up and lock it again as soon as possible.
  - Before proceeding to fold the ROPS, check for any possible interference with installed implements and attachments.
- If interference occurs, contact your local KUBOTA Dealer.

### ■ To Fold the ROPS

1. Unscrew the knob bolts 1 to 2 turns.
2. Remove both lock pins.

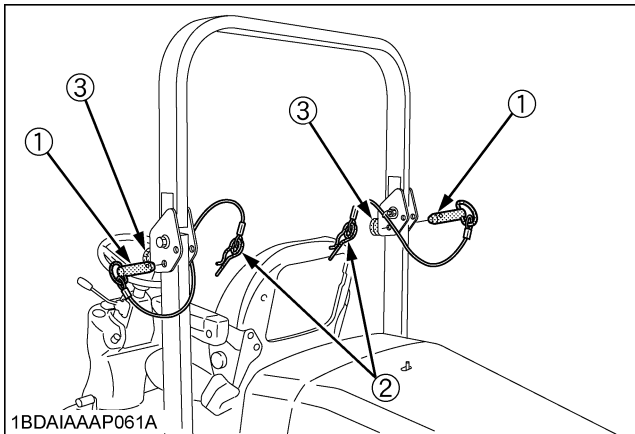

- (1) Lock pin  
(2) Hair pin  
(3) Knob bolt


3. Fold the ROPS.



### CAUTION

To avoid personal injury:

- Hold the ROPS tightly with both hands and fold the ROPS slowly and carefully.

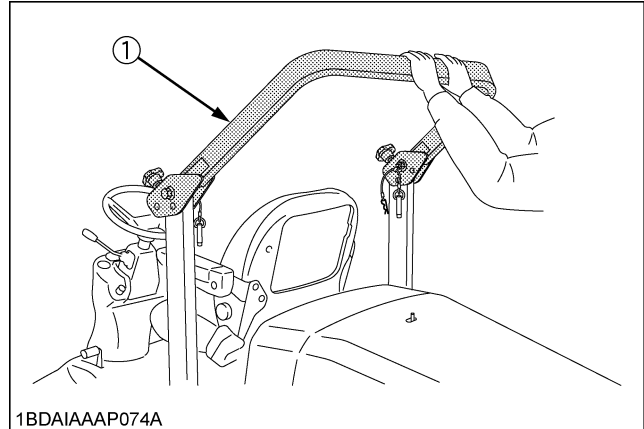

(1) ROPS


4. Align lock pin holes and insert both lock pins and secure them with the hair pins.



### CAUTION

To avoid personal injury:


- Make sure that both lock pins are properly installed and secured with the hair pins.

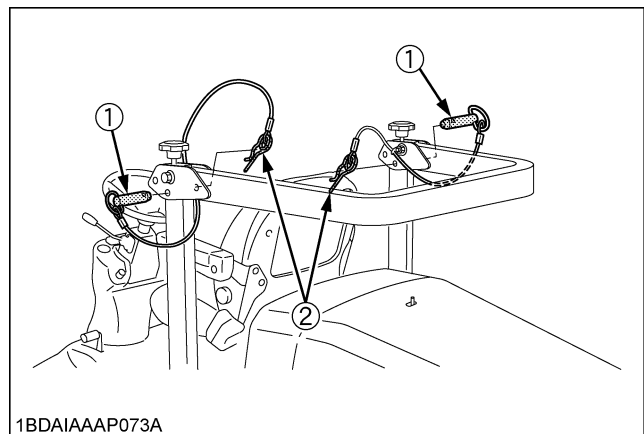

- (1) Lock pin  
(2) Hair pin

**■ To Raise the ROPS to Upright Position**

1. Remove both hair pins and lock pins.

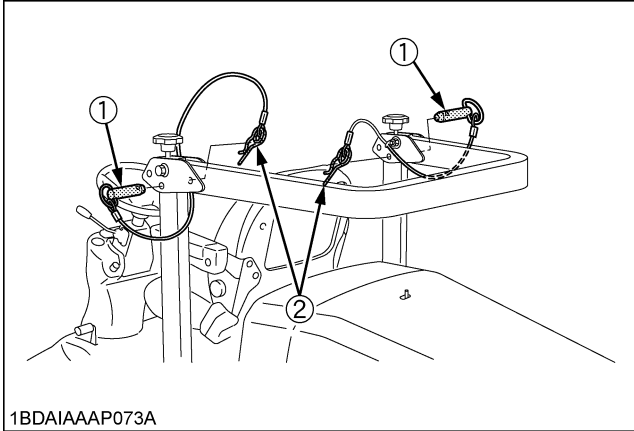

- (1) Lock pin
- (2) Hair pin

2. Raise ROPS to the upright position.

**! CAUTION**

To avoid personal injury:


- Raise the ROPS slowly and carefully.

3. Align lock pin holes, insert both lock pins and secure them with the hair pins.
4. Tighten the knob bolts slightly.

**! CAUTION**

To avoid personal injury:


- Make sure that both lock pins are properly installed as soon as the ROPS is in the upright position and secured with the hair pins.

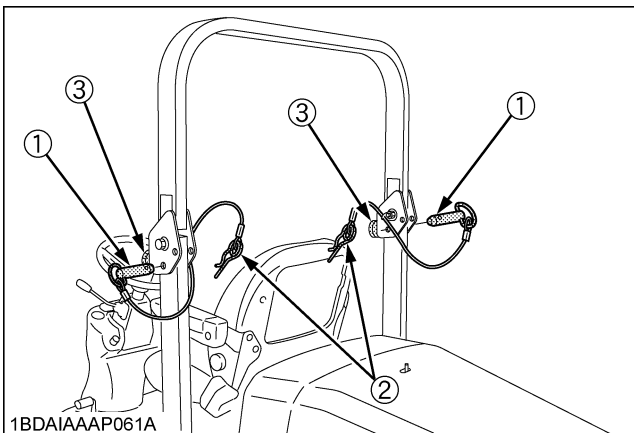

- (1) Lock pin
- (2) Hair pin
- (3) Knob bolt

**■ Adjustment of Foldable ROPS**

- Adjust free fall of the ROPS upper frame regularly.
- If you feel less friction when folding the ROPS, tighten the nut (1) until you feel the right friction in the movement.

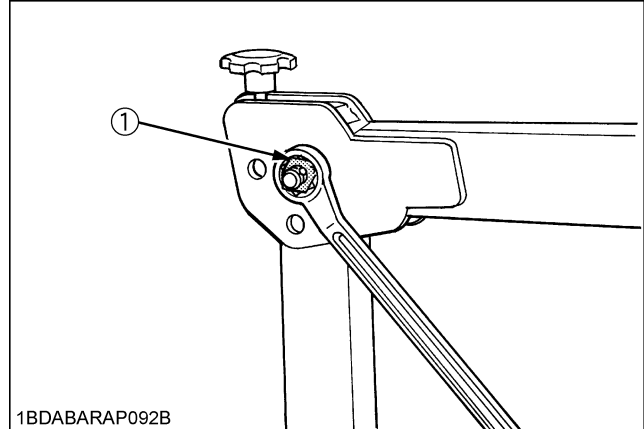

- (1) Nut


**■ Seat Belt**

**! WARNING**

To avoid serious injury or death:

- Always use the seat belt when the ROPS is installed.
- Do not use the seat belt if a foldable ROPS is down or there is no ROPS.

Adjust the seat belt for proper fit and connect to the buckle. The seat belt is the auto-locking retractable type.

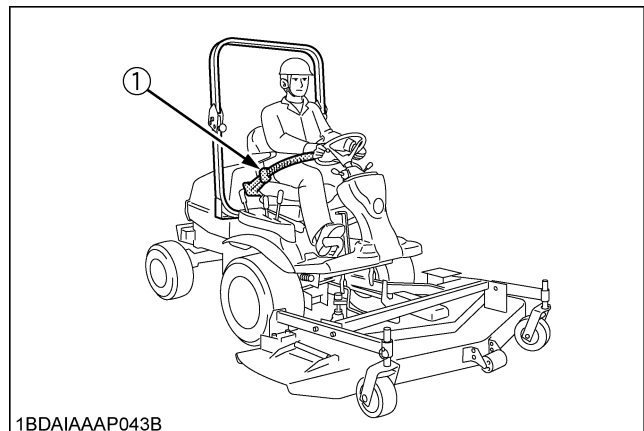

- (1) Seat belt