



- U.S.A. : **KUBOTA TRACTOR CORPORATION**
1000 Kubota Drive, Grapevine, TX 76051
Telephone : 888-4KUBOTA
- Canada : **KUBOTA CANADA LTD.**
5900 14th Avenue, Markham, Ontario, L3S 4K4, Canada
Telephone : (905)294-7477
- France : **KUBOTA EUROPE S.A.S**
19-25, Rue Jules Verceyusse, Z.I. BP88, 95101 Argenteuil Cedex, France
Telephone : (33)1-3426-3434
- Italy : **KUBOTA EUROPE S.A.S Italy Branch**
Via Grandi, 29 20068 Peschiera Borrome (MI) Italy
Telephone : (39)02-51650377
- Germany : **KUBOTA (DEUTSCHLAND) GmbH**
Senefelder Str. 3-5 63110 Rodgau /Nieder-Roden, Germany
Telephone : (49)6106-873-0
- U.K. : **KUBOTA (U.K.) LTD.**
Dormer Road, Thame, Oxfordshire, OX9 3UN, U.K.
Telephone : (44)1844-214500
- Spain : **KUBOTA ESPAÑA S.A.**
Avenida Recomba No.5, Poligno Industrial la Laguna, Leganes, 28914 (Madrid) Spain
Telephone : (34)91-508-6442
- Australia : **KUBOTA AUSTRALIA PTY LTD.**
25-29 Permas Way, Truganina, VIC 3029, Australia
Telephone : (61)-3-9394-4400
- Malaysia : **KUBOTA MALAYSIA SDN. BHD.**
No.3 Jalan Sepadu 25/123 Taman Perindustrian Axis,
Seksyen 25, 40400 Shah Alam, Selangor Darul Ehsan Malaysia
Telephone : (60)3-736-1388
- Philippines: **KUBOTA PHILIPPINES, INC.**
232 Quirino Highway, Baesa, Quezon City 1106, Philippines
Telephone : (63)2-422-3500
- Taiwan : **SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.**
16, Fengping 2nd Rd, Taliiao Shiang Kaohsiung 83107, Taiwan R.O.C.
Telephone : (886)7-702-2333
- Indonesia : **PT KUBOTA MACHINERY INDONESIA**
Tower A at EightyEight@Kasablanka Lantai 16
Jalan Raya Casablanka Kav. 88, Jakarta 12870 Indonesia
Telephone : (62)-21-29568-720
- Thailand : **SIAM KUBOTA CORPORATION CO., LTD.**
101/19-24 Moo 20, Navanakorn Industrial Estate, Tambon Khlongnueng, Amphur Khlongluang,
Pathumthani 12120, THAILAND
Telephone : (66)2-909-0300
- Korea : **KUBOTA KOREA CO., LTD.**
41-27, Jayumyeok-gil, Baeksan-myeon, Gimje-si, Jeollabuk-do, Korea
Telephone : (82)-63-544-5822
- India : **KUBOTA AGRICULTURAL MACHINERY INDIA PVT. LTD.**
No.15, Medavakkam Road, Sholinganallur, Chennai-600119, T.N., India
Telephone : (91)44-6104-1500
- Vietnam : **KUBOTA VIETNAM CO., LTD.**
Lot B-3A2-CN, My Phuoc 3 Industrial Park, Thoi Hoa Ward, Ben Cat Town, Binh Duong Province, Vietnam
Telephone : (84)-274-3577-507

KUBOTA Corporation


English, French, German (Europe)
Code No.
N° de code. K3655-6292-1
Code-Nr.

OPERATOR'S MANUAL KUBOTA FRONT MOWER - Original instructions -

MANUEL DE L'UTILISATEUR KUBOTA TONDEUSE FRONTALE - Traduction de la notice originale -

BEDIENUNGSANLEITUNG KUBOTA FRONTMÄHER - Übersetzung der Originalanleitung -

MODELS F2890E
MODELES F3090
MODELLE F3890

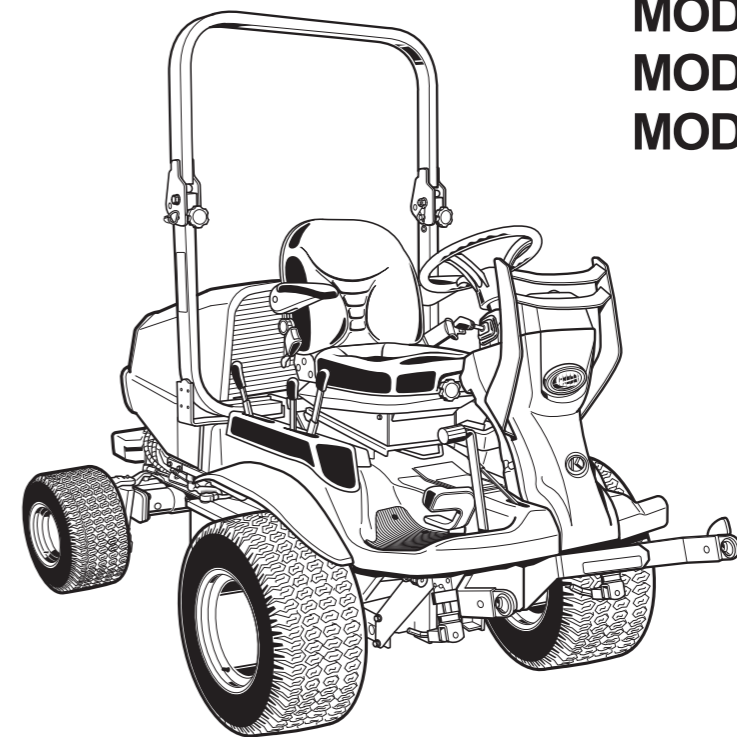

1BDIAZAP0010

F
2
8
9
0
E
·
F
3
0
9
0
·
F
3
8
9
0



KUBOTA Corporation C'EST ...

Depuis sa fondation en 1890, KUBOTA Corporation a progressé pour figurer au rang des plus grandes entreprises du Japon.

Pour parvenir à cette position, la Société a diversifié, au cours des années, la gamme de ses produits et services de façon remarquable. Aujourd'hui, 30 usines et 35.000 employés produisent plus de 1.000 articles et produits différents petits et grands.

Tous ces produits et les services qui en dépendent sont toutefois liés à un souci majeur:

KUBOTA fabrique des produits qui, pris à une échelle nationale sont des nécessités de base, produits indispensables, produits conçus pour aider les hommes et leurs nations à tirer parti du potentiel inhérent à leur environnement, KUBOTA est le géant des nécessités de base.

Ce potentiel inclut l'approvisionnement en eau, la production d'aliments tirés du sol et de la mer, le développement industriel, l'architecture, la construction et les transports.

Des milliers de personnes font confiance au savoir faire de KUBOTA, à sa technologie, à son expérience et à son service après vente, vous aussi pouvez faire confiance à KUBOTA.

KUBOTA ist ...

Seit der Firmengründung im Jahre 1890 ist KUBOTA zu einem der wichtigsten Unternehmen in Japan angewachsen.

Hierzu hat zum großen Teil die ständige Erweiterung der Produktpalette und das ständig wachsende Angebot an Dienstleistungen beigetragen. Heute werden von 35000 Beschäftigten in 30 Werken mehr als 1000 verschiedene Produkte hergestellt.

Das vorrangige Ziel von KUBOTA ist es, mit seinen Produkten und den dazugehörigen Dienstleistungen Grundbedürfnissen gerecht zu werden, auch auf internationaler Ebene.

Die von KUBOTA hergestellten Produkte sind unverzichtbar; sie helfen einzelnen Personen, sogar ganzen Nationen die örtlich gegebenen Möglichkeiten in Bereichen wie Wasserversorgung, Landwirtschaft, Fischerei, Industrie, Architektur, Bau- und Transportwesen bestmöglich auszuschöpfen. Tausende bauen auf KUBOTA -und Sie?

KUBOTA Corporation is ...

Since its inception in 1890, KUBOTA Corporation has grown to rank as one of the major firms in Japan.

To achieve this status, the company has through the years diversified the range of its products and services to a remarkable extent, until today, 30 plants and 35,000 employees produce over 1,000 different items, large and small.

All these products and all the services which accompany them, however, are unified by one central commitment. KUBOTA makes products which, taken on a national scale, are basic necessities. Products which are indispensable, products intended to help individuals and nations fulfill the potential inherent in their environment. For KUBOTA is the Basic Necessities Giant.

This potential includes water supply, food from the soil and from the sea, industrial development, architecture, construction and transportation.


Thousands of people depend on KUBOTA's know-how, technology, experience and customer service. You too can depend on KUBOTA.

OPERATOR'S MANUAL

ENGLISH

KUBOTA FRONT MOWER

MODELS F2890E
F3090
F3890

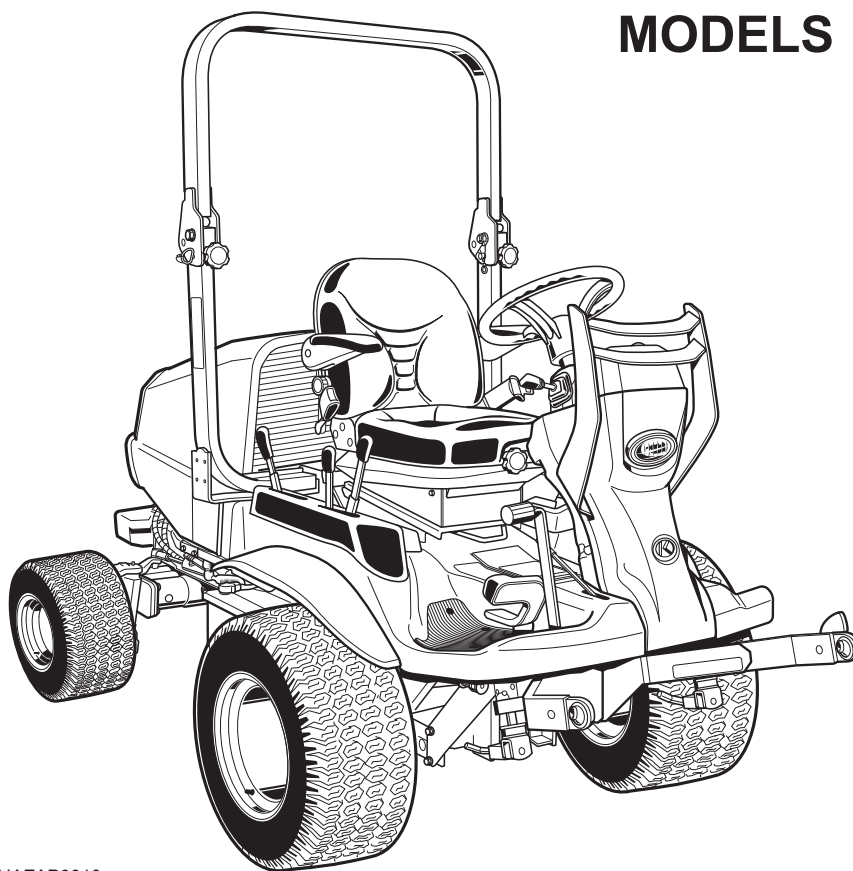

1BDAIAZAP0010

READ AND SAVE THIS MANUAL

Kubota

ABBREVIATION LIST

Abbreviations	Definitions
2WD	2 Wheel Drive
4WD	4 Wheel Drive
API	American Petroleum Institute
ASTM	American Society for Testing and Materials, USA
fpm	Feet Per Minute
Hi-Lo	High Speed-Low Speed
HST	Hydrostatic Transmission
m/s	Meters Per Second
PTO	Power Take Off
RH/LH	Right-hand and left-hand sides are determined by facing in the direction of forward travel
F&R	Front and rear sides are determined by facing in the direction of forward travel
ROPS	Roll-Over Protective Structures
rpm	Revolutions Per Minute
r/s	Revolutions Per Second
SAE	Society of Automotive Engineers, USA
SUPER UDT	KUBOTA Original Transmission hydraulic fluid

Intended use

This machine is designed solely for use in customary grass cutting operation. Use in any other way is considered as contrary to the intended use. Compliance with and strict adherence to the conditions of operation, service, and repair as specified by the manufacturer, also constitute essential elements of the intended use.

This machine should be operated, serviced, and repaired only by persons who are familiar with its particular characteristics and who are acquainted with the relevant safety procedures.















Accident prevention regulations, all other generally recognized regulations on safety and occupational medicine, and all road traffic regulations must be observed at all times.

Any arbitrary modifications carried out to this machine may relieve the manufacturer of liability for any resulting damage or injury.

manufacturer or distributor of the machine	Kubota Corporation
the model designation of the machine	F2890E, F3090, F3890
the name or type of publication	Operator's Manual
the part number or publication number by which the manual may be ordered	K3655-6292-1
the date of issue	26 June 2013
the publication date	6 November 2018
the language in which the manual is written	English

UNIVERSAL SYMBOLS

As a guide to the operation of your machine, various universal symbols have been utilized on the instruments panels and controls. The symbols are shown below with an indication of their meaning.

- | | |
|---|--|
|  Safety Alert Symbol |  Remote Cylinder-Retract |
|  Diesel Fuel |  Remote Cylinder-Extend |
|  Fuel-Level |  Steering Wheel-Tilt Control |
|  Engine-Rotational Speed |  Head Lights OFF |
|  Hourmeter/Elapsed Operating Hours |  Head Lights ON |
|  Engine Coolant-Temperature |  Fast |
|  Brake |  Slow |
|  Parking Brake |  Read Operator's Manual |
|  Battery Charging Condition |  Machine-Forward Movement-Overhead View of Machine |
|  Engine Oil-Pressure |  Machine-Rearward Movement-Overhead View of Machine |
|  Engine-Stop |  Engine Speed Control |
|  Engine-Run |  Neutral |
|  Diesel Preheat/Glow Plugs (Low Temperature Start Aid) |  Full Time 4WD
This position provides 4WD mechanically in any kind of the ground condition. |
|  Starter Control |  Dual-Acting Overrunning 4WD
This position provides 4WD automatically only when the ground speed dictate between front and rear wheels (forward and backward). |
|  Power Take-Off Control-Off Position (Disengaged) |  Master System Warning |
|  Power Take-Off Control-On Position (Engaged) | |
|  Differential Lock | |
|  Position Control-Raised Position | |
|  Position Control-Lowered Position | |

FOREWORD

You are now the proud owner of a KUBOTA FRONT MOWER. This machine is a product of KUBOTA's quality engineering and manufacturing. It is made of excellent materials and under a rigid quality control system. It will give you long, satisfactory service. To obtain the best use of your machine, please read this manual carefully. It will help you become familiar with the operation of the machine and contains many helpful hints about machine maintenance. It is KUBOTA's policy to utilize, as quickly as possible, every advance in our research. The immediate use of new techniques in the manufacturing of products may cause some small parts of this manual to become outdated. KUBOTA distributors and dealers will have the most up-to-date information. Please do not hesitate to consult them.

SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.



DANGER : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION : Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT : Indicates that equipment or property damage could result if instructions are not followed.

NOTE : Gives helpful information.

CONTENTS

▲ SAFE OPERATION	▲ -1
SERVICING OF MACHINE	1
SPECIFICATIONS.....	2
IMPLEMENT LIMITATIONS	4
INSTRUMENT PANEL AND CONTROLS.....	5
MOWER MOUNTING	6
MOUNTING THE MOWER	6
DISMOUNTING THE MOWER DECK	7
MOWER TILT UP.....	7
How To Tilt Up.....	7
How To Mount Another Implement.....	7
PRE-OPERATION CHECK	8
DAILY CHECK.....	8
OPERATING THE ENGINE.....	9
STARTING THE ENGINE	9
Key Switch.....	11
Cold Weather Starting	12
Block Heater (Option).....	12
STOPPING THE ENGINE.....	12
WARMING UP	12
Warm-up and Transmission Oil in the Low Temperature Range.....	12
Engine Stop Lever and Fuel Valve (Inside the Hood).....	13
JUMP STARTING	13
OPERATING THE MACHINE.....	15
OPERATING NEW MACHINE	15
Changing Lubricating Oil for New Machines.....	15
Engine Break-in	15
Machine Break-in.....	15
OPERATING FOLDABLE ROPS	16
To Fold the ROPS	16
To Raise the ROPS to Upright Position.....	17
Adjustment of Foldable ROPS.....	17
STARTING	18
Operator's Seat.....	18
Glove Box	18
Steering Wheel Tilt Lever	19
Seat Belt	19
Head Light Switch.....	19
Lift Link Lowering Speed Control Knob	20
Hydraulic Lift Lever	20
High-Low Gear Shift Lever	21
4WD Lock Lever	21
PTO Lever	22

Throttle Lever.....	22
Parking Brake	22
Speed Control Pedal.....	23
Differential Lock Pedal.....	23
STOPPING.....	23
Stopping.....	23
CHECK DURING DRIVING	24
Immediately Stop the Engine if:	24
Easy Checker (TM).....	24
LCD MONITOR	25
Fuel Gauge	25
Coolant Temperature Gauge	25
Hourmeter / Tachometer.....	26
Service Code Display	26
Overheat Alarm.....	26
PARKING	27
Parking.....	27
TRANSPORTING.....	27
Directions for Use of Power Steering.....	28
TIRES, WHEELS AND BALLAST.....	29
TIRES.....	29
Inflation Pressure.....	29
WHEELS	29
Front Wheels (Drive Wheels).....	29
Rear Wheels (Steering Wheels)	30
BALLAST	30
MAINTENANCE.....	31
SERVICE INTERVALS	31
PERIODIC SERVICE CHART LABEL	33
LUBRICANTS, FUEL AND COOLANT	35
PERIODIC SERVICE.....	37
HOW TO OPEN THE HOOD	37
DAILY CHECK	37
Checking Seat Belt and ROPS	38
Checking Engine Oil Level.....	38
Checking Amount of Fuel and Refueling	39
Checking and Cleaning Radiator Screen and Bonnet Screen to Prevent Overheating..	40
Checking Tire Pressure	41
Checking Transmission Fluid Level	41
Checking Coolant Level.....	42
Checking Movable Parts.....	42
EVERY 50 HOURS	43
Checking Engine Start System	43
Checking OPC System.....	44
Lubricating All Grease Fittings.....	44
Oiling.....	46
Checking Wheel Bolt Torque	46
EVERY 100 HOURS	47
Checking Battery Condition	47

Cleaning Air Cleaner Element	48
Checking Fuel Filter.....	49
Checking and Adjusting Brake Pedal	50
Checking Fan Drive Belt Tension	51
EVERY 200 HOURS	51
Changing Engine Oil.....	51
Replacing Engine Oil Filter Cartridge	52
Replacing Transmission Oil Filter Cartridge	52
EVERY 400 HOURS	53
Changing Transmission Fluid	53
Cleaning Transmission Strainer.....	54
Changing Rear Axle Differential Case Fluid [4WD]	54
Changing Rear Axle Gear Case Fluid [4WD]	55
Adjusting Rear Axle Pivot	55
Replacing Fuel Filter.....	55
EVERY 800 HOURS	56
Adjusting Engine Valve Clearance	56
EVERY 1000 HOURS or EVERY 1 YEAR.....	56
Replacing Air Cleaner Primary Element and Secondary Element.....	56
EVERY 1500 HOURS	56
Checking Fuel Injection Nozzle (Injection Pressure).....	56
EVERY 2000 HOURS or EVERY 2 YEARS	56
Flush Cooling System and Changing Coolant.....	56
Anti-freeze	57
EVERY 3000 HOURS	57
Checking Injection Pump.....	57
EVERY 1 YEAR	58
Checking Radiator Hose and Clamp	58
Checking Hydraulic Hose	58
Checking Fuel Lines	59
Checking Intake Air Line.....	59
Checking Engine Breather Hose	59
EVERY 4 YEARS.....	59
Replacing Hydraulic Hose	59
Replacing Fuel Lines	59
Replacing Engine Breather Hose	59
Replacing Radiator Hose.....	59
Replacing Intake Air Line.....	59
SERVICE AS REQUIRED.....	60
Replacing Fuses.....	60
Replacing Light Bulb.....	61
Bleeding Fuel System.....	61
Adjusting Lift Springs (LH & RH)	62
STORAGE	63
TROUBLESHOOTING.....	64
ENGINE TROUBLESHOOTING	64
POWER TRAIN TROUBLE SHOOTING.....	65
BATTERY TROUBLESHOOTING	66
MACHINE TROUBLESHOOTING	67

CONTENTS

APPENDIX.....	68
SOUND AND VIBRATION MEASUREMENTS.....	68
INDEX.....	69



SAFE OPERATION

Careful operation is your best insurance against an accident. Read and understand this section carefully before operation. All operators, no matter how experienced they may be, should read this and other related manuals before operation of the machine or any implement attached to it. It is the owner's obligation to instruct all operators in safe operation.

This cutting machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

1. BEFORE OPERATING

1. Know your equipment and its limitations. Read, understand and follow all instructions in this manual before attempting to start and operate the machine.
2. Pay special attention to the safety labels on the machine and mower.
3. KUBOTA recommends the use of a Roll Over Protective Structures (ROPS) and seat belt in almost all applications. This combination will reduce the risk of serious injury or death, should the machine be upset.


The machine is equipped with a foldable ROPS, which may be temporarily folded down only when absolutely necessary for areas with height constraints.

(There is no operator protection provided by the ROPS in the folded position. For operator safety the ROPS should be placed in the upright and locked position and the seat belt fastened for all other operations.)

If the ROPS is loosened or removed for any reason, make sure that all parts are reinstalled correctly before operating the machine.

Never modify or repair a ROPS because welding, bending, drilling, grinding, or cutting may weaken the structure.

If any structural member of the ROPS is damaged, replace the entire structure at your local KUBOTA Dealer.

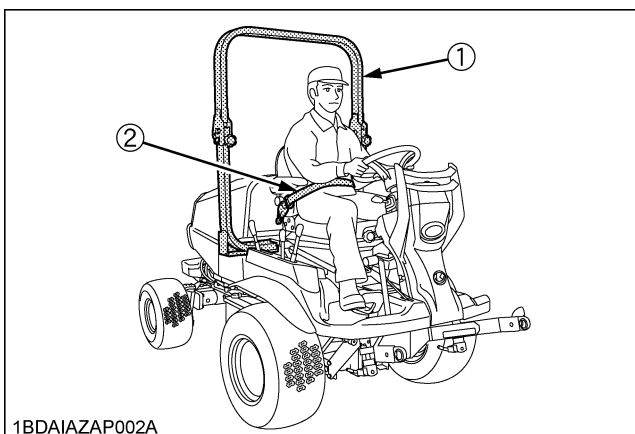

1BDAIAZAP002A

- (1) ROPS
(2) Seat belt

4. Always use the seat belt when the ROPS is upright. Do not use the seat belt without a ROPS being upright. Check the seat belt regularly and replace if frayed or damaged.
5. Never wear loose, torn, or bulky clothing. It may catch on moving parts or controls, leading to the risk of accident. Safety boots or shoes, eye and hearing protection, gloves, dust mask, etc. are recommended.
6. Do not wear radio or music headphones while operating the machine.
Safe operation requires your full attention.
7. Carefully check the vicinity before operating machine or any implement attached to it. Clear the work area of objects (wires, rocks, etc.) that might be picked up and thrown. Check for overhead clearance which may interfere with a ROPS.
8. Do not operate machine or any implement attached to it while under the influence of alcohol, drugs, or other substances or while fatigued.
9. Check brakes, and other mechanical parts for faulty adjustment and wear. Replace worn or damaged parts promptly. Check the tightness of all nuts and bolts regularly. (For further details, see "MAINTENANCE" section.)
10. Keep the machine and attachments in good operating condition and keep safety devices in place and in proper working condition.
11. Do not modify the machine. Unauthorized modification may affect the function of the machine, which may result in personal injury.
12. Keep all shields and guards in place. Replace all missing or damaged items for your safety.
13. Never allow any bystanders around or near machine during operation.
Be sure the area is clear of other people before mowing.
Stop machine if anyone enters the area.
14. Before allowing other people to use your machine, explain proper operation to them and have them read this manual before operation.
15. Never allow passengers or non-qualified operators on the machine at any time. You must operate the machine from the seat only.
16. In addition to the design and configuration of equipment, hazard control and accident prevention are dependent on the awareness, concern, and prudence of personnel involved in the operation, transport, maintenance of facilities.

▲-2 SAFE OPERATION

17. Keep your machine clean. Dirt, grease, and trash accumulations may contribute to fires or lead to personal injury.
18. Use only attachments recommended by KUBOTA. Use proper ballast to front or rear of machine to reduce the risk of upsets. Follow the "Safe Operation" procedures, specified in the Equipment's Manual.

2. OPERATING

◆ Starting

1. Never start the engine or operate levers from anywhere other than the seat.
2. Before starting the engine make sure that all levers and speed control pedal are in neutral, the parking brake is engaged, and Power Take Off (PTO) is disengaged.
Fasten the seat belt if the ROPS is upright.
3. Do not start the engine while tilting the deck.
4. Do not start the engine by shorting across starter terminals or by bypassing the safety start switch. The machine may start and move if normal starting circuitry is bypassed.
5. Do not operate or idle engine in a poorly ventilated area. Exhaust gas contains carbon monoxide, a colorless, odorless gas they can be poisonous if not properly ventilated.

◆ Working

1. Watch where you are going at all times. Watch for and avoid obstacles. Be alert near trees and other obstructions.
2. To avoid tip over, slow down when turning on uneven terrain or before stopping.
3. Park the machine on a firm, level surface.
4. Do not drive at high speeds or turn the machine when the differential is locked.
5. Know what is behind you before backing up. Look to the rear before and while backing up. Do not mow while in reverse unless absolutely necessary and make sure the area immediately behind you is clear of obstructions or holes and small children. Use extra caution when the machine is equipped with the grass catcher. Your view to the rear is restricted.
6. When working in groups, always let others know what you are doing ahead of time.
7. Do not drive the machine on streets or highways. Watch for traffic when you cross roads or operate near roads.
8. Be aware of the mower discharge direction and do not point it at anyone.
9. When using any attachments, never direct discharge material toward bystanders. Do not allow anyone near the attachments while in operation.
Do not mow when bystanders are present in the mowing area.
10. To reduce fire hazards, keep the engine exhaust area free of debris.

11. Be sure rotating blades and engine are stopped and the key is removed before placing hands or feet near blades and cleaning blockages or unclogging chute.
12. Shut the engine off and wait for all movement to stop before unclogging the chute of the grass catcher. [if equipped]
13. Always inspect the mower and the grass catcher [if equipped] after striking any foreign object. This will insure that all mower and grass catcher parts are safe and secure and not damaged.
Repair or replace any damaged parts before re-starting.
14. Operate during daylight or in bright artificial light.
15. Do not operate the mower without either the grass container or the guard in place.
Be aware of the mower discharge direction and do not point it at anyone.
16. Stop the blades rotating before crossing surface other than grass.
17. Do not operate where machine could tip or slip.
Do not operate near ditches, holes, embankments, or other terrain which may collapse under the machine's weight. The risk of machine tip-over is increased when the ground is loose or wet.
18. If the machine starts to vibrate abnormally, disengage the drive to the attachments, stop the engine and remove the key. Then check the machine immediately.
19. Do not operate the machine when there is a possibility of lightning. Even if the machine is equipped with a cabin, the operator is not protected from lightning.

◆ Operation on slopes

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it. The control of a ride-on machine sliding on a slope will not be regained by the application of the brake.

- Do not lift the grass container on a slope. [if equipped]

DO

1. To avoid tip over, operate up and down slowly, not across. Stay off hills and slopes too steep for safe operation.
2. Remove obstacles such as rocks, tree limbs, etc.
3. Stay alert for holes in the terrain and other hidden hazards. Keep away from drop-offs. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
4. Follow KUBOTA's recommendations for wheel weights or counterweights to improve stability.
5. The weight of grass in the grass container may increase the possibility of tip over. [if equipped]
6. Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction.

7. Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly straight down the slope.
8. Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tip-over or loss of control.
9. Use special caution when changing direction on slopes.
10. Shift "High - Low Gear Shift Lever" to the Low position when mowing or operating on slopes.

DO NOT

1. Do not turn on slopes unless necessary and then turn slowly and gradually downhill, if possible.
2. Do not use the machine on slopes of more than 15°.
3. Do not mow near drop-offs, ditches, or embankments. The machine could suddenly turn over if a wheel falls over the edge of a cliff or ditch, or if an edge caves in.
4. Do not mow on wet grass. Reduced traction could cause sliding.
5. Do not try to stabilize the machine by putting your foot on the ground.
6. Do not use the grass catcher on steep slopes. [if equipped]
7. Do not stop or start suddenly when going uphill or downhill.
8. Never "freewheel". Do not let the machine travel downhill with HST pedal at neutral position.
9. Do not use the trailer and the towing implement.

◆ Children

Tragic accidents can occur if the operator is not alert to the presence of children. Children are attracted to the machine and the mowing activity. Never assume that children will remain where you last saw them.

1. Keep children out of the mowing area and under the watchful care of another responsible adult.
2. Be alert and turn the machine off if children enter the area.
3. Before and when backing, look behind and down for small children.
4. Never carry children. They may fall off and be seriously injured or interfere with safe machine operation.
5. Never allow children to operate the machine, even under adult supervision. Local regulation can restrict the age of the operator.
6. Use extra care when approaching blind corners, shrubs, trees, or other obstructions that might hide children from sight.

◆ Operators, age 60 years and above

Data indicates that operators, age 60 years and above, are involved in a large percentage of machine-related injuries. These operators should evaluate their ability to operate the machine safely enough to protect themselves and others from serious injury.

◆ Stopping


1. Make sure that the machine and all attachments have come to complete stop before dismounting.
2. Before dismounting, disengage the PTO, lower all implements, place all control levers in their neutral positions, apply parking brake, turn off the engine and remove the key.
3. Do not park the machine on a steep incline. Park on relatively flat areas.

3. USING THE PTO

1. Before installing or using PTO-driven equipment, read the manufacturer's manual and review the safety labels attached to the equipment.
2. Wait until all moving components have completely stopped before connecting, disconnecting, adjusting, cleaning, or servicing any PTO-driven equipment.
3. Use the PTO with KUBOTA approved attachments. The speed of the PTO
F2890E, F3090, F3890: 2545 min⁻¹ (rpm) at engine revolution 3000 min⁻¹ (rpm)

4. USING THE LIFT LINK

1. Use lift link only with authorized attachments designed for lift link usage.
2. When using a lift link mounted attachment, be sure to install the adequate counter ballast weight specified in the attachment's manual.
3. When moving the machine a long distance, set the implement lowering control in the "LOCK" position to hold the implement in the raised position.
4. Do not turn the knob quickly.

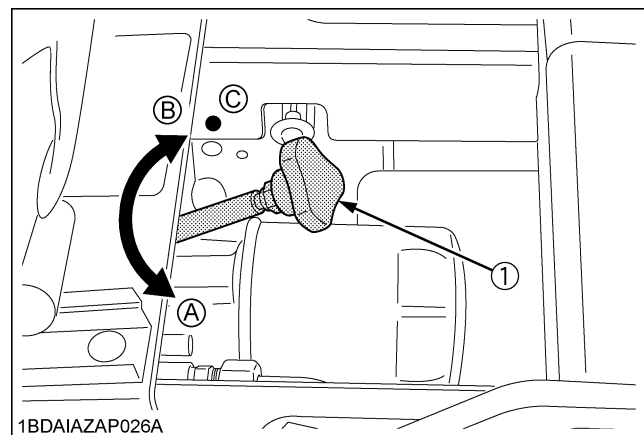


- (1) Lift link lowering speed control knob
 (A) "FAST": Turn counterclockwise slowly
 (B) "SLOW": Turn clockwise
 (C) "LOCK": Turn clockwise to the end

5. TRANSPORTING

1. Disengage power to attachment(s) when transporting or not in use.
2. Do not tow this machine. Use a suitable truck or trailer when transporting on public roads.
3. It is recommended that this machine not be used on public roads.
4. Use extra care when loading or unloading the machine into a trailer or truck.
5. Keep attachment(s) low when transporting.
6. Move very slowly when attachment is removed.

6. SERVICING


1. Before servicing the machine, park the machine on a firm, level surface, set the parking brake, stop the engine and remove the key.
2. Allow the machine to cool off before servicing the engine, muffler, etc.
3. Always stop the engine before refueling. Avoid spills and overfilling. Wipe up spilled fuel immediately.

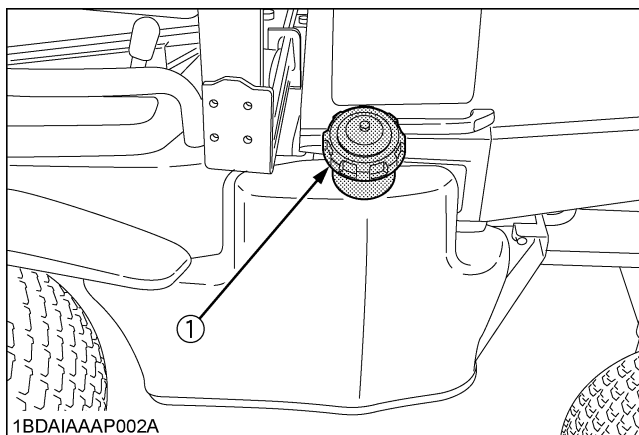

(1) Fuel tank cap

4. Use extra care in handling diesel fuel.
 - (1) Use only an approved container.
 - (2) Do not remove fuel cap or refuel with the engine running. Allow engine to cool before refueling. Do not smoke while refueling or when standing near fuel.
 - (3) Do not refuel the machine indoors and always clean up spilled fuel or oil.
 - (4) Do not store the machine or fuel container inside where there is an open flame, such as a water heater.
5. Do not smoke when working around the battery. Keep all sparks and flames away from battery. The battery presents an explosion hazard because it gives off hydrogen and oxygen...especially when recharging.


6. Before "JUMP STARTING" a dead battery, read and follow all of the instructions to help protect the alternator from damage due to extreme load changes. (See "JUMP STARTING" in "OPERATING THE ENGINE" section.)
Batteries contain sulfuric acid and produce explosive gases. Follow the instructions below to prevent personal injury.
 - Wear eye and skin protection.
 - Keep sparks and flame away.
 - Always have adequate ventilation while charging or using the battery.
7. Keep first aid kit and fire extinguisher available at all times.
8. Disconnect the battery's negative (-) cable before working on or near electric components.
9. Do not use or charge the refillable type battery if the fluid level is below the LOWER (lower limit level) mark. Otherwise, the battery component parts may prematurely deteriorate, which may shorten the battery's service life or cause an explosion. Check the fluid level regularly and add distilled water as required so that the fluid level is between the UPPER and LOWER levels.
10. To avoid sparks from an accidental short circuit, always disconnect the battery's negative (-) cable first and connect it last.

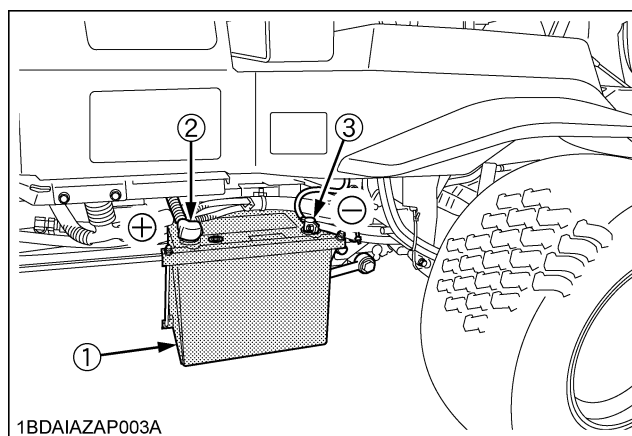


(1) Battery
(2) Positive cable (+)
(3) Negative cable (-)

11. Do not remove the radiator cap while coolant is hot. When cool, slowly rotate cap to the first stop and allow sufficient time for excess pressure to escape before removing the cap completely. If the machine has a coolant recovery tank, add coolant there instead of the radiator.
12. Provide adequate support when changing wheels or the wheel.
13. Make sure that wheel nuts have been tightened to the specified torque.
14. Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.

15. Always maintain the correct tire inflation pressure. Do not inflate tires above the recommended pressure shown in the Operator's Manual.

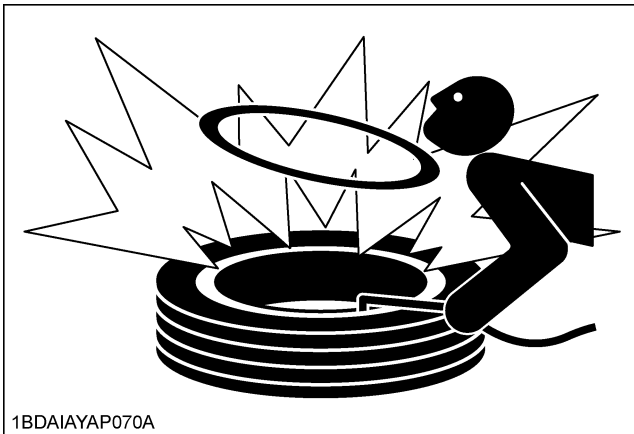


16. Securely support the machine when changing wheels.
 17. Make sure that wheel bolts have been tightened to the specified torque.
 18. Escaping hydraulic fluid under pressure has sufficient force to penetrate the skin causing serious personal injury. Before disconnecting lines, be sure to relieve all pressure. Before applying pressure to the system, make sure all connections are tight and that lines, pipes, and hoses are not damaged.

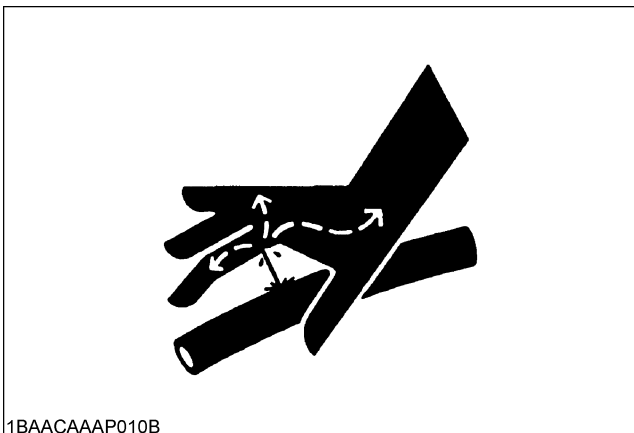

19. Fluid escaping from pinholes may be invisible. Use a piece of cardboard or wood to search for suspected leaks: do not use hands. Use safety goggles or other eye protection.

If injured by escaping fluid, see a medical doctor at once. Serious infection or reaction will result if proper medical treatment is not administered immediately. This fluid can produce gangrene or severe allergic reaction.

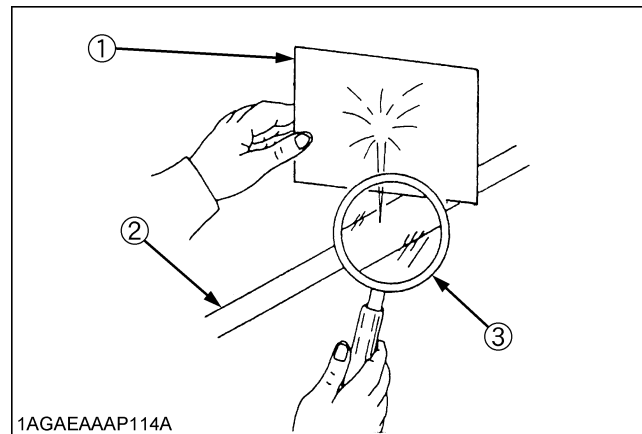


- (1) Cardboard
 (2) Hydraulic line
 (3) Magnifying glass

20. Do not make adjustments or repairs with the engine running.
 21. Keep machine free of grass, leaves, or other debris build-up.
 22. Do not run a machine inside a closed area.
 23. Waste products such as used oil, fuel, hydraulic fluid, and batteries, can harm the environment, people, pets and wildlife. Please dispose properly.
 See your local Recycling Center or KUBOTA Dealer to learn how to recycle or get rid of waste products.


7. STORAGE

1. Keep the machine and fuel supply in a secure area and remove the key to prevent children or others from playing or tampering with them.
2. Do not store the machine in an area that may ignite fuel vapor. Allow the engine to cool before storing.
3. To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without adequate ventilation.
4. To reduce fire hazards, clean the machine thoroughly before storage. Dry grass and leaves around the engine and mufflers may ignite.

8. PICTORIAL SAFETY LABELS

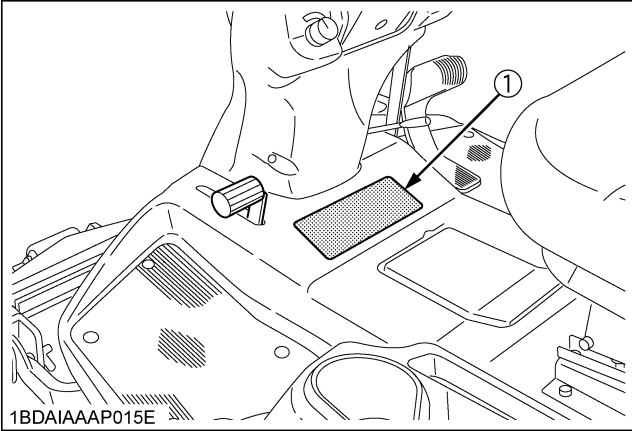


(1) Part No. K3655-4717-2

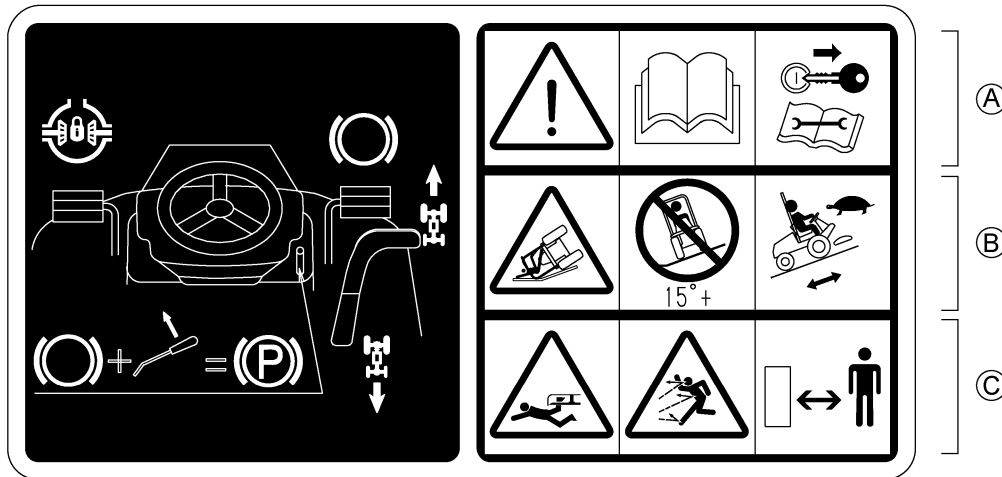


1BDAIAZAP041A

TO AVOID INJURY OR DEATH:


- (A)
 - Read and understand Operator's Manual.
 - Stop the engine and remove key before servicing.
- (B)
 - DO NOT operate where machine could slip or tip.
 - DO NOT operate on slopes of more than 15°.
 - Mow up and down slopes, not across.
- (C)
 - DO NOT allow any bystanders or children around or near machine at any time when the engine is running.

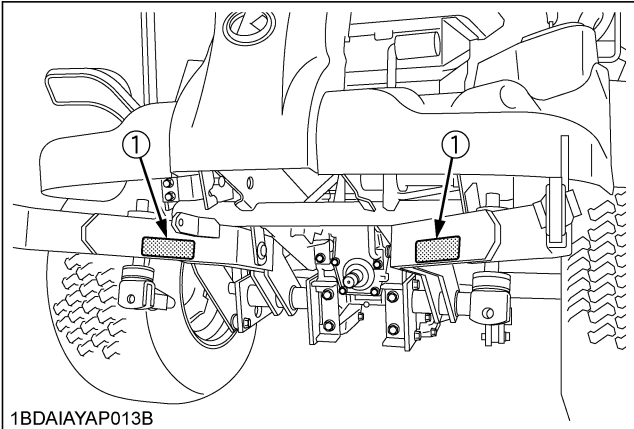

1BDAIAYAP013B

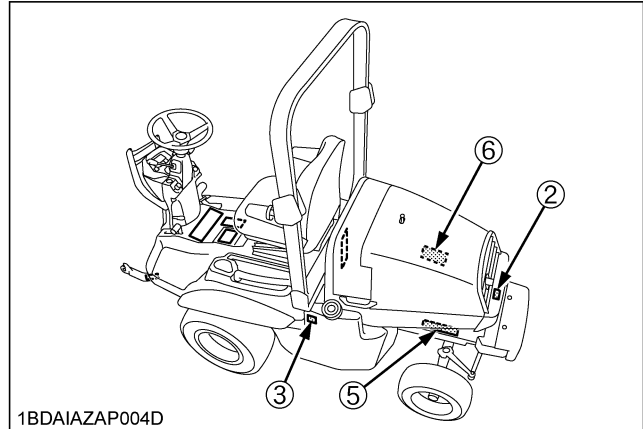

1BDAIAZAP004D

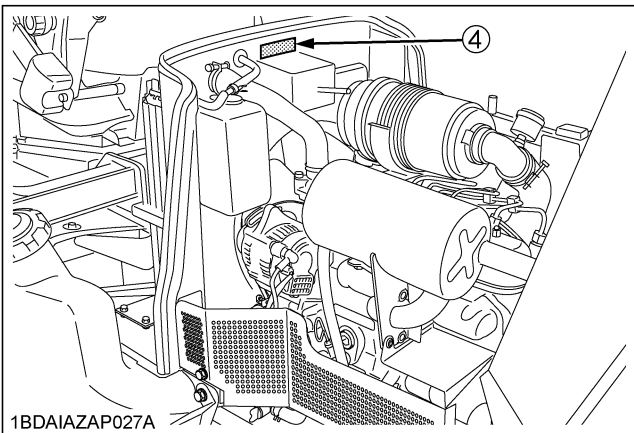

1BDAIAZAP027A

(1) Part No. K3512-4721-1
 This arm can spring up upward.
 See operator's manual when
 disassembling



1BDAIAEAP013B

(2) Part No. K3512-4719-1
HOT SURFACE
DO NOT TOUCH




1BDABANAP080B

(3) Part No. K3611-4741-1
Diesel fuel No fire
only




1BDAHADAP0300

(4) Part No. K3601-4746-1
Stay clear of engine
fan and fan belt.

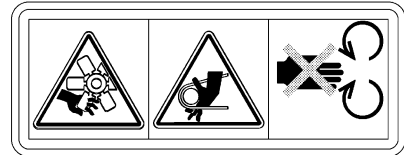

1AGAJAXAP052E

(5) Part No. K3512-4718-1

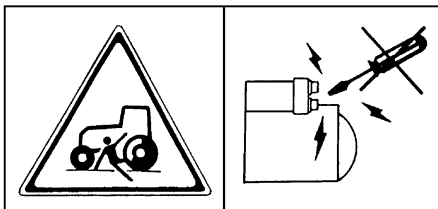


1BDABANAP083B

TO AVOID MACHINE RUNAWAY:


- DO NOT start engine by shorting across starter terminals or bypassing the safety start switch.

1BDAIAZAP024A

(6) Part No. K3653-4719-1 (Engine)
 Do not touch hot surface like muffler, etc.

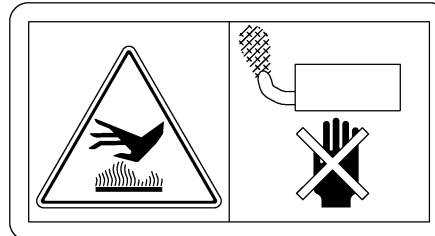

1BDAIAEAP023A

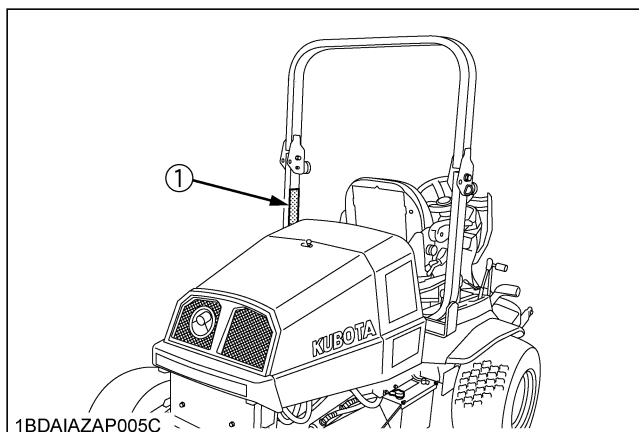

(1) Part No. K3655-4785-1




1BDAIAZAP022A
1BDAIAZAP025A

TO AVOID PERSONAL INJURY OR DEATH FROM ROLL-OVER:

1. Keep Roll-Over Protective Structures (ROPS) in the upright and locked position.
2. Fasten SEAT BELT before operating.

THERE IS NO OPERATOR PROTECTION WHEN THE ROPS IS IN THE FOLDED POSITION.

1. Check the operating area and fold the ROPS only when absolutely necessary.
2. Do not wear SEAT BELT if ROPS is folded.
3. Raise and lock ROPS as soon as vertical clearance allows.
4. Read ROPS related instructions and warnings.

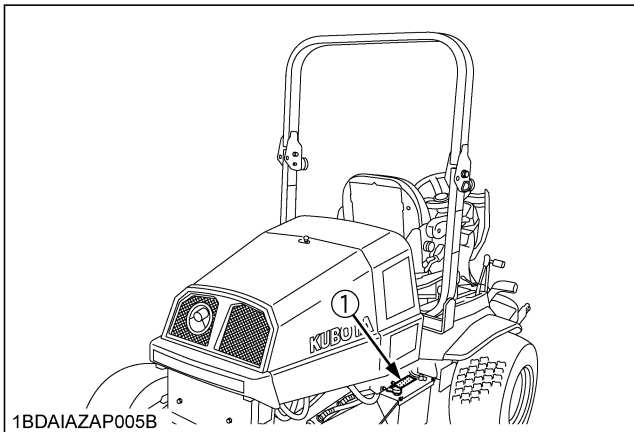

1BDAIAZAP005B

(1) Part No. TD060-3012-4

 FLAMMABLES	 SHIELD EYES	 KEEP OUT OF THE REACH OF CHILDREN	 CAUTIOUS OF SULFURIC ACID	 READ INSTRUCTION MANUAL CAREFULLY	 EXPLOSIVE
<p>• DUE TO HYDROGEN GAS GENERATED FROM BATTERY, HANDLING WITHOUT CARE CAN CAUSE FIRE AND EXPLOSION.</p> <p>• THIS 12V BATTERY IS ONLY FOR STARTING ENGINE. DO NOT APPLY THIS PRODUCT FOR OTHER USES.</p> <p>• CHARGE THIS BATTERY ONLY AT WELL VENTILATED PLACES, AND AVOID SHORTS OR SPARKS.</p> <p>• REFER TO THE INSTRUCTION MANUAL OF VEHICLE OR BATTERY BEFORE USING BOOSTER CABLE.</p> <p>SULFURIC ACID MAY CAUSE BLINDNESS OR SEVERE BURN. IN CASE EYES, SKIN, CLOTHES OR ANY ARTICLES ARE STAINED WITH ACID, FLUSH OBJECTS IMMEDIATELY WITH WATER. IF ACID BEING SWALLOWED, DRINK PLENTY OF WATER PROMPTLY. IN CASE OF ACCIDENTAL CONTACT, CONSULT A DOCTOR IMMEDIATELY.</p> <p>• BATTERY FILLED WITH ACID (DO NOT TILT OR SPILL) • FLAMMABLE. DO NOT CHARGE NEAR FIRE OR SPARKS</p> <p>• DO NOT CHARGE RAPIDLY • DO NOT DISASSEMBLE THE BATTERY (SEALED TYPE)</p>					
<p>DANGER</p>					
<p>DANGER EXPLOSIVE GASES Cigarettes, flames or sparks could cause battery to explode. Always shield eyes and face from battery. Do not charge or use booster cables or adjust post connections without proper instruction and training.</p> <p>POISON CAUSES SEVERE BURNS Contains sulfuric acid. Avoid contact with skin, eyes or clothing. In event of accident flush with water and call a physician immediately.</p> <p>KEEP OUT OF REACH OF CHILDREN</p>					
<p>S.O.C Indicator OK Charge Replace</p>					
<p>CALIFORNIA PROPOSITION 65 WARNING: THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING LEAD, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNINGS.CA.GOV</p>					
<p>80D26R 582CCA (SAE) 550CCA (EN) 12V 70Ah(20HR) RC 133(MIN)</p>					
<p>LEAD RECYCLE DK103025</p>					

1AGAXAAP167A

TO AVOID INJURY FROM BATTERY GASES AND ACIDES

- Keep away cigarettes, flames or sparks.
- Always shield eyes and face from battery.
- Keep out of reach of children.
- Poison causes severe burns.
• Contains sulfuric acid.
- Read and understand operator's manual.
- Danger explosive gases.

1BDAIAEAP0200

1BDAIAZAP017A


9. CARE OF PICTORIAL SAFETY LABELS

1. Keep pictorial safety labels clean and free from obstructing material.
 2. Clean pictorial safety labels with soap and water, dry with a soft cloth.
 3. Replace damaged or missing pictorial safety labels with new labels from your local KUBOTA Dealer.
 4. If a component with pictorial safety label(s) affixed is replaced with new part, make sure new label(s) is (are) attached in the same location(s) as the replaced component.
 5. Mount new pictorial safety labels by applying on a clean dry surface and pressing any bubbles to outside edge.
-

SERVICING OF MACHINE

After reading this manual thoroughly, you will find that you can do some of the regular maintenance yourself. Your dealer is interested in helping you get the best performance from your new machine and wants to help you get the most value from it. When in need of parts or major service, be sure to see your local KUBOTA Dealer. When in need of parts, be prepared to give your dealer the serial number of the machine, ROPS and engine. Locate the serial numbers now and record them in the space provided.

	Type	Serial No.
Machine		
Engine		
ROPS		
Date of Purchase		
Name of Dealer		
(To be filled in by purchaser)		

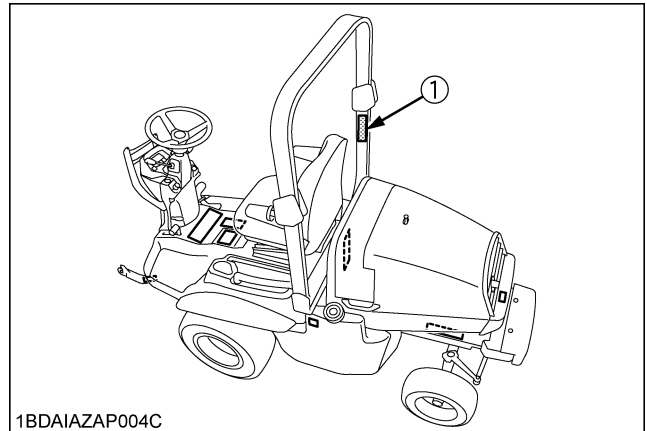

1BDIAIAZAP004C


(1) ROPS serial No.

◆ **Warranty**

This machine is warranted under the Kubota Limited Express warranty, a copy of which may be obtained from your selling dealer. No warranty shall, however, apply if the machine has not been handled according to the instruction given in the Operator's Manual even it is within the warranty period.

◆ **Scrapping the machine and its procedure**

To put the machine out of service, correctly follow the local rules and regulations of the country or territory where you scrap it. If you have questions, consult your local KUBOTA Dealer.

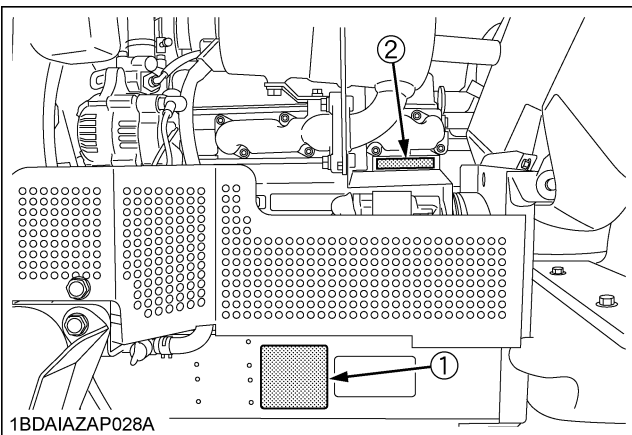

1BDIAIAZAP028A

(1) Machine serial No.

(2) Engine serial No.

SPECIFICATIONS

		Model	F2890E	F3090	F3890	
Engine	Model		D1105	D1305	V1505	
	Engine gross power (SAE) *1		kW (PS)	20.6 (28)	22.4 (30)	27.8 (38)
	Type		Indirect Injection. Vertical water - cooled, 4 cycle diesel			
	Number of cylinders		3		4	
	Bore and stroke		mm	78 x 78.4	78 x 88	78 x 78.4
	Total displacement		cm ³	1123	1261	1498
	Maximum revolution		min ⁻¹ (rpm)	3100 to 3200		
	Rated revolution		min ⁻¹ (rpm)	3000		
	Low idling revolution		min ⁻¹ (rpm)	1300 to 1400		
	Fuel		Diesel fuel No.1 [below -10 °C] Diesel fuel No.2			
	Starter		Electric starter with battery, glow plug, 12 V, 1.4 kW			
	Lubrication		Forced lubrication by gear pump			
	Cooling		Liquid with pressurized radiator			
	Battery		12 V, RC: 133 min, CCA: 582 A			
Capacities	Fuel tank		L	61		
	Engine crankcase (with filter) *3		L	3.5	5.1	5.0
	Engine coolant		L	4.6		
	Recovery tank		L	0.6		
	Transmission case		L	14		
	Rear axle differential case		L	1.5		
	Rear axle gear case		L	0.5		
Dimensions	Overall length		mm	2450		
	Overall width		mm	1370		
	Overall height	Without ROPS		mm	1350	
		With ROPS		mm	1985	
	Wheelbase		mm	1300		
	Min. ground clearance		mm	185		
	Tread	Front		mm	1063	
Rear		mm	1020			
Weight (W/O FUEL, W/O MOWER DECK)		kg	720	765	775	

		Model		F2890E	F3090	F3890	
Traveling system	Tires	Front		23 x 10.5 - 12 (4PR) Turf	24 x 12 - 12 (4PR) Turf		
		Rear		16 x 6.5 - 8 (4PR) Turf	18 x 9.5 - 8 (6PR) Turf		
	Traveling speeds *2	Forward	Low	0 to 9 km/h			
			High	0 to 20 km/h			
		Reverse	Low	0 to 4.8 km/h			
			High	0 to 11 km/h			
	Steering			Power, hydrostatic			
	Transmission			Main - hydrostatic transmission. High - Low gear shift (2 forward, 2 reverse)			
	Brake			Wet disk type			
	Min. turning radius		mm	≤ 750 (Inside of Front Tire)			
	Differential	Front		Bevel gear			
Rear		-	Bevel gear				
4WD system			-	Dual - Acting Overrunning 4WD			
PTO	Revolution *2			1 speed (2545 min ⁻¹ (rpm))			
	Drive system			Shaft drive. KUBOTA 10 tooth involute spline (2545 min ⁻¹ (rpm))			
	Clutch type			Wet multi plates			
	PTO brake			Wet single plate			

(Specifications and design subject to change without notice)

NOTE:

*1 Manufacture's estimate


*2 At engine revolution 3000 min⁻¹ (rpm)

*3 Oil amount when the oil level is at the center of the oil level gauge

IMPLEMENT LIMITATIONS

The KUBOTA Machine has been thoroughly tested for proper performance with implements sold or approved by KUBOTA. Use of implements which exceed the maximum loading weight listed below, or which are not recommended for use with the KUBOTA Machine may result in malfunctions or failures of the machine, damage to other property and injury to the operator or others. (Any malfunctions or failures of the machine resulting from use with improper implements are not covered by the warranty.)


	Maximum loading weight		Lift link end maximum loading weight W_o	Maximum total weight
	Front axle W_f	Rear axle W_r		
F2890E F3090 F3890	900 kg	600 kg	260 kg	1500 kg

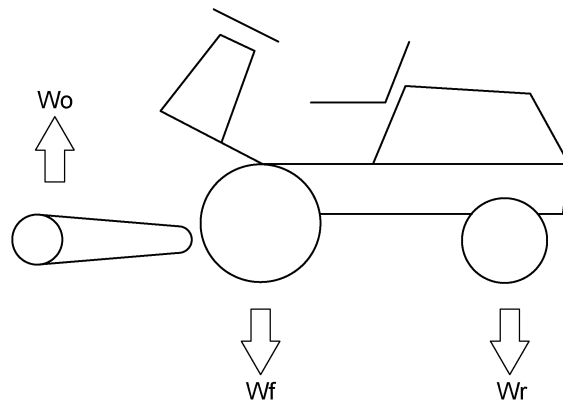

1BDAIAAAP005A

INSTRUMENT PANEL AND CONTROLS

ENGLISH

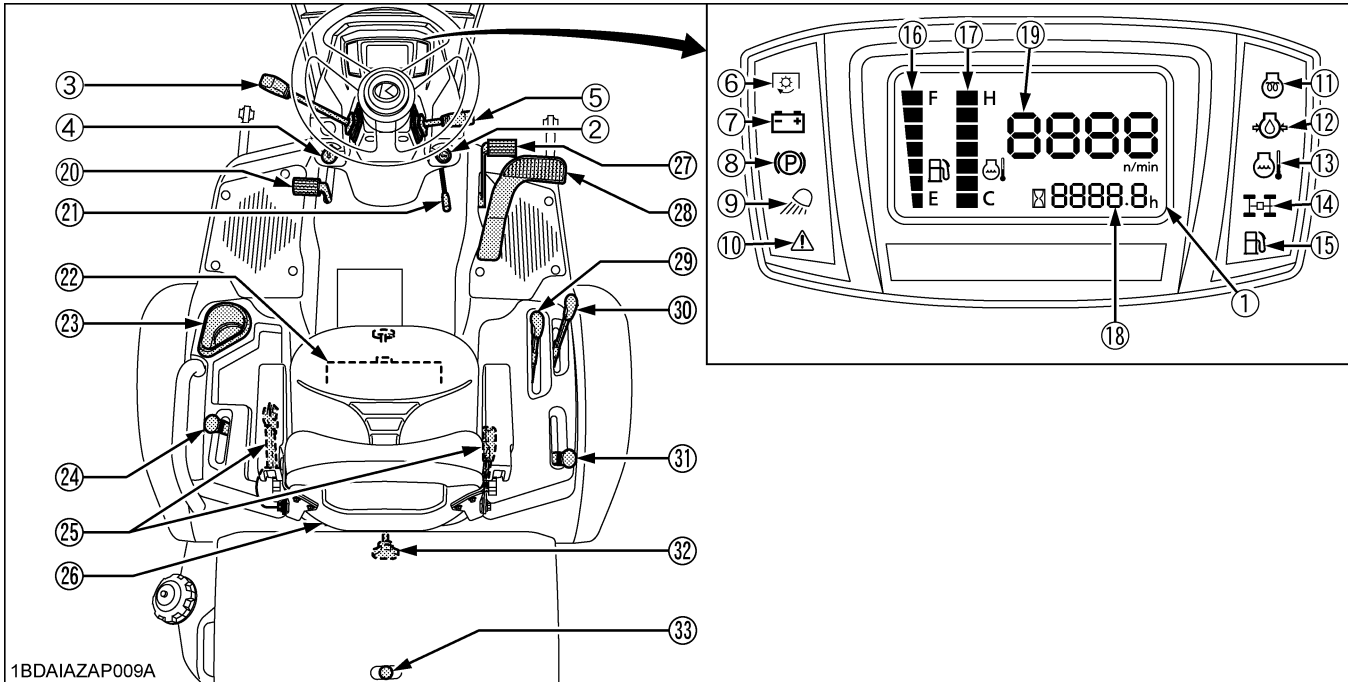

ILLUSTRATED CONTENTS

INSTRUMENT PANEL, SWITCHES and HAND CONTROLS

(1) Liquid crystal display.....	25
(2) Key switch.....	11
(3) Throttle lever.....	22
(4) Head light switch.....	19
(5) Steering wheel tilt lever.....	19
(6) PTO clutch indicator.....	9
(7) Electrical charge warning indicator.....	24
(8) Parking brake warning indicator.....	9
(9) Head light indicator.....	19
(10) Master system warning indicator.....	24
(11) Glow plug indicator.....	9
(12) Engine oil pressure warning indicator.....	24
(13) Engine overheat warning indicator.....	24
(14) 4WD indicator.....	21
(15) Fuel level indicator.....	9
(16) Fuel gauge.....	25
(17) Coolant temperature gauge.....	25

CONTROLS

(18) Hourmeter.....	26
(19) Tachometer.....	26
(20) Differential lock pedal.....	23
(21) Parking brake lever.....	9
(22) Glove box.....	18
(23) Cup holder	
(24) 4WD lock lever (4WD only).....	21
(25) Seat belt.....	19
(26) Operator's seat.....	18
(27) Brake pedal.....	22
(28) Speed control pedal (HST pedal).....	23
(29) High - Low gear shift lever.....	21
(30) Hydraulic lift lever.....	20
(31) PTO lever.....	22
(32) Lift link lowering speed control knob.....	20
(33) Hood lock lever.....	37

ILLUSTRATED CONTENTS

MOWER MOUNTING

MOUNTING THE MOWER




WARNING

To avoid serious injury or death:

- Before mounting the mower deck, read and understand the use of the lift link lowering speed control knob. (See "Lift Link Lowering Speed Control Knob" in "OPERATING THE MACHINE" section in the operator's manual of the machine.)
- Place the PTO lever in the "DISENGAGE" position.
- Place the High-Low gear shift lever in the "NEUTRAL" position.
- The mower links (left hand, right hand) are spring-loaded. Have an assistant hold the arm in position when mounting the mower deck.

1. Move the mower deck under the mower links and place the hydraulic lift lever in the "DOWN" position.
2. Attach the front end of the mower links to the mower deck with clevis pins and set pins.

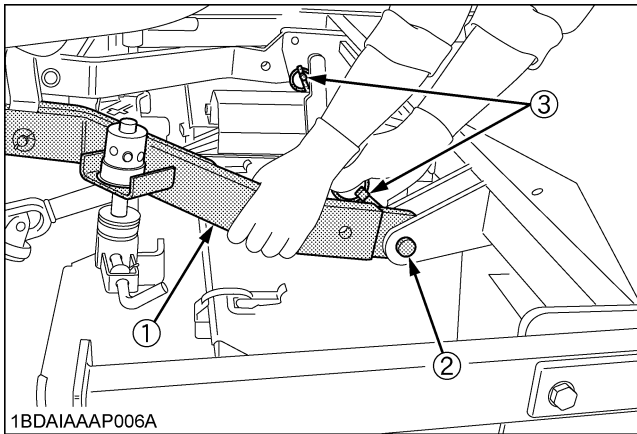

- 1BDAIAAAP006A
- (1) Mower link
 - (2) Set pin
 - (3) Clevis pin

3. Start the engine, raise the mower deck, lock the lift link lowering speed control knob and shut off the engine.
4. Install the lift rods to the mower deck with lock pins and lower the mower deck on the ground.


[RCK72-F36 / RCK72R-F36]

5. Attach the gas spring to the mower link with the clevis pin and the rue ring cotter.

NOTE :


- When operating the mower, make sure the tilt lever is unlocked.

- For tilting up the mower, see "MOWER TILT UP" section in the operator's manual of the mower.

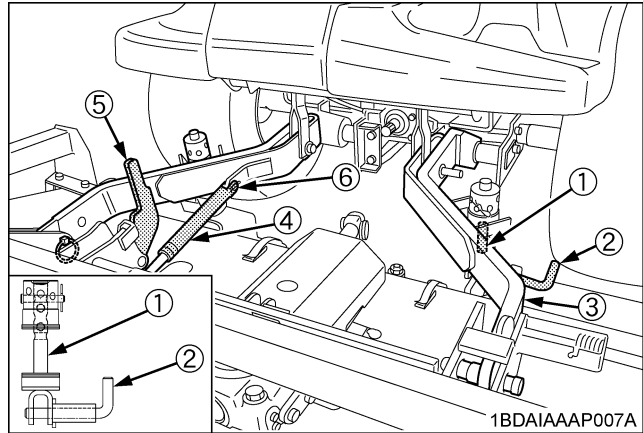

- 1BDAIAAAP007A
- (1) Lift rod
 - (2) Lock pin
 - (3) Mower link
 - (4) Gas spring
 - (5) Tilt lever ("UNLOCKED" position)
 - (6) Rue ring cotter

6. Pull back the coupler of the universal joint. Push the universal joint onto the PTO shaft until the coupler locks. Slide the universal joint backward and forward to check that the universal joint is locked securely.

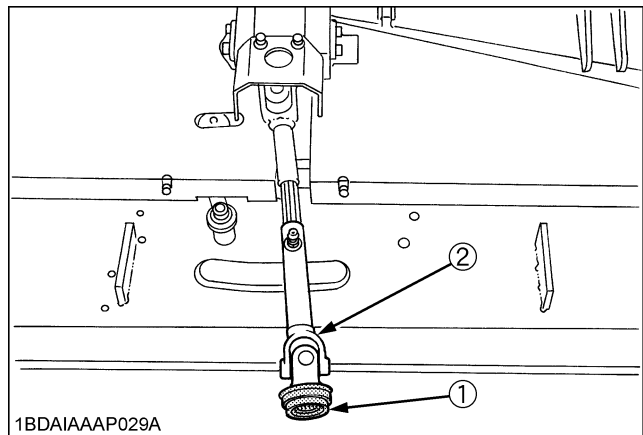

- 1BDAIAAAP029A
- (1) Coupler
 - (2) Universal joint

IMPORTANT :

- Finally pull the universal joint to see if it is locked tight in position.

After mounting the mower deck, adjust the lift link lowering speed.

(See "CONTROLS" in "INSTRUMENT PANEL AND CONTROLS" section.)

DISMOUNTING THE MOWER DECK

For dismounting the mower deck, reverse the above procedures.



WARNING

To avoid serious injury or death:

- The mower links (left hand, right hand) are spring-loaded. Have an assistant hold the arm in position when mounting the mower deck.

MOWER TILT UP



WARNING

To avoid serious injury or death:

- Do not start the engine while tilting the mower deck.



WARNING

To avoid serious injury or death:

- Be sure to tilt the mower on a level surface and the parking brake ON.
- Place the PTO lever in the "DISENGAGE" position.
- Place the High-Low gear shift lever in the "NEUTRAL" position.

■ How To Tilt Up

For detailed procedure, refer to the mower operator's manual.

■ How To Mount Another Implement

For detailed procedure, refer to the implement instruction manual.

PRE-OPERATION CHECK

DAILY CHECK

To prevent trouble from occurring, it is important to know the condition of the machine well. Check it before starting.



WARNING

To avoid serious injury or death:

- **Be sure to check and service the machine on a level surface with the engine shut off and the parking brake "ON" and implement lowered to the ground.**

Check item

- Walk around inspection
 - Check engine oil level
 - Check transmission oil level
 - Check coolant level
 - Clean air conditioner condenser screen
 - Clean grill and radiator screen
 - Check air cleaner evacuator valve
(When used in a dusty place)
 - Check brake pedal
 - Check indicators, gauges and meter
 - Check lights
 - Check wire harness
 - Check seat belt
 - Check movable parts
 - Refuel
(See "DAILY CHECK" in "PERIODIC SERVICE" section.)
 - Care of pictorial safety labels
(See "PICTORIAL SAFETY LABELS" in "SAFE OPERATION" section.)
-

OPERATING THE ENGINE



WARNING

To avoid serious injury or death:

- Read and understand "SAFE OPERATION" in the front of this manual.
- Read and understand the pictorial safety labels located on the machine.
- To avoid danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- Never start the engine while standing on the ground. Start the engine only from the operator's seat.
- Make it a rule to set all shift levers to the "NEUTRAL" positions and to place the PTO lever in "OFF" position before starting the engine.

IMPORTANT :

- Do not use starting fluid or ether.
- To protect the battery and the starter, make sure that the starter is not continuously turned for more than 30 seconds.

STARTING THE ENGINE

1. Make sure that the hood is closed.

IMPORTANT :

- If the hood is opened, the engine does not start.
- If the hood has been opened while the engine is running, the engine stalls.

2. Sit on the operator's seat.


3. Apply the parking brake.

To apply the parking brake:

Depress the brake pedal firmly and hold in position. Pull and hold the parking brake lever, and release the brake pedal.


To release the parking brake:

Depress the brake pedal and release slowly.

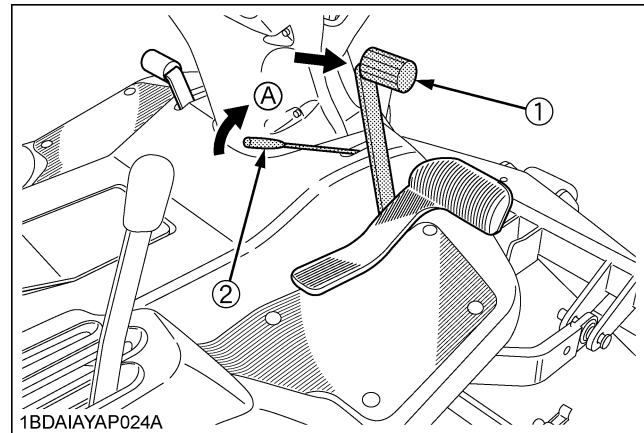

(1) Brake pedal
(2) Parking brake lever

(A) "PARKING"

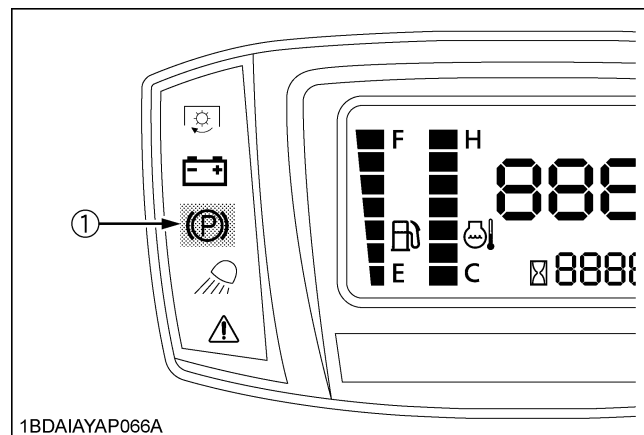


(1) Parking brake warning indicator

NOTE :


- It is recommended that the operator practice engaging and disengaging the parking brake on a flat surface without the engine running before operating the machine for the first time.

4. Make sure that the PTO lever is in the "DISENGAGED" position.

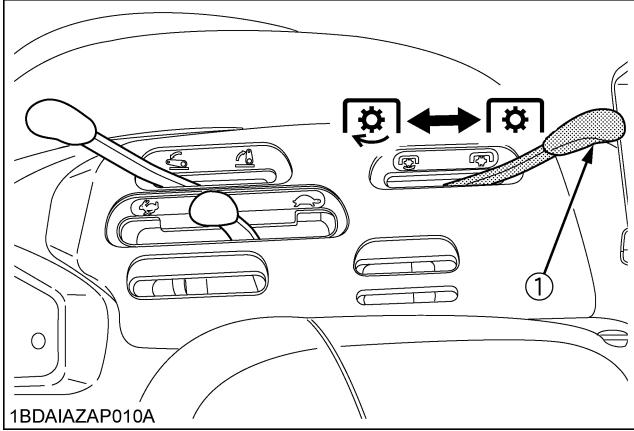


(1) PTO lever
 [⚙️]: "ENGAGED"
 [⚙️↔️]: "DISENGAGED"

6. Make sure that the hydraulic lift lever is in the "NEUTRAL" position.

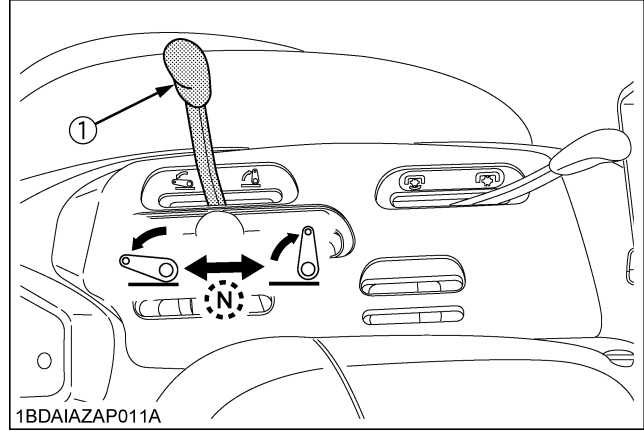


(1) Hydraulic lift lever
 [⚙️]: "DOWN"
 [⚙️N]: "NEUTRAL"
 [⚙️↑]: "UP"

5. Make sure that the speed control pedal is in the "NEUTRAL" position.

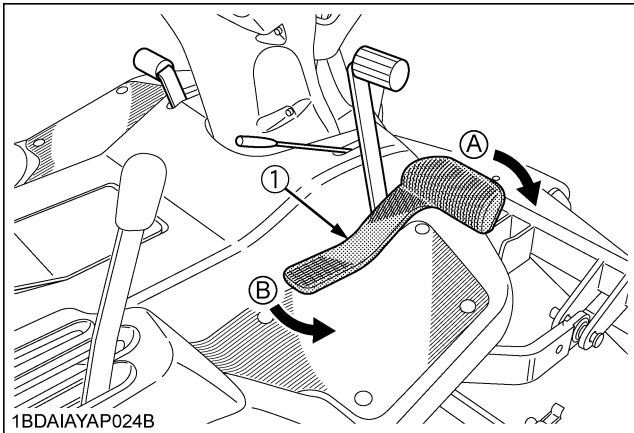

(1) Speed control pedal
 (A) "FORWARD"
 (B) "REVERSE"

7. Set the throttle lever 1/2 way forward.


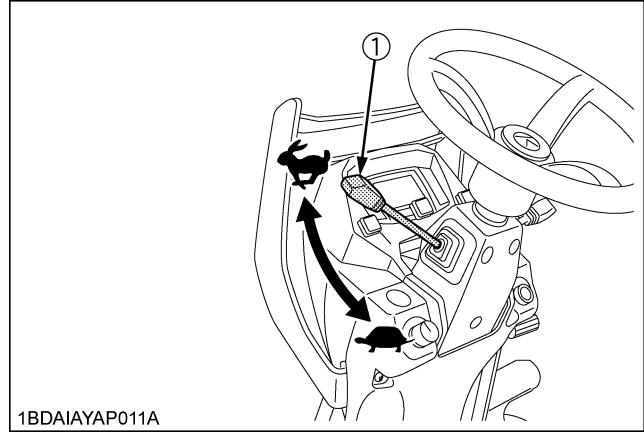


(1) Throttle lever
 [⚙️]: "FAST"
 [⚙️↓]: "SLOW"

8. Insert the key into the key switch and turn clockwise 1 notch. Make sure the easy checker lights are "ON".

◆ **Check Easy Checker(TM) Lamps:**

1. When the key is turned "ON", lamps (3) (4) should come on. If trouble should occur at any location while the engine is running, the indicator lamp corresponding to problem will turn "ON".
2. Suppose that the engine coolant temperature is not high enough yet. The glow plug indicator (4) also turns "ON" when the key is turned "ON" to preheat the engine and goes off automatically when preheat is completed.
Illumination time of indicator varies according to the temperature of coolant.
3. The PTO clutch indicator (1) comes on while PTO lever is engaged "ON" and goes off when disengaged.
4. If the fuel level indicator (5) lights up, when fuel level is very low, therefore add fuel and the light will turn "OFF".
5. If the parking brake warning indicator (6) does not illuminate, make sure the parking brake is set.

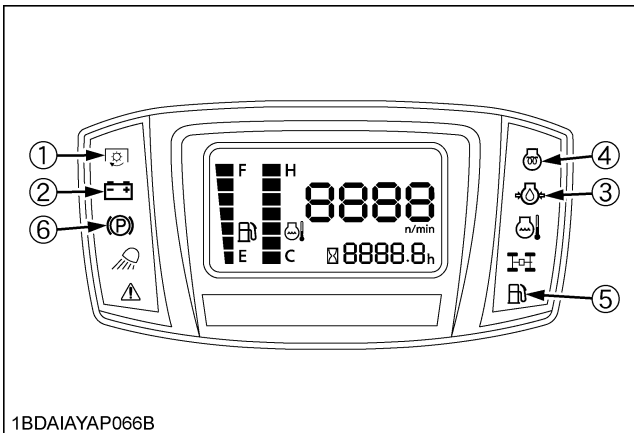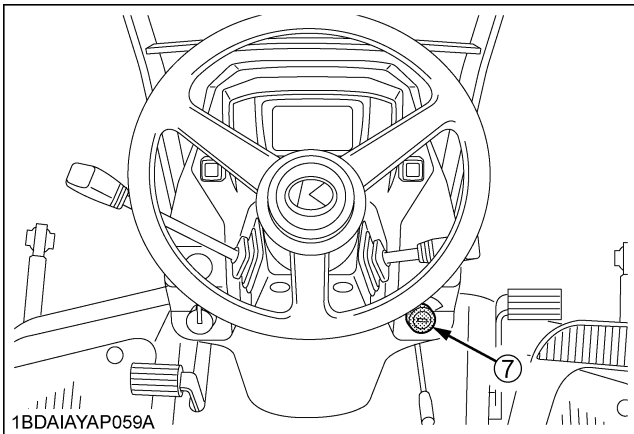

- (1) PTO clutch indicator
- (2) Electrical charge warning indicator
- (3) Engine oil pressure warning indicator
- (4) Glow plug indicator
- (5) Fuel level indicator
- (6) Parking brake warning indicator
- (7) Key switch


NOTE :

- Some of the Easy Checker(TM) lamps may illuminate or start flashing depending on the positions of the levers and switches.

IMPORTANT :

- Daily checks with the Easy Checker(TM) only, are not sufficient. Never fail to conduct daily checks carefully by referring to Daily Check. (See "DAILY CHECK" in "PERIODIC SERVICE" section.)

■ **Key Switch**

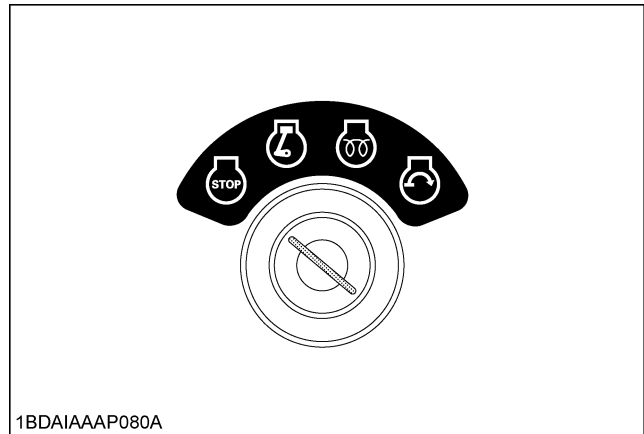

- ☐: "OFF" (Engine - Stop)
- ☐: "ON" (Engine - Run)
- ☐: "PREHEAT" (Preheat)
- ☐: "START" (Engine - Start)

IMPORTANT :

- Do not turn the key switch to the "START" position while the engine is running.
- When the temperature is below 0 °C, run the engine at medium speed to warm up the lubricant of the engine and the transmission for at least 10 minutes. If the machine is operated before the lubricant is warm enough, the machine life will be shortened.
- Do not operate the machine under full load until it is sufficiently warmed.
- Do not use starting fluid or ether.
- When the ambient temperature is less than -15 °C, remove the battery from the machine and store it somewhere warm until the next operation.

9. Turn the key switch to the "PREHEAT" position clockwise, and hold it for about 5 seconds.

For the appropriate preheating time, refer to the table below:

Temperature	Preheating Time
Over 0 °C	5 sec.
Below 0 °C	10 sec.

10. Turn the key switch to the "START" position and release the key to the "ON" position when the engine starts.

IMPORTANT :

- Because of the safety devices, the engine may not be started except when the PTO clutch is disengaged, the brake pedal is fully depressed and the operator sits in the seat.

■ Cold Weather Starting

When the ambient temperature is below -5°C and the engine is very cold. (If the engine fails to start after 10 seconds, turn off the key for 30 seconds. Then repeat steps 9 and 10. To protect the battery and the starter, make sure that the starter is not continuously turned for more than 30 seconds.)

■ Block Heater (Option)

A block heater is available as an option from your local dealer. It will assist you in starting your machine when the ambient temperature is below -15°C .

11. Check to see that all the lamps on the Easy Checker(TM) are "OFF".

If the lamp is still on, immediately stop the engine and determine the cause.

12. Warm the engine by running at medium speed.

STOPPING THE ENGINE

1. Set the parking brake.
2. After slowing the engine to idle, turn the key switch to the "OFF" position.
3. Remove the key.
4. Do not leave the key switch "ON" (key in the "ON" position) as the battery will discharge when the engine is not running.

WARMING UP



WARNING

To avoid serious injury or death:

- Be sure to apply the parking brake during warm-up.

For 5 minutes after engine start-up, allow engine to warm up without applying any load. This is to allow oil to reach every part of the engine. If load should be applied to the engine without this warm-up period, problems may develop such as seizure, breakage or premature wear.

■ Warm-up and Transmission Oil in the Low Temperature Range

Hydraulic oil serves as transmission oil and power steering fluid. In cold weather, the oil may be cold with increased viscosity. This can cause delayed oil circulation or abnormally low hydraulic pressure for some time after engine start-up. This in turn creates problems with the hydraulic system or may damage the hydraulic clutch.

To prevent the above, observe the following instructions: Warm up the engine at about 50% of rated rpm according to the table below:

Atmospheric temperature	Warm-up time requirement Higher
Higher than 0°C	Approx. 5 minutes
-10 to 0°C	5 to 10 minutes
-20 to -10°C	10 to 15 minutes
Below -20°C	More than 15 minutes

IMPORTANT :

- Do not operate unless the engine is well warmed up. If operation is attempted while the engine is still cold, the hydraulic mechanism will not function properly and its service life will be shortened.
- If noises are heard after the hydraulic control lever has been activated and the implement is lifting, the hydraulic mechanism is not adjusted properly. Unless corrected, the unit will be damaged. Contact your local KUBOTA Dealer for adjustment.

■ Engine Stop Lever and Fuel Valve (Inside the Hood)


The engine stops when the key switch is turned "OFF". If the engine does not stop, make sure the speed control pedal is in the "NEUTRAL" position, the PTO lever is "OFF", the mower lowered to the ground and apply the parking brake, then carefully get off the machine. Open the hood and pull engine stop lever (Red mark) and hold it until the engine stops. Then contact your local KUBOTA Dealer immediately.



WARNING

To avoid serious injury or death:

- Do not operate the machine until the engine stop system is repaired.

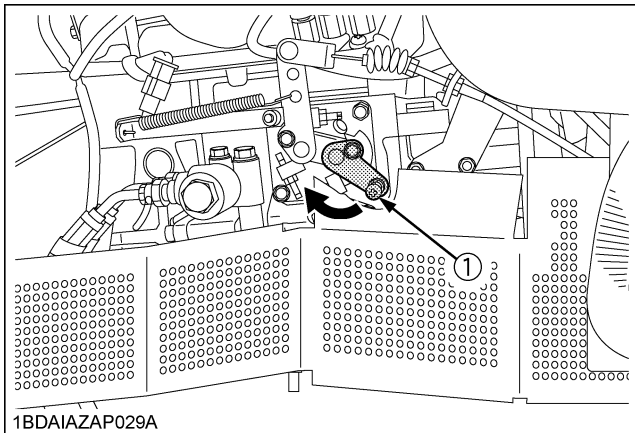

(1) Engine stop lever

JUMP STARTING





WARNING

To avoid serious injury or death:

- Keep cigarettes, sparks, and flames away from battery.
- If machine battery is frozen, do not jump start engine.
- Do not connect other end of negative (-) jumper cable to negative (-) terminal of machine battery.

When jump starting the engine, follow the instructions below to safely start the engine.

1. Bring helper vehicle with a battery of the same voltage as the disabled machine within easy cable reach. "THE VEHICLES MUST NOT TOUCH".
2. Apply the parking brakes of both vehicles and put the shift levers in neutral. Shut the engine off.
3. Put on safety goggles and rubber gloves.
4. Ensure the vent caps are securely in place. (if equipped)
5. Attach the red clamp to the positive (red, (+) or pos.) terminal of the dead battery and clamp the other end of the same cable to the positive (red, (+) or pos.) terminal of the helper battery.
6. Clamp the other cable to the negative (black, (-) or neg.) terminal of the helper battery.
7. Clamp the other end to the engine block or frame of the disabled machine as far from the dead battery as possible.
8. Start the helper vehicle and let its engine run for a few moments. Start the disabled machine.
9. Disconnect the jumper cables in the exact reverse order of attachment. (Steps 7, 6 and 5).

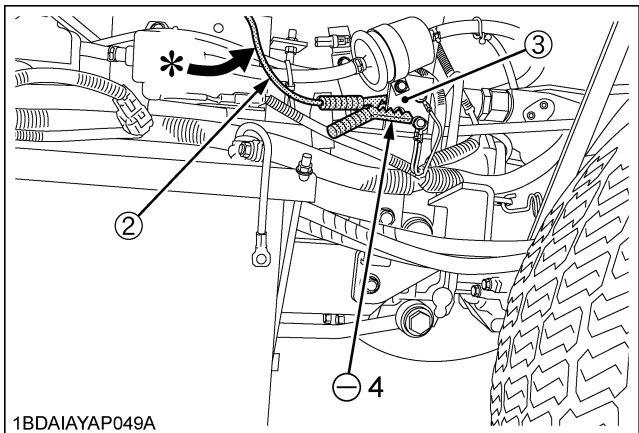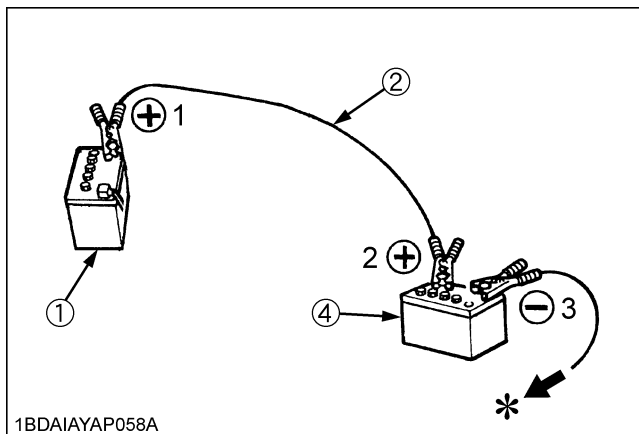

- (1) Dead battery
- (2) Jumper cables
- (3) Frame
- (4) Helper battery

Connect cables in numerical order.
Disconnect in reverse order after use.

IMPORTANT :

- This machine has a 12 volt negative (-) ground starting system.
- Use only same voltage for jump starting.
- Use of a higher voltage source on machine could result in severe damage to machine electrical system. Use only matching voltage source when "Jump starting" a low or dead battery condition.

OPERATING THE MACHINE

OPERATING NEW MACHINE

How a new machine is operated and maintained will determine the life of the machine.

A new machine just off the factory production line has been tested, but the various parts are not accustomed to each other, so care should be taken to operate the machine for the first 50 hours at a slower speed and avoid excessive work or operation until the various parts become "broken-in." The manner in which the machine is handled during the "breaking-in" period greatly affects the life of your machine. Therefore, to obtain the maximum performance and the longest life of the machine, it is very important to properly break-in your machine. In handling a new machine, the following precautions should be observed.

■ Changing Lubricating Oil for New Machines

The lubricating oil is especially important in the case of a new machine. The various parts are not "broken-in" and are not accustomed to each other; small metal grit may develop during the operation of the machine; and this may wear out or damage the parts. Therefore, care should be taken to change the lubricating oil a little earlier than would ordinarily be required.

For further details of change interval hours, see "SERVICE INTERVALS" in "MAINTENANCE" section.

■ Engine Break-in

After the first 50 hours of operation, change the engine oil and filter. (See "EVERY 200 HOURS" in "PERIODIC SERVICE" section.)

■ Machine Break-in

After the first 400 hours of operation, change the transmission fluid.

After the first 50 hours of operation, change the oil filter cartridge. (See "EVERY 400 HOURS" in "PERIODIC SERVICE" section.)



WARNING

To avoid serious injury or death:

- Do not allow any person other than the driver to ride on the machine.
- Do not drive the machine close to the edges of ditches or banks which may collapse under the weight of the machine, especially when the ground is loose or wet.
- Slow down before turning.
- To avoid tip over, operate up and down slopes, not across. Avoid sudden starts and stops on slopes. Slow down, and use extra caution when changing direction on a slope. Do not use the machine on steep incline.
Park the machine on a firm, level surface.
- Watch where you are going at all times. Watch for and avoid obstacles. Be alert at curbs, near trees, and other obstructions and hidden hazards.
- Do not drive a machine on streets or highways. Watch for traffic when you cross roads or operate near roads.
- Look to the rear before and when backing. Make sure the area immediately behind you is clear of obstructions, holes and small children. Use extra caution when a machine is equipped with Grass Catcher.

OPERATING FOLDABLE ROPS

WARNING

To avoid serious injury or death:

- Always use the seat belt when the ROPS is installed.
- Do not use the seat belt if a foldable ROPS is down or there is no ROPS.


WARNING

To avoid serious injury or death:

- When raising or folding the ROPS, apply parking brake, stop the engine and remove the key.
 - Always perform function from a stable position from the rear of the machine.
 - Fold the ROPS down only when absolutely necessary and fold it up and lock it again as soon as possible.
 - Before proceeding to fold the ROPS, check for any possible interference with installed implements and attachments.
- If interference occurs, contact your local KUBOTA Dealer.

■ To Fold the ROPS

1. Unscrew the knob bolts 1 to 2 turns.
2. Remove both lock pins.

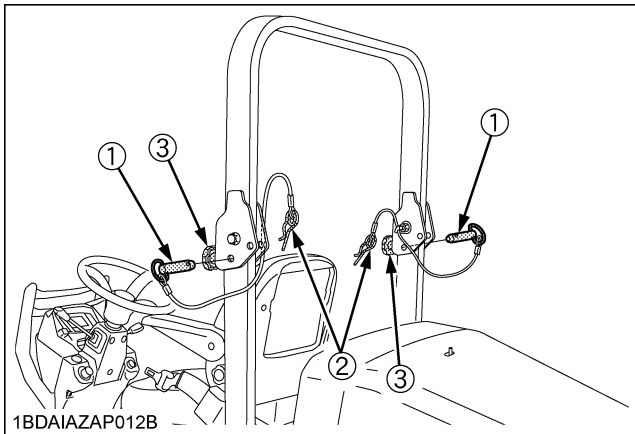


- (1) Lock pin
 (2) Snap pin
 (3) Knob bolt

3. Fold the ROPS.

WARNING

To avoid serious injury or death:

- Hold the ROPS tightly with both hands and fold the ROPS slowly and carefully.

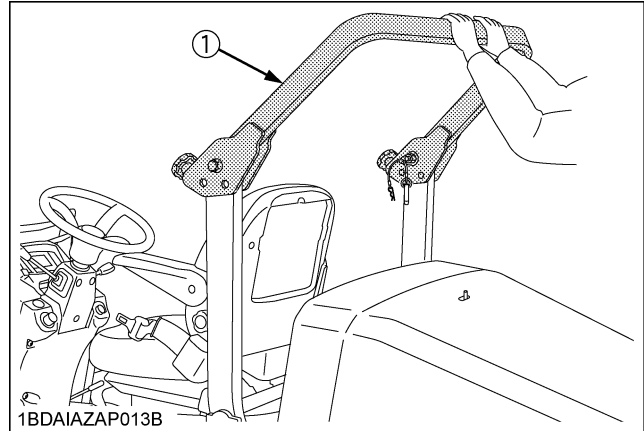


(1) ROPS

4. Align lock pin holes and insert both lock pins and secure them with the snap pins.

WARNING

To avoid serious injury or death:


- Make sure that both lock pins are properly installed and secured with the snap pins.
- Do not use your fingers to align the holes.

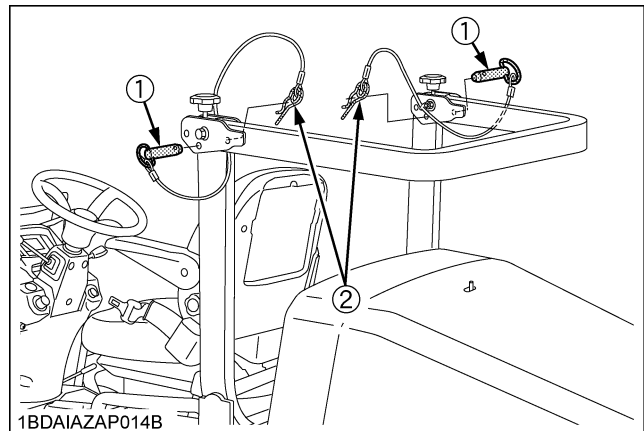

- (1) Lock pin
 (2) Snap pin

■ To Raise the ROPS to Upright Position

1. Remove both snap pins and lock pins.

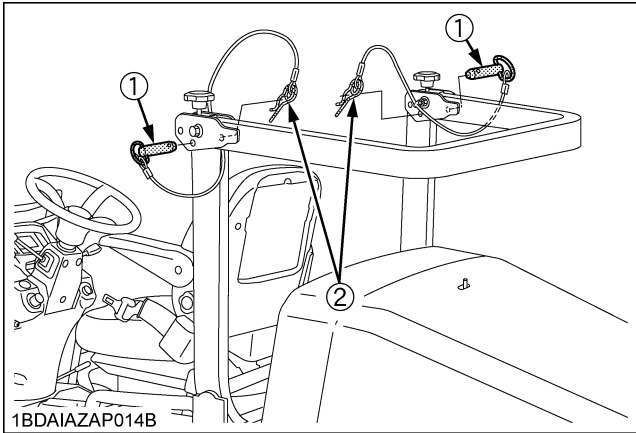

- (1) Lock pin
- (2) Snap pin

2. Raise ROPS to the upright position.

⚠ WARNING

To avoid serious injury or death:


- Hold the ROPS tightly with both hands and raise the ROPS slowly and carefully.
- Do not use your fingers to align the holes.

3. Align lock pin holes, insert both lock pins and secure them with the snap pins.
4. Tighten the knob bolts slightly.

⚠ WARNING

To avoid serious injury or death:


- Make sure that both lock pins are properly installed as soon as the ROPS is in the upright position and secured with the snap pins.

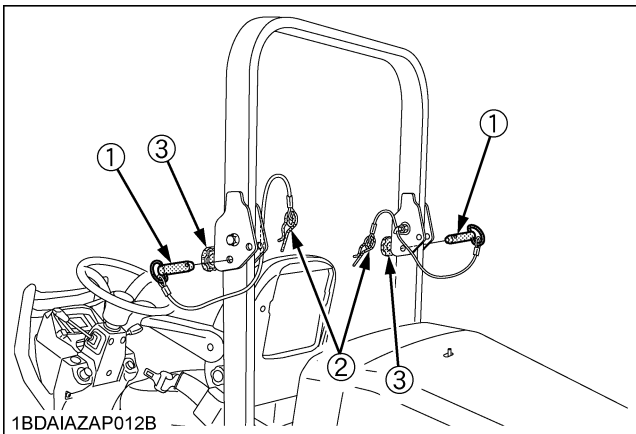

- (1) Lock pin
- (2) Snap pin
- (3) Knob bolt

■ Adjustment of Foldable ROPS

- Adjust free fall of the ROPS upper frame regularly.
- If you feel less friction when folding the ROPS, tighten the nut (1) until you feel the right friction in the movement.

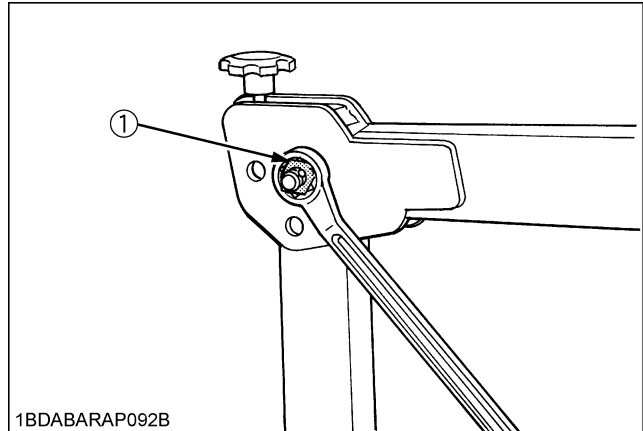

- (1) Nut

STARTING

1. Adjust the operator's position and apply the seat belt.



Operator's Seat



WARNING

To avoid serious injury or death:

- Make adjustments to the seat only while the machine is stopped.
- Make sure that the seat is completely secured after each adjustment.
- Do not allow any person other than the driver to ride on the machine.

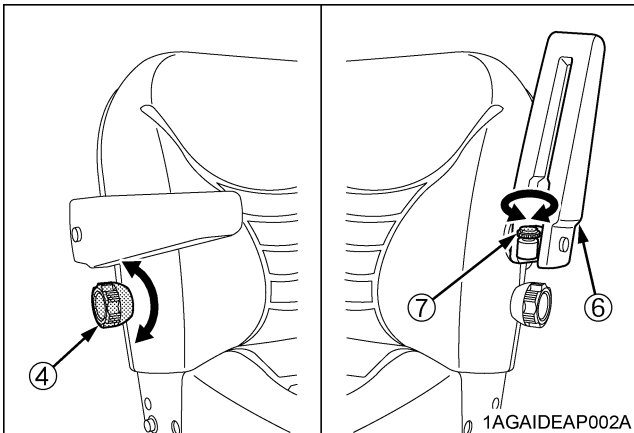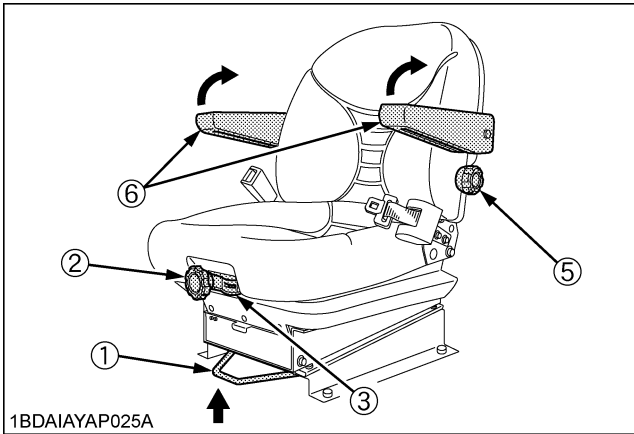

- | | |
|-------------------------------|--------------------------------|
| (1) Travel adjust lever | (5) Lumbar support adjust knob |
| (2) Suspension adjust knob | (6) Arm rest |
| (3) Indicator of suspension | (7) Arm rest angle adjust knob |
| (4) Backrest tilt adjust knob | |

Travel adjustment

Unlock the travel adjust lever and slide the seat backward or forward, as required. The seat will lock in position when the lever is released.



WARNING

To avoid serious injury or death:

- Use extra caution when unlocking the travel adjust lever because the seat might slide forward by itself.

Suspension adjustment

Turn the suspension adjust knob to achieve the optimum suspension setting.

Lumbar support adjustment

Turn the lumbar support adjust knob to the desired position.

Backrest tilt adjustment

Turn the backrest tilt adjust knob to the desired angle.

Arm rest

Arm rest may be set at upright position if desired.


Arm rest angle adjustment

Turn the arm rest angle adjust knob to the desired angle.

IMPORTANT :

- After adjusting the operator's seat, be sure to check and see that the seat is properly locked.


Glove Box

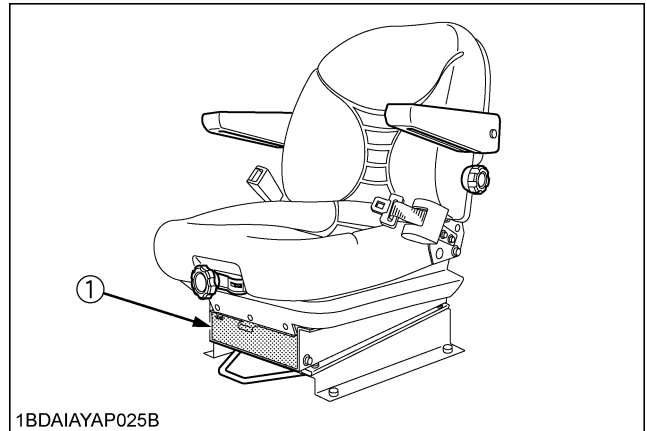

- (1) Glove box

Steering Wheel Tilt Lever

By pulling the steering wheel tilt lever upward, the lock is released and the steering wheel can be adjusted to a desired tilt angle from the choice of 4 settings.

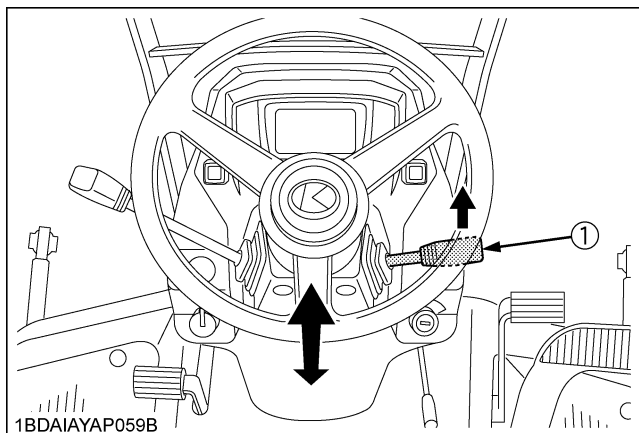

(1) Steering wheel tilt lever

Seat Belt




WARNING

To avoid serious injury or death:

- Always use the seat belt when the ROPS is installed.
- Do not use the seat belt if a foldable ROPS is down or there is no ROPS.

Adjust the seat belt for proper fit and connect to the buckle. The seat belt is an auto-locking retractable type.

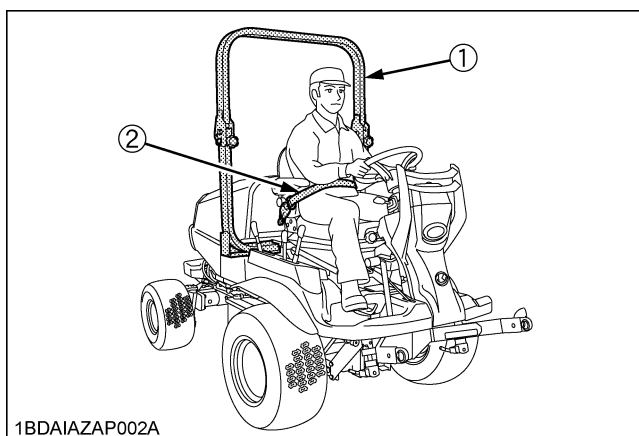


(1) ROPS
(2) Seat belt

2. Selecting Light Switch Positions

Head Light Switch

Turning the light switch clockwise illuminates the headlight.

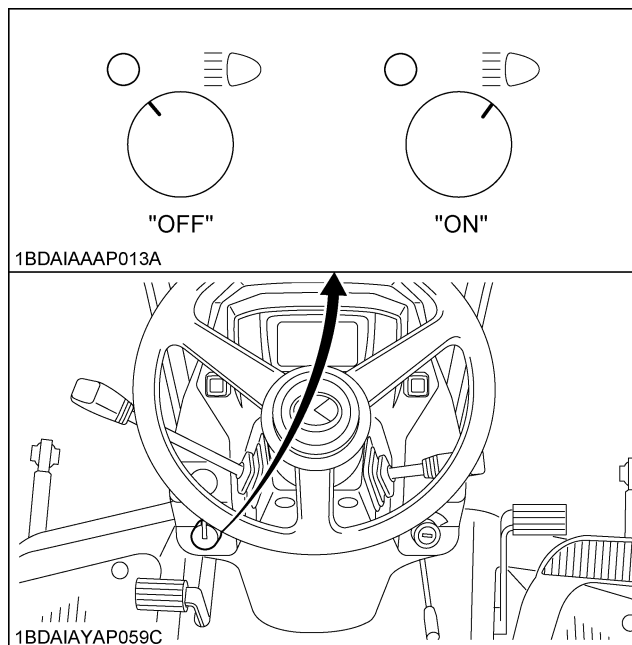

-Head light OFF
- ☉Head light ON

3. Start the engine. See "OPERATING THE ENGINE" section.

4. Raising the implement

■ Lift Link Lowering Speed Control Knob




WARNING

To avoid serious injury or death:

- Fast lowering speed may cause damage or injury. Lowering speed of the implement should be adjusted to 2 or more seconds.

The lowering speed of the lift link can be controlled by adjusting the lift link lowering speed control knob.

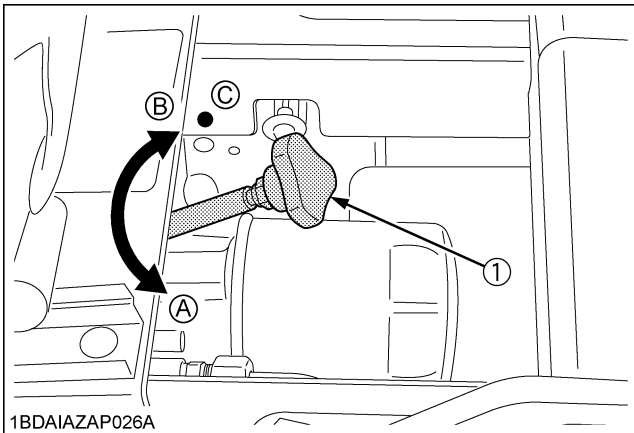

- (1) Lift link lowering speed control knob
 (A) "FAST": Turn counterclockwise slowly
 (B) "SLOW": Turn clockwise
 (C) "LOCK": Turn clockwise to the end

◆ How to adjust the Lowering Speed

1. Park the machine on a level surface and apply the parking brake.
2. Move the PTO lever in the "DISENGAGE" position.
3. Move the High-Low gear shift lever in the "NEUTRAL" position.
4. Start the engine and raise the implement fully.
5. Turn the lift link lowering speed knob clockwise to the "LOCK" position.
6. Stop the engine and move the Hydraulic lift lever in the "DOWN" position.
7. Turn the knob counterclockwise slowly to adjust the lowering speed.

IMPORTANT :


- Before adjustment, never check near or under the implement.
- Turn the knob slowly and carefully to avoid sudden fall of the implement.

■ Hydraulic Lift Lever

The hydraulic lift lever is used to raise and lower the implement used with the machine (ex. Mower).

To lower the implement, push the lever FORWARD.

To raise it, pull the lever BACKWARD.

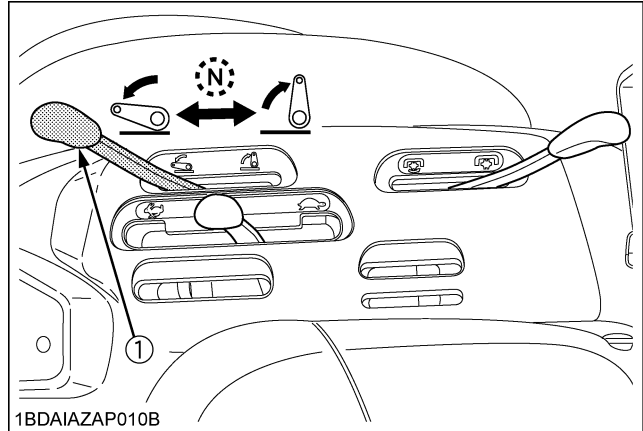

(1) Hydraulic lift lever

- ☑ : "DOWN"
 N : "NEUTRAL"
 ☑ : "UP"

IMPORTANT :

- Do not operate until the engine is warmed up. If operation is attempted when the engine is still cold, the hydraulic system may be damaged.
- Do not operate at slow Engine rpm. Move the throttle lever above 1/2.
- If noises are heard when implement is lifting after the hydraulic lift lever has been activated, the hydraulic mechanism is not adjusted properly. Contact your local KUBOTA Dealer for adjustment.

5. Selecting the Travel Speed

High-Low Gear Shift Lever



WARNING

To avoid serious injury or death:


- Shift "High-Low Gear Shift Lever" to the Low position before mowing or operating on slopes.

High-Low gear shift lever moves in the form of an "I" in 3 stages, "LOW", "NEUTRAL" and "HIGH".

By using the speed control pedal and high-low gear shift lever, additional speeds can be obtained.

IMPORTANT :

- To shift high-low gear shift lever, stop the machine before attempting to proceed with speed change.

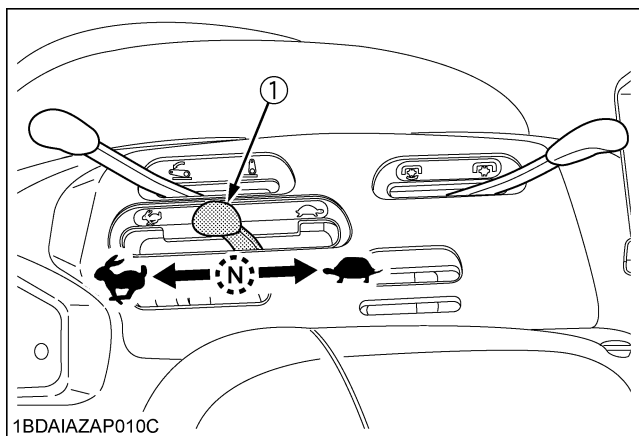

(1) High-Low gear shift lever

- : "HIGH"
- : "NEUTRAL"
- : "LOW"

4WD Lock Lever




WARNING


To avoid serious injury or death:

- Do not change the 4WD lock lever to the Dual-Acting Overrunning 4WD position on slopes. Set it Full time 4WD position on slopes. Do not change the 4WD lock lever to the Full time 4WD position when turning or transporting.

1. Change the lever to the Dual-Acting Overrunning 4WD position so that you can turn smoothly without damaging the lawn.

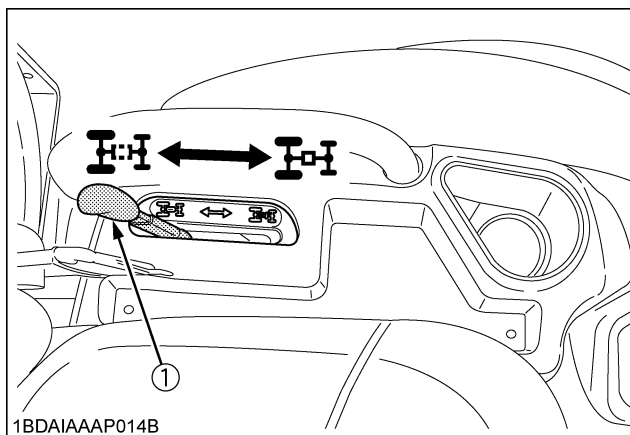

1BDAlAAAP014B

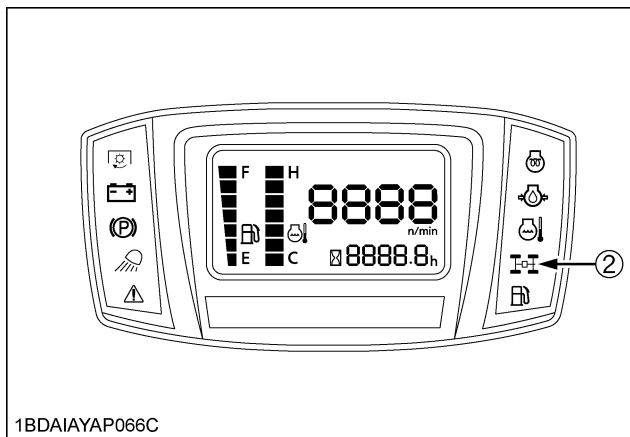

1BDAlAYAP066C

(1) 4WD lock lever

(2) 4WD indicator

: Full time 4WD

: Dual-Acting Overrunning 4WD

IMPORTANT :


- Do not steer the rear wheel sharply when the 4WD lock lever is in the "Full Time 4WD" position.

NOTE :

- When the 4WD lock lever is in the "Dual-Acting Overrunning 4WD" position, the 4WD indicator goes off. When the 4WD lock lever is in the "Full time 4WD" position, the 4WD indicator comes on.

PTO Lever

To drive the PTO, move the PTO lever to the "ENGAGED" position.

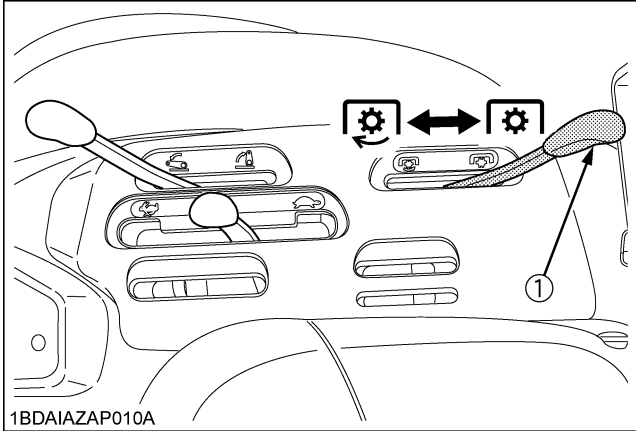

(1) PTO lever

☞: "ENGAGED"
 ☜: "DISENGAGED"

1. If you get off the seat while the PTO is running, the engine will stop automatically. (Seat safety control)
2. Before starting the engine, pull the PTO lever to the "DISENGAGE" position. If it is at the "ENGAGED" position, the engine will not start.


NOTE :

- These safety features are built-in.

6. Accelerating the Engine

Throttle Lever

Pulling the throttle lever backward decreases the engine speed and pushing it forward increases the engine speed.

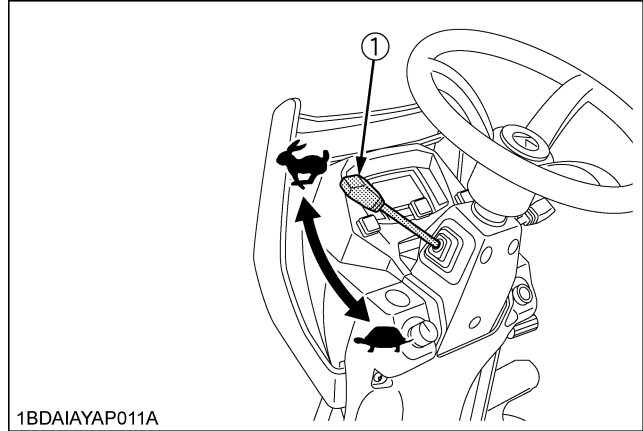


(1) Throttle lever

↶: "FAST"
 ↷: "SLOW"

7. Unlocking the Parking Brake

Parking Brake

To release the parking brake, depress the brake pedal again.

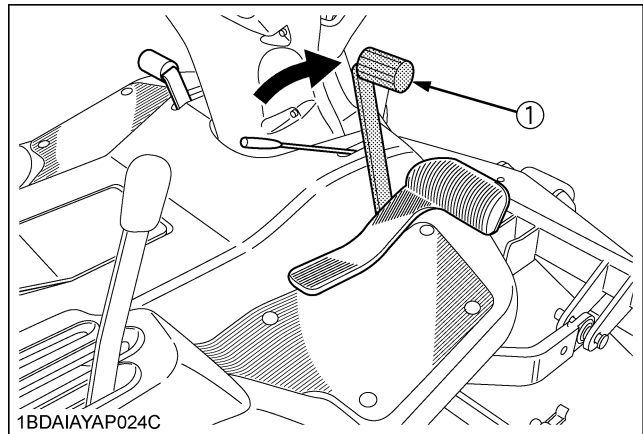

(1) Brake pedal

8. Depressing the Speed Control Pedal

■ Speed Control Pedal



WARNING

To avoid serious injury or death:

- Do not operate if the machine moves on a level ground with foot off Speed Control Pedal.

"FORWARD"

Depress the speed control pedal with the toe of your right foot to move forward.

"REVERSE"


Depress the speed control pedal with the heel of your right foot to move in reverse.

Depress the speed control pedal a little and you can drive slowly.

To increase travel-speed, depress the speed control pedal more until the desired speed is reached.

NOTE :

- When the parking brake is applied, the speed control pedal is locked in the "NEUTRAL" position.

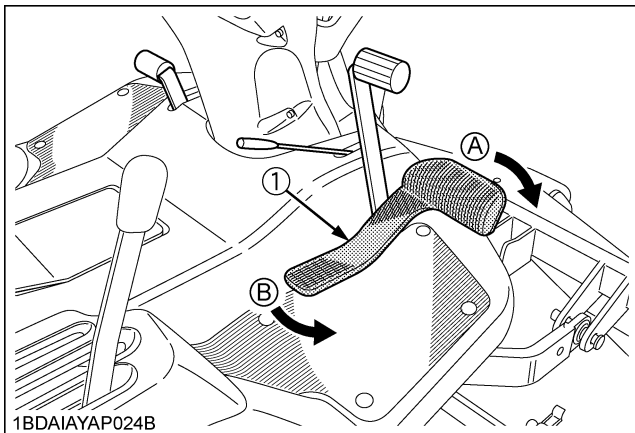

(1) Speed control pedal

(A) "FORWARD"

(B) "REVERSE"

■ Differential Lock Pedal



WARNING

To avoid serious injury or death:


- Do not drive at high speed or turn the machine when the differential is locked. Release the lock before making such a turn.

If 1 of the front wheels should slip, step on the differential lock pedal. Then both wheels will turn together, reducing slippage.

The differential lock is applied only when the pedal is being depressed.

IMPORTANT :

- If the "Differential Lock" will not release when the pedal is released, alternately step the speed control pedal forward and backward slightly.
- Do not apply the differential lock pedal when traveling at high speed, or damage to the transmission may result.

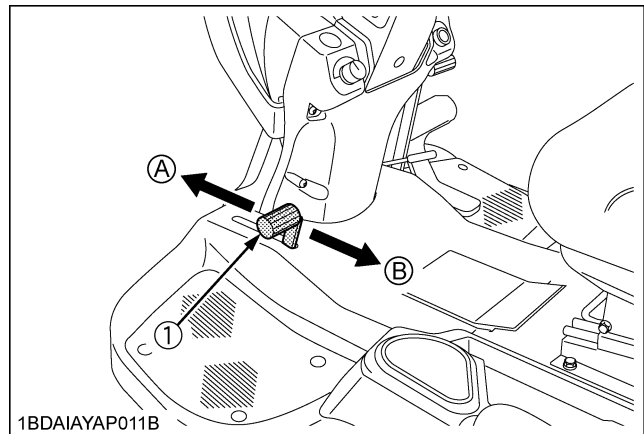

1BDAlAYAP011B

(1) Differential lock pedal

(A) "ENGAGE"

(B) "DISENGAGE"

STOPPING

■ Stopping


1. Release the speed control pedal and depress the brake pedal to stop the machine.
2. Slow the engine down.
3. Shift PTO lever to the "DISENGAGE" position.
4. Lower all attachments, and place all control levers in their "NEUTRAL" positions.
5. Apply the parking brake, turn off the engine and remove the key from the switch.

CHECK DURING DRIVING

■ Immediately Stop the Engine if:

- The engine suddenly slows down or accelerates.
- Unusual noises suddenly occur.
- Exhaust fumes suddenly become discolored.

While driving, make the following checks to see that all the parts are functioning normally.

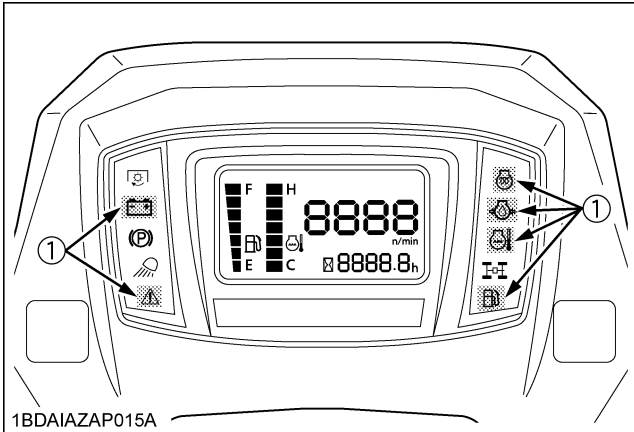


(1) Easy Checker(TM)


■ Easy Checker (TM)


If the warning lamps of the Easy Checker(TM) come on during operation, immediately stop the engine, and find the cause as shown below.


Never operate the machine while Easy Checker(TM) lamp is on.

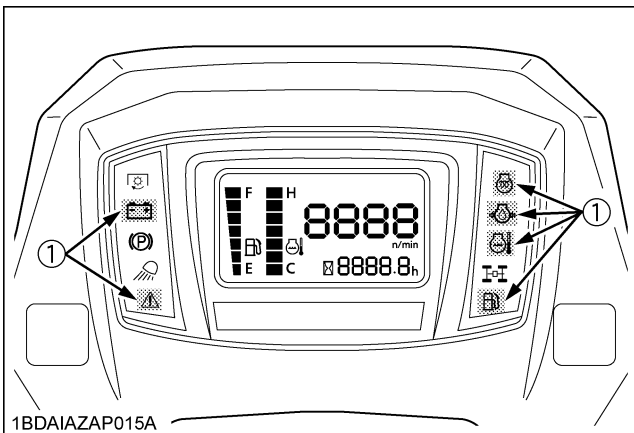

(1) Easy Checker (TM)


-  Engine overheat
 If the water temperature gauge reads an unusual level and the warning lamp in the Easy Checker(TM) comes on, the engine may be overheated. Check the machine by referring to "TROUBLESHOOTING" section.


-  Engine oil pressure
 If the oil pressure in the engine goes below the prescribed level, the warning lamp in the Easy Checker (TM) will come on.
 If this should happen during operation, and it does not go off when the engine is accelerated to more than 1000 rpm, check level of engine oil.
 (See "Checking Engine Oil Level" in "DAILY CHECK" in "PERIODIC SERVICE" section.)


-  Fuel level
 If the fuel in the tank goes below the prescribed level, the warning lamp in the Easy Checker(TM) will come on.
 If this should happen during operation, refuel as soon as possible.
 (See "Checking Amount of Fuel and Refueling" in "DAILY CHECK" in "PERIODIC SERVICE" section.)

IMPORTANT :

- When the fuel warning lamp lights up, refuel the tank as soon as possible. If the machine runs out of fuel and stalls, the engine and its components may be damaged.

-  Electrical charge
 If the alternator is not charging the battery, the warning lamp in the Easy Checker (TM) will come on.
 If this should happen during operation, check the electrical charging system or consult your local KUBOTA Dealer.


-  Master system warning
 If trouble should occur at the engine, transmission or other control parts, the indicator flashes as a warning. If the trouble is not corrected by restarting the machine, consult your local KUBOTA Dealer.

-  Glow plug Indicator (Pre-heating Indicator)
 When the key switch is in the "PREHEAT" position, the glow plug indicator illuminates.

NOTE :

- For checking and servicing of your machine, consult your local KUBOTA Dealer for instructions.

LCD MONITOR

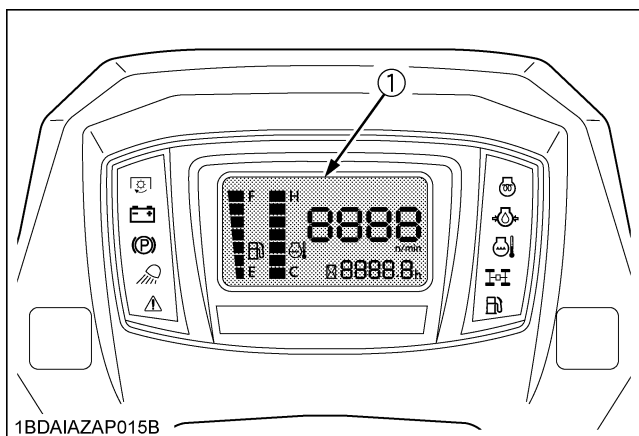

1BDAIAZAP015B


(1) LCD monitor

Fuel Gauge

When the key switch is on, the fuel gauge indicates the fuel level.

Be careful not to empty the fuel tank. Otherwise air may enter the fuel system.

Should this happen, the system should be bled. (See "Bleeding Fuel System" in "SERVICE AS REQUIRED" in "PERIODIC SERVICE" section)

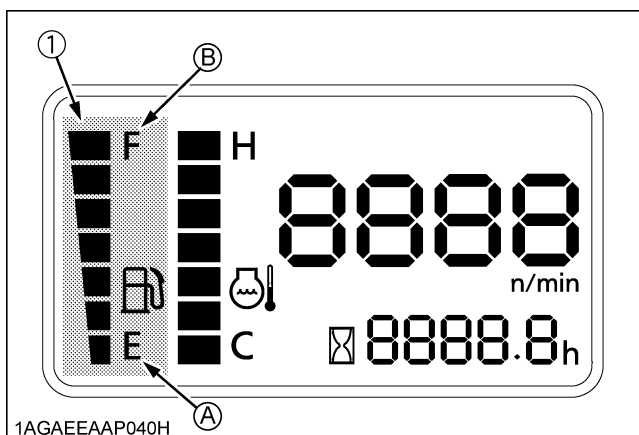

1AGAEAAAP040H

(1) Fuel gauge

- (A) "EMPTY"
- (B) "FULL"

Coolant Temperature Gauge




WARNING

To avoid serious injury or death:

- Do not remove radiator cap until coolant temperature is well below its boiling point. Then loosen the cap slightly to relieve any pressure before removing the cap completely.

1. With the key switch "ON", this gauge indicates the temperature of the coolant. "C" for "cold" and "H" for "hot".
2. If the indicator reaches the "H" position (red zone), engine coolant is overheated. Check the machine by referring to "TROUBLESHOOTING" section.

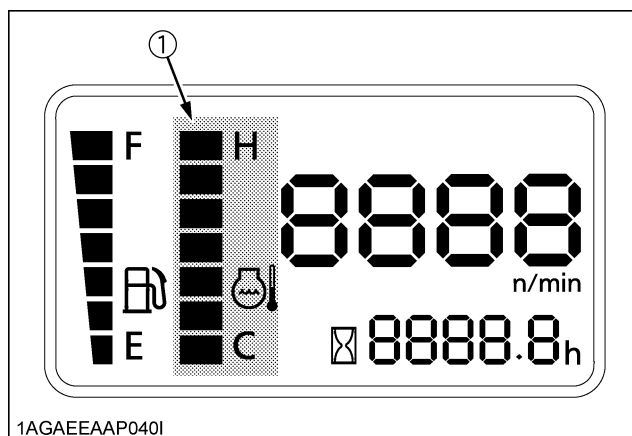


1AGAEAAAP040I

(1) Coolant temperature gauge

Hourmeter / Tachometer

This meter gives readings for engine speed and the hours the machine has been operated.

1. The tachometer indicates the engine speed.
2. The hourmeter indicates in 5 digits the hours the machine has been used; the last digit indicates 1/10 of an hour.

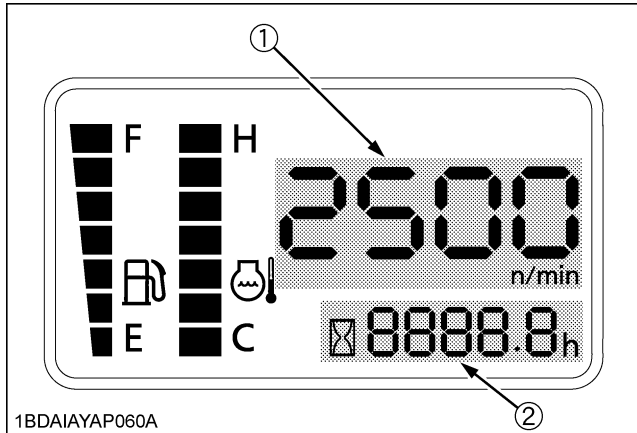


1BDAIAYAP060A

- (1) Engine revolution (with an error of $\pm 1\%$)
- (2) Hours used

Service Code Display

The key switch is on, and if the service code ("SE200" or "SE202") shown in the figure below is displayed on the liquid crystal display, the servicing tasks corresponding to the indication on hour meter (displayed at 10 seconds after that) should be carried out on the machine.

See "SERVICE INTERVALS" in "MAINTENANCE" section.

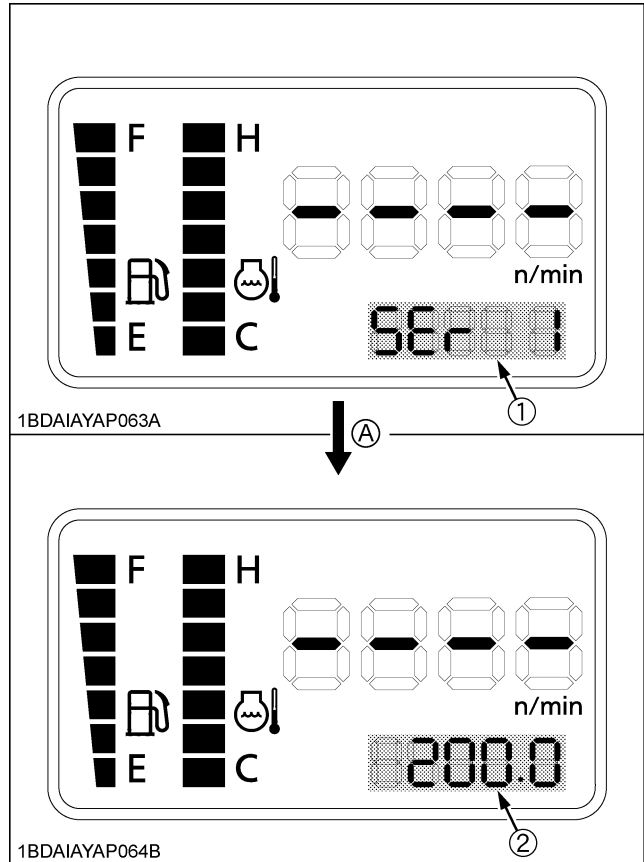

1BDAIAYAP063A

1BDAIAYAP064B

- (1) Service code
- (2) Hours used
- (A) At 10 seconds after the service code has displayed.

Overheat Alarm

If the temperature of the coolant rises to overheat temperature, the overheat alarm whistles.

Check the machine by referring to "TROUBLE SHOOTING" section.

PARKING

■ Parking



WARNING

To avoid serious injury or death:

Before leaving the operator's position:


- Apply parking brake.
- Lower all implements to the ground.
- Shut off the engine.
- Remove the key.

1. When parking, be sure to set the parking brake.

To apply the parking brake;

Depress the brake pedal firmly and hold it in position. Pull and hold parking brake lever, and release the brake pedal.

2. Before getting off the machine, disengage the PTO, lower all implements to the ground, place all control levers in their neutral positions, set the parking brake, stop the engine and remove the key.
3. If it is necessary to park on an incline, be sure to chock the wheels to prevent accidental rolling of the machine.

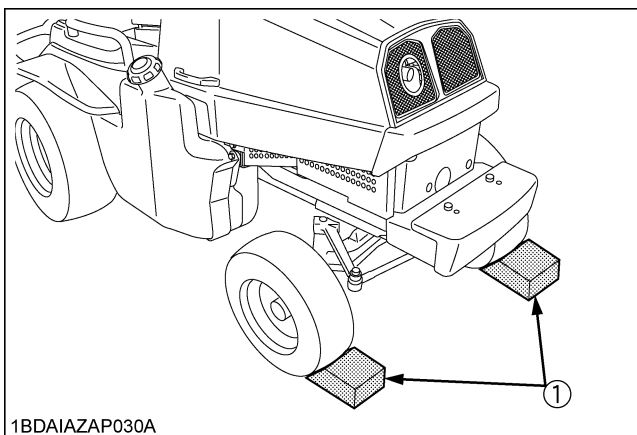


(1) Chocks

TRANSPORTING


1. Do not tow this machine a long distance, or damage to the transmission may result.
2. Transport the machine on a trailer.
 - To prevent the hood from opening by wind while in transit, it is necessary to either load the machine backward or use a suitable tie down for the hood.
 - Apply the parking brake and lift down the mower deck to the lowest position.
 - Remove the key.
 - Secure the portions of the machine, which are shown in the figure below, by using heavy duty straps.

[FRONT]

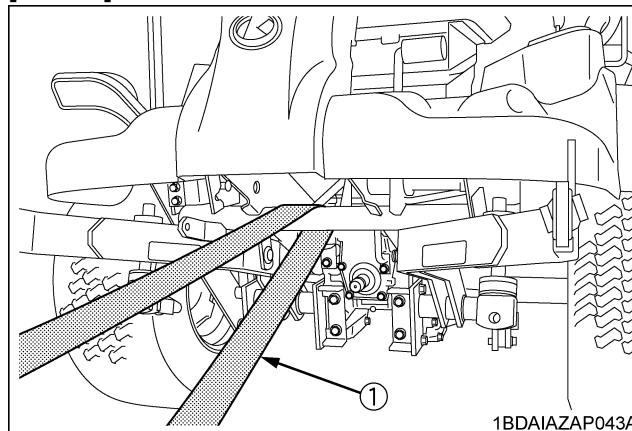


(1) Heavy-duty strap

[REAR]

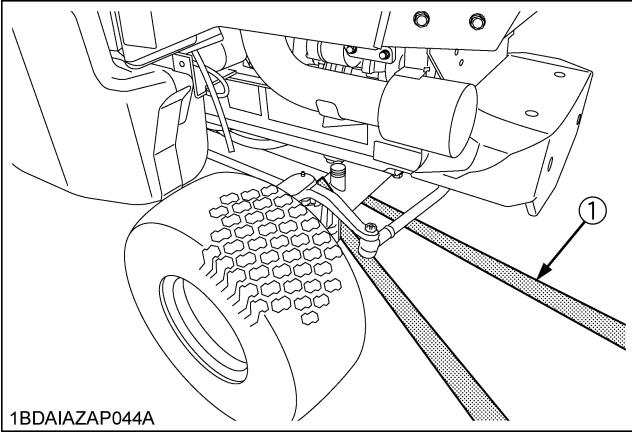

1BDIAZAP044A

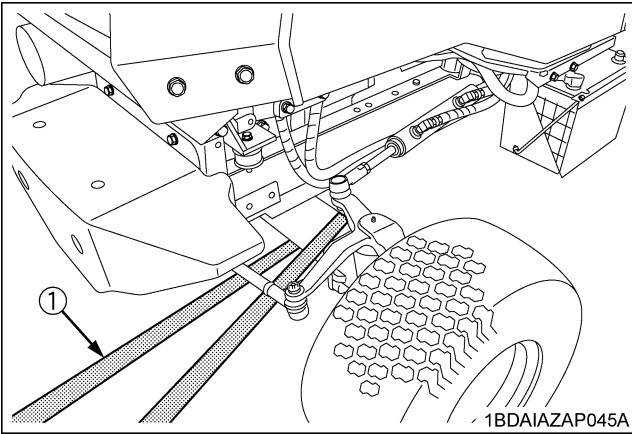

1BDIAZAP045A

(1) Heavy-duty strap

■ Directions for Use of Power Steering

1. Power steering is activated only while the engine is running. Slow engine speeds make the steering a little heavier. While the engine is stopped, the machine functions in the same manner as machines without power steering.
2. When the steering wheel is turned all the way to the stop, the relief valve is activated. Do not hold the steering wheel in this position for a long period of time.
3. Avoid turning the steering wheel while the machine is stopped, or tires may wear out sooner.
4. The power steering mechanism makes the steering easier. Be careful when driving on a road at high speeds.

3. Follow all federal and local regulations for securement.

TIRES, WHEELS AND BALLAST

TIRES

WARNING

To avoid serious injury or death:

- Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
- Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the Operator's Manual.

IMPORTANT :

- Do not use tires other than those approved by KUBOTA.

WARNING

To avoid serious injury or death:


Never operate the machine with a loose rim, wheel, or axle.

- Whenever bolts are loosened, retighten to specified torque.
- Check all bolts frequently and keep them tightened.

■ Inflation Pressure

Though the inflation pressure is factory-set to the prescribed level, it naturally drops slowly in the course of time. Thus, check it everyday and inflate as necessary.

		Tire sizes	Recommended Inflation Max. Pressure
Front	F2890E	23 x 10.5 - 12, 4PR	140 kPa (1.4 kgf/cm ²)
	F3090 F3890	24 x 12 - 12, 4PR	
Rear	F2890E	16 x 6.5 - 8, 4PR	190 kPa (1.9 kgf/cm ²)
	F3090 F3890	18 x 9.5 - 8, 6PR	250 kPa (2.5 kgf/cm ²)

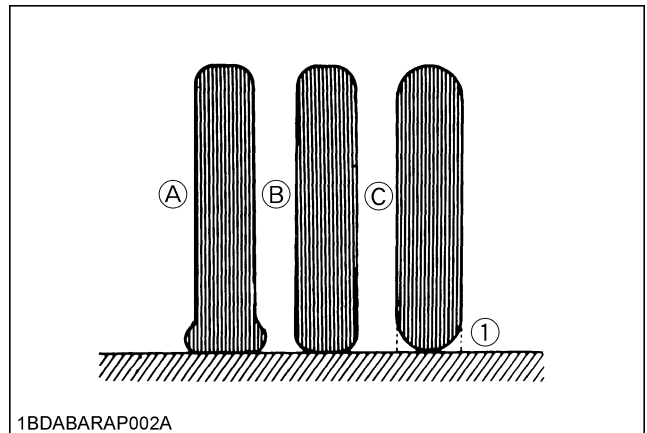

1BDABARAP002A

(1) Ground

(A) "INSUFFICIENT"

(B) "NORMAL"


(C) "EXCESSIVE"

WHEELS

IMPORTANT :

- Follow the same checking procedure when the machine is first used.


■ Front Wheels (Drive Wheels)

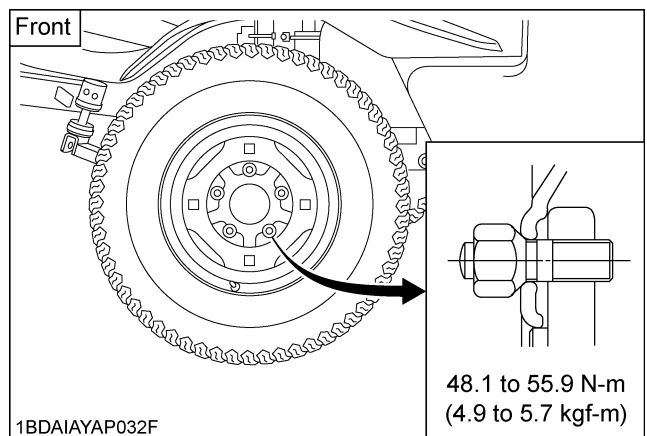




1BDAIAYAP032F

48.1 to 55.9 N-m
(4.9 to 5.7 kgf-m)

Wheels with beveled or tapered holes:
Use the tapered side of the lug nut.

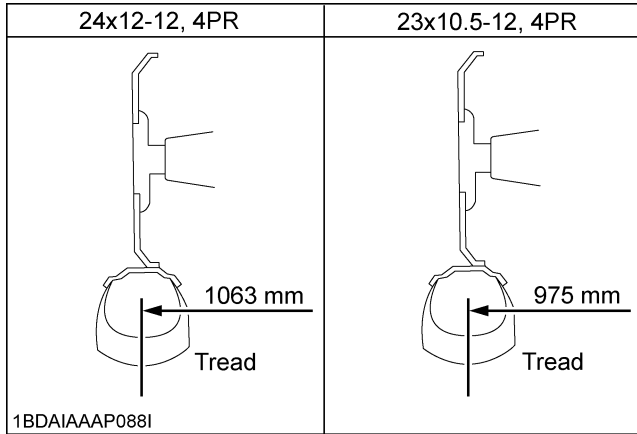

■ Rear Wheels (Steering Wheels)

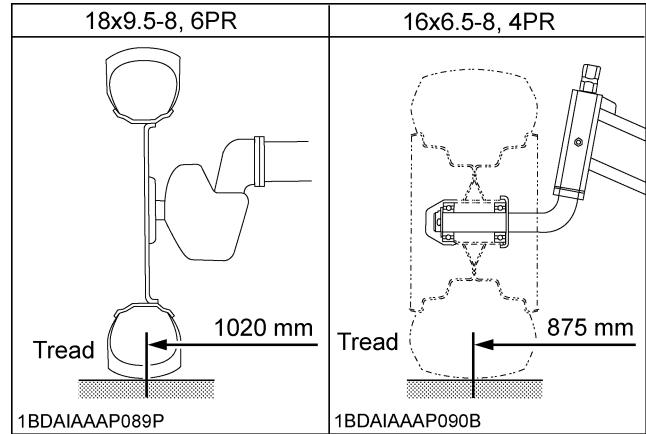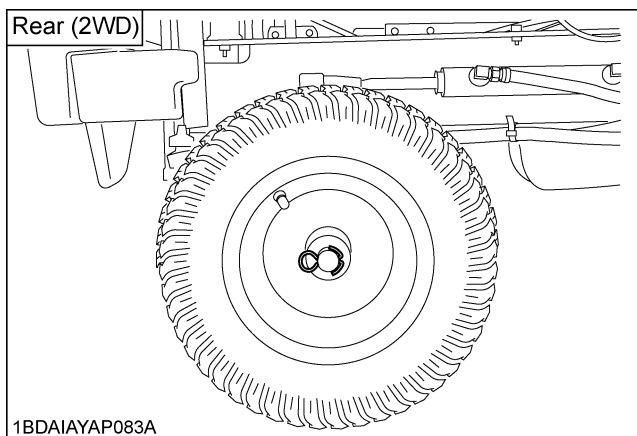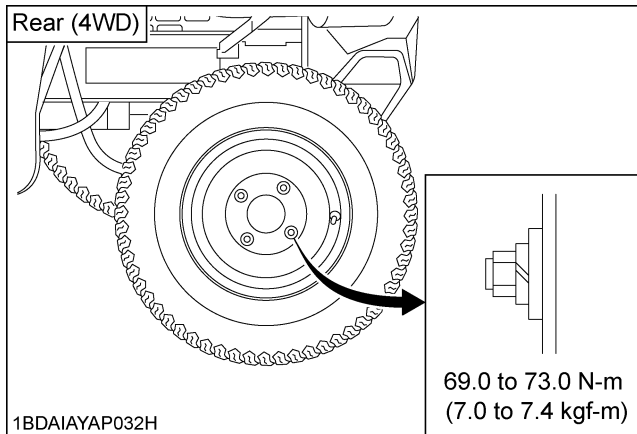

BALLAST

WARNING

To avoid serious injury or death:

- Additional ballast will be needed for operating heavy attachments. When the attachment is raised, drive slowly over the rough ground, regardless of how much ballast is used.

Add ballast to the rear end if needed for stability. Heavy front mounted attachments tend to lift rear wheels. Add enough ballast to maintain steering control and prevent tipover. The Attachment's Manual shows how much rear ballast is required for your application. Rear ballast is available from your local KUBOTA Dealer.

MAINTENANCE

SERVICE INTERVALS

The following servicing tasks should be carried out on the machine at the stated running-time intervals.


No.	Items		Indication on hour meter (Hr)												Interval	Ref. page	
			50	100	150	200	250	300	350	400	450	500	550	600			
1	Engine start system	Check	○	○	○	○	○	○	○	○	○	○	○	○	every 50 Hr	43	
2	OPC system	Check	○	○	○	○	○	○	○	○	○	○	○	every 50 Hr	44		
3	Greasing	-	○	○	○	○	○	○	○	○	○	○	○	every 50 Hr	44		
4	Wheel bolt torque	Check	○	○	○	○	○	○	○	○	○	○	○	every 50 Hr	46		
5	Oiling	-	○	○	○	○	○	○	○	○	○	○	○	every 50 Hr	46		
6	Battery condition	Check		○		○		○		○		○		every 100 Hr	47	*7	
7	Air cleaner element	Clean		○		○		○		○		○		every 100 Hr	48	*2	
		Replace												every 1000 Hr or 1 year	56	*5	
8	Fan belt	Adjust		○		○		○		○		○		every 100 Hr	51	*3	
9	Brake pedal	Adjust		○		○		○		○		○		every 100 Hr	50		
10	Fuel filter element	Check		○		○		○		○		○		every 100 Hr	49		
		Replace								○				every 400 Hr	55	*3	
11	Engine oil	Change	◎			○				○			○	every 200 Hr	51	*1	
12	Engine oil filter	Replace	◎			○				○			○	every 200 Hr	52	*1	
13	Transmission oil filter	Replace	◎			○				○			○	every 200 Hr	52	*1	
14	Transmission fluid	Change								○				every 400 Hr	53		
15	Transmission strainer	Clean								○				every 400 Hr	54		
16	Rear axle differential case fluid	Change								○				every 400 Hr	54		
17	Rear axle gear case (RH & LH) fluid	Change								○				every 400 Hr	55		
18	Rear axle pivot	Adjust								○				every 400 Hr	55		
19	Engine valve clearance	Adjust												every 800 Hr	56	*3	
20	Fuel injection nozzle (injection pressure)	Check												every 1500 Hr	56	*3	

No.	Items		Indication on hour meter (Hr)											Interval	Ref. page			
			50	100	150	200	250	300	350	400	450	500	550				600	
21	Radiator	Clean														every 2000 Hr or 2 years	56	*6
22	Coolant	Change														every 2000 Hr or 2 years	56	*6
23	Injection pump	Check														every 3000 Hr	57	*3
24	Radiator hose and clamp	Check														every 1 year	58	*4
		Replace														every 4 years	59	*3
25	Hydraulic hose	Check														every 1 year	58	*4
		Replace														every 4 years	59	*3
26	Fuel line	Check														every 1 year	59	*4
		Replace														every 4 years	59	*3
27	Intake air line	Check														every 1 year	59	*4
		Replace														every 4 years	59	
28	Engine breather hose	Check														every 1 year	59	*4
		Replace														every 4 years	59	*3
29	Fuel system	Bleed														Service as Required	61	
30	Fuse	Replace													60			
31	Light bulb	Replace													61			
32	Lift spring	Adjust													62			

IMPORTANT :

- The jobs indicated by © must be done initially.
 - *1 The initial 50 hours should not be a replacement (change) cycle.
 - *2 Air cleaner should be cleaned more often in dusty conditions than in normal conditions.
 - *3 Consult your local KUBOTA Dealer for this service.
 - *4 Replace if any deterioration (crack, hardening, scar, or deformation) or damage occurred.
 - *5 Every 1000 hours or every 1 year whichever comes faster.
 - *6 Every 2000 hours or every 2 years whichever comes faster.
 - *7 When the battery is used for less than 100 hours per year, check the battery condition by reading the indicator annually.

PERIODIC SERVICE CHART LABEL

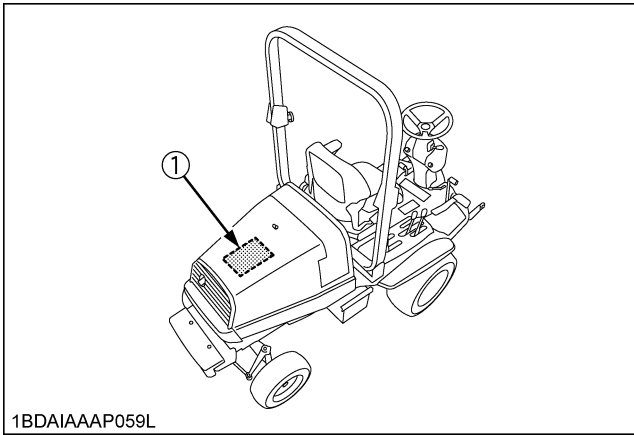

This label is for your quick reference. The label shows the recommended services from daily to every 4 years, including fluid capacities, tyre pressure and so on. For details, refer to operator's manual. See the following page.

(1) Part No. K3615-4761-4 (ENGLISH)

PERIODIC SERVICE CHART

INTERVAL		RECOMMENDED SERVICE
		See Operator's Manual in details.
DAILY	CHECK	1. Tire pressure, wear or damage. 2. Oil and water leakage from machine and mower. 3. Engine oil, transmission fluid, recovery tank coolant and fuel level. 4. Damage to machine body, tightness of all bolts, nuts and pins, etc. 5. Mower blades and belt for wear or damage. 6. Brake pedal and safety switches. 7. Color of the exhaust fumes, abnormal noise and vibrations. 8. Seat belt and Rops.
	CLEAN	• Radiator screen/Bonnet screen/Air cleaner primary element/Mower deck
	GREASE	• Mower U-joint(3 places)/ Spindle shaft(3 places)/Belt tension pulley and pivot
FIRST 50 Hr. 【BREAK-IN】 (MUST BE DONE)		CHANGE • Engine oil/Mower Gear box oil REPLACE • Engine oil filter/Transmission oil filter
E V E R Y	50 Hr.	CHECK • Engine start system/OPC system/Mower gear box oil
		GREASE • Speed control pedal boss/Lift link boss(R&L)/Differential lock pedal boss/Universal joint/DT drive shaft(4WD)/Knuckle arm(4WD)/Rear axle pivot(2WD)/Seat adjuster/Cable(Throttle)(F2690/F2890/F3090/F3690/F3890)/Front gauge wheels and gauge wheel brackets/Front roller
	100 Hr.	ADJUST • Fan belt★/Brake pedal
		CHECK • Battery condition/Fuel filter element
	150 Hr.	CLEAN • Air cleaner element★
		CHANGE • Mower gear box oil
	200 Hr.	CHANGE • Engine oil
		CHECK • Radiator hose and clamp/Hydraulic hose/Intake air line
	400 Hr.	REPLACE • Engine oil filter/Transmission oil filter
		ADJUST • Rear axle pivot
CHANGE • Transmission fluid/ Rear axle gear case fluid/Differential case fluid		
CLEAN • Transmission strainer		
800 Hr.	REPLACE • Fuel filter element	
1500 Hr.	ADJUST • Engine valve clearance★	
3000 Hr.	CHECK ★ • Fuel injection nozzle injection pressure★	
1 Year	CHECK ★ ■ ● • Injection pump★/Turbo charger★	
1 Year/1000Hr ▲	CHECK ★ ■ ● • Radiator hose and clamp/Hydraulic hose/Fuel line/Engine breather hose Mower gear box oil seal/Intake air line	
2 Year/2000Hr ▲	REPLACE • Air cleaner element	
2 Year/2000Hr ▲	FLUSH • Cooling System	
2 Year/2000Hr ▲	CHANGE • Coolant	

★:SHOULD BE SERVICED BY KUBOTA DEALER. ★:REQUIRED MORE OFTEN IN DUSTY CONDITIONS. ■:Replace if necessary.
●:Replace for maximum every 4 years. ▲:Whichever comes first
Tire maximum pressure and tightening torque recommendation.

Tire sizes		Inflation Pressure	tightening torque
Front	4WD	24x12.0-12	140 kPa(20psi) 49.0 Nm(36 ft • lbs)
	2WD	23x10.5-12	
Rear	4WD	18x9.5-8	250 kPa(36psi) 88.3 Nm(65 ft • lbs)
	2WD	16x6.5-8	190 kPa(28psi)

Approximate fluid capacities.

	F2690/F2890	F3090/F3690/F3890	F3990		F2690/F2890/F3090/F3690/F3890/F3990
Engine	3.5L (3.69qts.)	5.0L (5.29qts.)	4.7L (4.97qts.)	Differential case	1.5L (1.59qts.)
Radiator	4.6L (4.86qts.)		3.7L (3.91qts.)	Rear axle gear case	0.5L (0.53qts.)
Reserve tank	0.6L (0.63qts.)		1.1L (1.16qts.)	Mower gear box	0.4L (0.42qts.)
Transmission	14L (14.79qts.)				

LUBRICANTS, FUEL AND COOLANT

Place	Capacities			Lubricants
	F2890E	F3090	F3890	
Fuel	61 L			<ul style="list-style-type: none"> • No.2-D diesel fuel • No.1-D diesel fuel if temperature is below -10 °C
Coolant	4.6 L			Fresh clean water with anti-freeze
Recovery tank	0.6 L			
Engine crankcase	3.5 L*1	5.0 L*1	<ul style="list-style-type: none"> • Engine oil: Refer to next page 	
			Above 25 °C	SAE30, SAE10W-30 or 15W-40
			-10 °C to 25 °C	SAE20, SAE10W-30 or 15W-40
			Below -10 °C	SAE10W-30
Transmission case	14 L			<ul style="list-style-type: none"> • KUBOTA SUPER UDT-2 fluid*2
Rear axle Differential case	1.5 L			<ul style="list-style-type: none"> • KUBOTA SUPER UDT-2 fluid*2 or SAE80 - SAE90 gear oil
Rear axle gear case (RH & LH)	0.5 L			

Note *1 Oil amount when the oil level is at the upper level of the oil level gauge.

*2 The product name of KUBOTA genuine UDT fluid may be different from that in the Operator's Manual depending on countries or territories. Consult your local KUBOTA Dealer for further detail.

Greasing**	No. of greasing points			Capacity	Type of grease
	F2890E	F3090	F3890		
Speed control pedal shaft	1			Until grease overflows	<ul style="list-style-type: none"> • Multipurpose EP2 Grease (NLGI Grade No. 2)
Lift link boss (RH & LH)	2				
Differential lock pedal boss	1				
Universal joint	3				
Rear wheel drive shaft (F & R)	2				
Knuckle arm (RH & LH)	2				
Seat adjuster	2			Moderate amount	<ul style="list-style-type: none"> • Oil
HST neutral shaft	1				
Cable (Throttle)	1				

Note ** See "Lubricating All Grease Fittings" in "EVERY 50 HOURS" in "PERIODIC SERVICE" section for details.

NOTE :

◆ **Engine Oil:**

- Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE Engine Oil according to the ambient temperatures as shown above:
- With the emission control now in effect, the CF-4 and CG-4 lubricating oils have been developed for use of a low-sulfur fuel on on-road vehicle engines. When an off-road vehicle engine runs on a high-sulfur fuel, it is advisable to employ the "CF or better" lubricating oil with a high Total Base Number (TBN of 10 minimum).
- Refer to the following table for the suitable API classification engine oil according to the engine type (with internal EGR, external EGR or non-EGR) and the fuel (low-sulfur or high-sulfur fuel).

Fuel used	Engine oil classification (API classification)	
	Oil class of engines except external EGR	Oil class of engines with external EGR
High Sulfur Fuel [$\geq 0.05\%$ (500 ppm)]	CF (If the "CF-4, CG-4, CH-4 or CI-4" lubricating oil is used with a high-sulfur fuel, change the lubricating oil at shorter intervals. (approximately half))	---
Low Sulfur Fuel [$<0.05\%$ (500 ppm)] or Ultra Low Sulfur Fuel [$<0.0015\%$ (15 ppm)]	CF, CF-4, CG-4, CH-4 or CI-4	CF or CI-4 (Class CF-4, CG-4 and CH-4 engine oils cannot be used on EGR type engines)

EGR: Exhaust Gas Re-circulation

- The CJ-4 engine oil is intended for DPF (Diesel Particulate Filter) type engines, and cannot be used on this machine.

	except external EGR	with external EGR
Models	F2890E, F3090, F3890	---

◆ **Fuel:**

- Cetane number of 45 is minimum. Cetane number greater than 50 is preferred, especially for temperatures below -20°C or elevations above 1500 m.
- If diesel fuel with sulfur content greater than 0.5% (5000 ppm) sulfur content is used, reduce the service interval for engine oil and filter by 50%.
- NEVER use diesel fuel with sulfur content greater than 0.05% (500 ppm) for EXTERNAL EGR type engine.
- DO NOT use diesel fuel with sulfur content greater than 1.0% (10000 ppm).
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.
- No.2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service. (SAE J313 JUN87)

◆ **Transmission Oil:**

The oil used to lubricate the transmission is also used as hydraulic fluid. To insure proper operation of the hydraulic system and to complete lubrication of the transmission, it is important that a multi-grade transmission fluid is used in this system. We recommend the use of **KUBOTA UDT** or **SUPER UDT fluid** for optimum protection and performance. (Consult your local KUBOTA Dealer for further detail.)

Do not mix different brands together.

- Indicated capacities of water and oil are manufacturer's estimate.

PERIODIC SERVICE



WARNING

To avoid serious injury or death:

- Do not work under any hydraulically supported devices. They can settle, suddenly leak down, or be accidentally lowered. If necessary to work under the machine or any machine elements for servicing or adjustment, securely support them with stands or suitable blocking beforehand.

HOW TO OPEN THE HOOD




WARNING

To avoid serious injury or death from contact with moving parts:

- Never open the hood while the engine is running.
- Do not touch muffler or exhaust pipes while they are hot; Severe burns could result.

◆ How to Open the Hood

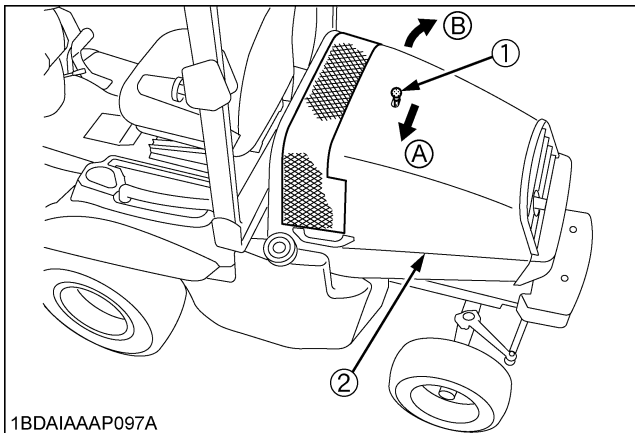

1BDAIAAAP097A

- (1) Hood lock lever
(2) Hood

- (A) Pull the lever
(B) Open the hood

To open:

1. Pull the lever.
2. Open the hood.

To close:

1. Close the hood.
2. Check the hood is locked.

DAILY CHECK

To prevent trouble from occurring, it is important to know the condition of the machine. Check it before starting.



WARNING

To avoid serious injury or death:


- Be sure to check and service the machine on a level surface with the engine shut off, the key removed and the parking brake securely set.

	No.	Check item	Ref. Page
Walking around the machine	1	Tire pressure, wear and damage	29, 41
	2	Oil and water leak	---
	3	Engine oil level	38
	4	Transmission fluid level	41
	5	Coolant level in the recovery tank	42
	6	Damage to machine body, tightness of all bolts and nuts	---
	7	Radiator screen Bonnet screen	40
	8	Brake pedal	50
	9	Fuel level	39
	10	Air cleaner	48
While sitting in the operator's seat	1	Speed control pedal Brake pedal	---
	2	Parking brake	---
Turning the key switch "ON"	1	Performance of the easy checker light	24
Starting the engine	1	Color of the exhaust fumes	---
	2	Safety start switch and seat safety control. If either of these do not operate properly, contact your local KUBOTA Dealer immediately.	43, 44
	3	Check for abnormal noise and vibration.	---

	No.	Check item	Ref. Page
Others	1	Check the areas where previous trouble was experienced.	---

■ Checking Seat Belt and ROPS

1. Always check condition of the seat belt and ROPS attaching hardware before operating the machine.
2. Replace anything that is frayed or damaged.

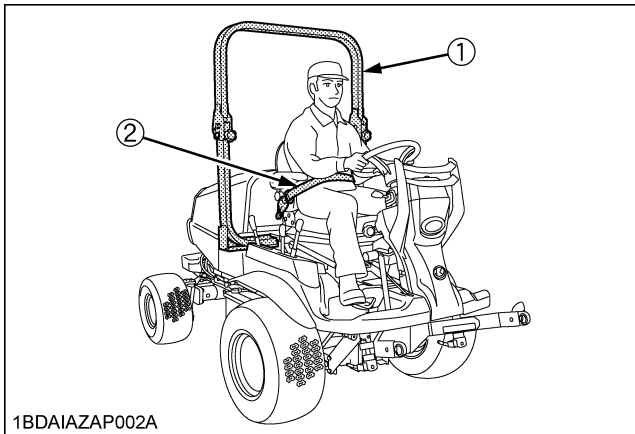

1BDIAIAZAP002A

- (1) ROPS
(2) Seat belt

■ Checking Engine Oil Level




WARNING

To avoid serious injury or death:

- Always stop the engine and remove the key before checking oil.

1. Check engine oil before starting and 5 minutes or more after the engine has stopped.
2. Wipe dipstick area clean.
3. To check the oil level, remove the dipstick, wipe it clean, replace it, and draw it out again. Check to see that the oil level is between the 2 notches.
4. Add new oil to the prescribed level at the oil port if necessary.

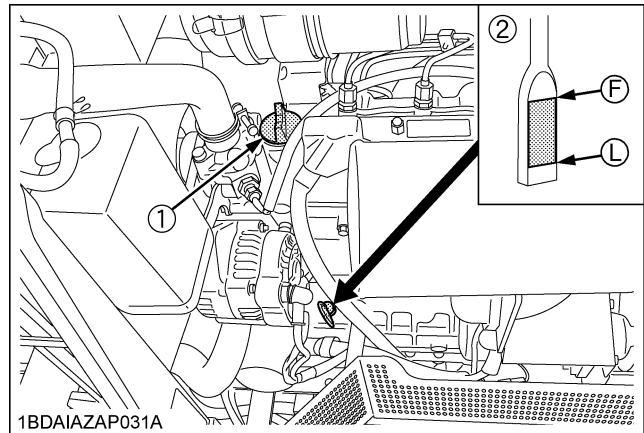

1BDIAIAZAP031A

- (1) Engine oil port (F) "UPPER LEVEL"
(2) Oil level dipstick (L) "LOWER LEVEL"

5. When using a different brand or viscosity oil from the previous one, remove all of the old oil and oil filter. Never mix 2 different types of oil.
6. Use the proper Engine Oil SAE according to the ambient temperatures. (See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)

■ Checking Amount of Fuel and Refueling

⚠ WARNING

To avoid serious injury or death:

- Handle fuel carefully. If the engine is running, do not fill the fuel tank. If engine is hot, let engine cool several minutes before adding fuel. Do not smoke while filling the fuel tank or servicing the fuel system. Fill fuel tank only to bottom of filler neck.

IMPORTANT :

- Do not permit dirt or trash to get into the fuel system.
- Be careful not to let the fuel tank become empty, otherwise air will enter the fuel system, this will require bleeding before next engine start.
- If the engine runs out of fuel and stalls, the engine components may be damaged.
- Be careful not to spill during refueling. If a spill should occur, wipe it off at once, or it may cause a fire.
- To prevent condensation (water) accumulation in the fuel tank, fill the tank before parking overnight.




1BDABARAP121A

Check the fuel level. Take care that the fuel tank does not become empty.

Fuel tank capacity	61 L
--------------------	------

IMPORTANT :

- Use Diesel Fuel Only
1. Use No.2 diesel fuel.
 2. Use No.1 diesel fuel if the temperature is below -10 °C .
 3. Always use a strainer when refueling to prevent fuel injection pump contamination.

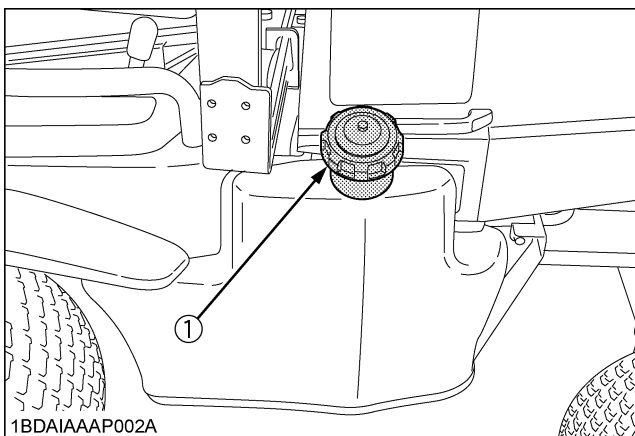

1BDAIAAAP002A

(1) Fuel port

■ Checking and Cleaning Radiator Screen and Bonnet Screen to Prevent Overheating



WARNING

To avoid serious injury or death:

- Be sure to stop the engine and remove the key before cleaning.


IMPORTANT :

- The air intake area must be clear of debris to prevent the engine from overheating.


Daily or after every 5 hours of operation, check to be sure the radiator screen and the bonnet screen are clean.

Dirt or chaff on the radiator screen or bonnet screen decrease cooling performance.

1. Remove the radiator screen and the bonnet screen, and remove all foreign material.
2. Remove the dust from between the fins and the tube.
3. Tighten the fan drive belt as necessary. For this, refer to "EVERY 100 HOURS" in "PERIODIC SERVICE" section.
4. If the scale forms in the tube, clean with the scale inhibitor or its equivalent.
5. Each time the bonnet screen is covered with grass during operation, rub it off the screen with the hand. Check the radiator screen from time to time if grass accumulates.

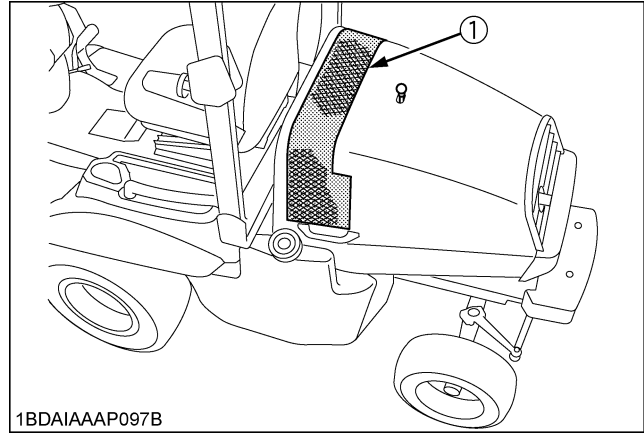

(1) Bonnet screen

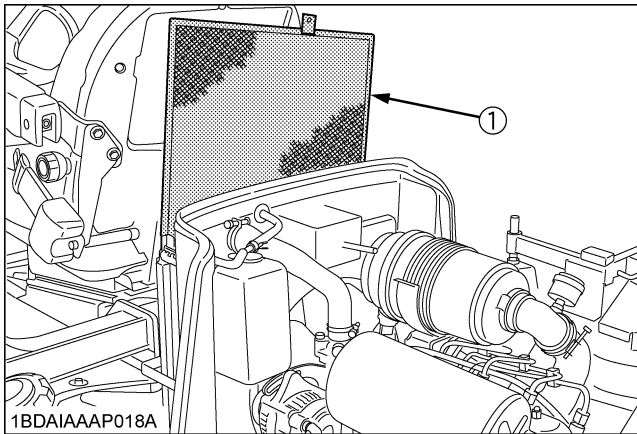

(1) Radiator screen

■ Checking Tire Pressure

WARNING


To avoid serious injury or death:

- Do not attempt to mount a tire on a rim. This should be done by a qualified person with the proper equipment.
- Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure shown in the Operator's Manual.
- Never operate machine with a loose rim, wheel, or axle.
Whenever bolts are loosened, retighten to specified torque.
Check all bolts frequently and keep them tightened.

◆ Inflation Pressure

Though the inflation pressure is factory-set to the prescribed level, it naturally drops slowly in the course of time. Thus, check it everyday and inflate as necessary.


		Tire sizes	Recommended Inflation Max. Pressure
Front	F2890E	23 x 10.5 - 12, 4PR	140 kPa (1.4 kgf/cm ²)
	F3090 F3890	24 x 12 - 12, 4PR	
Rear	F2890E	16 x 6.5 - 8, 4PR	190 kPa (1.9 kgf/cm ²)
	F3090 F3890	18 x 9.5 - 8, 6PR	250 kPa (2.5 kgf/cm ²)

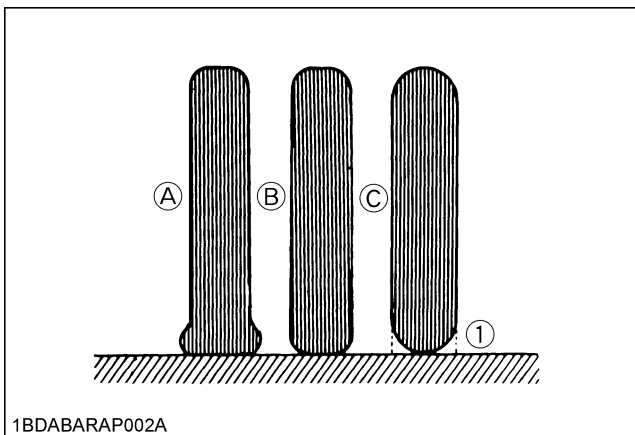

(1) Ground
(A) "INSUFFICIENT"
(B) "NORMAL"
(C) "EXCESSIVE"

■ Checking Transmission Fluid Level

1. Park the machine on a flat surface, lower the implement to the ground, shut off the engine and remove the key.
2. To check the oil level, draw out the dipstick, wipe it clean, replace it, and draw it out again. Check to see that the oil level lies between the 2 notches.
If the level is too low, add new oil to the prescribed level at the oil inlet.
(See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)

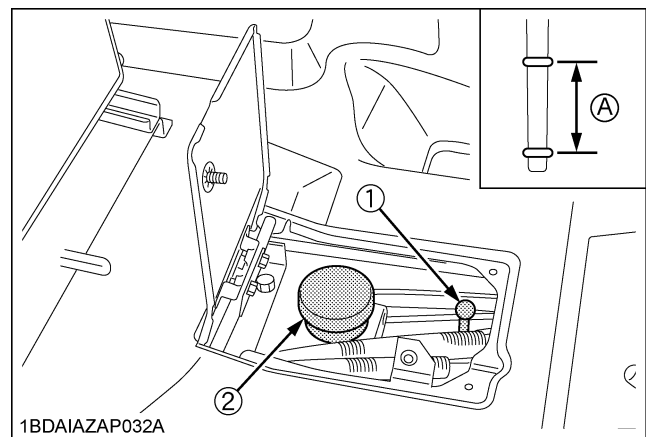

(1) Oil level dipstick
(2) Oil inlet
(A) Oil level is acceptable within this range.

IMPORTANT :

- If oil level is low, do not run the engine.

■ Checking Coolant Level



WARNING

To avoid serious injury or death:



- Do not remove the radiator cap when the engine is hot. Loosen cap slightly, to the stop, to relieve any excess pressure before removing cap completely.

Check the coolant level daily both the radiator and the recovery tank before starting engine.

1. Remove the radiator cap and check to see that the coolant level is just below the fill port.
2. Check to see that the coolant level is between the "FULL" and "LOW" marks of recovery tank.
3. When the coolant level drops due to evaporation, add water only up to just below the fill port of the radiator and the full level of the recovery tank.

In case of leakage, add anti-freeze and water in the specified mixing ratio up to the full level.

(See "Flush Cooling System and Changing Coolant" in "EVERY 2000 HOURS or EVERY 2 YEARS" in "PERIODIC SERVICE" section.)

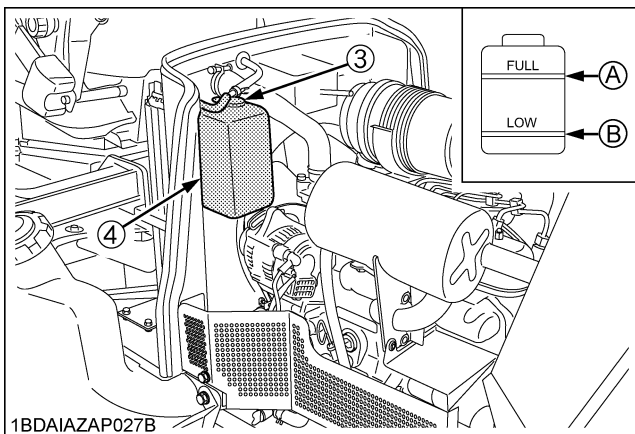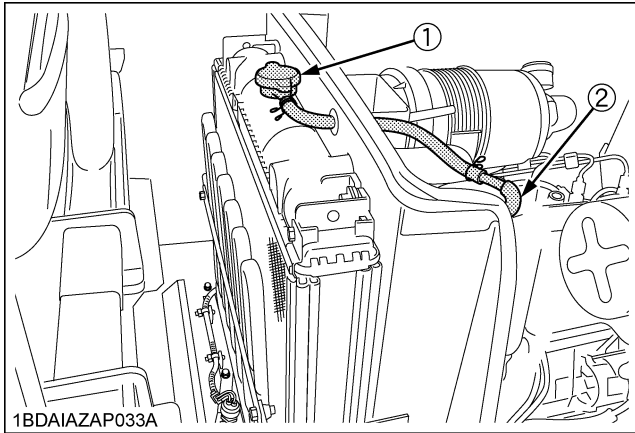

- (1) Radiator cap
 (2) Over flow pipe
 (3) Recovery tank cap
 (4) Recovery tank

- (A) "FULL"
 (B) "LOW"

IMPORTANT :

- If the radiator cap has to be removed, follow the caution above and securely retighten the cap.
- Use clean, distilled water and anti-freeze to fill the radiator and the recovery tank.
- If water should leak, consult your local KUBOTA Dealer.

■ Checking Movable Parts

If any of the movable parts, such as levers and pedals, is not smoothly moved because of rust or anything sticky, do not attempt to force it into motion.

In the above case, remove the rust or the sticky object, and apply oil or grease on the relevant spot. Otherwise, the machine may get damaged.

EVERY 50 HOURS

■ Checking Engine Start System

The Engine Start System in your machine is designed to protect you while operating. Check the Engine Start System periodically. It is recommended to check the Engine Start System before daily operation.



WARNING

To avoid serious injury or death:

- Do not allow anyone near the machine while testing.
- If the machine does not pass one of the following tests, do not operate the machine. See your local KUBOTA Dealer.
- Sit on operator's seat for all tests except for Test1.

IMPORTANT :

- Check the following tests before operating the machine.

Test 1: Switch for the operator's seat

1. Do not sit on the operator's seat.
2. Depress the brake pedal fully.
3. Shift the PTO lever to the "DISENGAGE" position.
4. Turn the key switch to the "START" position.
5. The engine must not crank.

Test 2: Switch for the brake pedal


1. Sit on the operator's seat.
2. Do not depress the brake pedal.
3. Shift the PTO lever to the "DISENGAGE" position.
4. Turn the key switch to the "START" position.
5. The engine must not crank.

Test 3: Switch for the PTO lever

1. Sit on the operator's seat.
2. Depress the brake pedal fully.
3. Shift the PTO lever to the "ENGAGE" position.
4. Turn the key switch to the "START" position.
5. The engine must not crank.

Test 4: Engine Safety Control

1. Open the hood.
2. Sit on the operator's seat.
3. Depress the brake pedal fully.
4. Turn the key to the "START" position.
5. The engine should not crank.

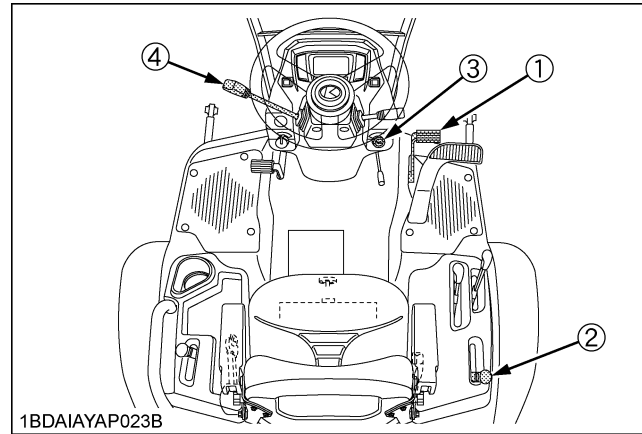

- (1) Brake pedal
 (2) PTO lever
 (3) Key switch
 (4) Throttle lever

■Checking OPC System

The OPC (Operator Presence Control) system in your machine is designed to protect you while operating. Check the OPC system periodically. It is recommended to check the OPC system before daily operation.



WARNING

To avoid serious injury or death:

- Do not allow anyone near the machine while testing.
- If the machine does not pass one of the following tests, do not operate the machine. See your local KUBOTA Dealer.

IMPORTANT :

- Check the following tests before operating the machine.

Test 1:


1. Start the engine.
2. Shift the PTO lever to the "DISENGAGE" position.
3. Release the brake pedal.
4. Stand up. (DO NOT GET OFF THE MACHINE.)
5. The engine must shut off.

Test 2:

1. Start the engine.
2. Shift the PTO lever to the "ENGAGE" position.
3. Release the brake pedal.
4. Stand up. (DO NOT GET OFF THE MACHINE.)
5. The engine must shut off.

Test 3:

1. Start the engine.
2. Depress the brake pedal fully and lock the parking brake.
3. Shift the PTO lever to the "ENGAGE" position.
4. Stand up. (DO NOT GET OFF THE MACHINE.)
5. The engine must shut off.

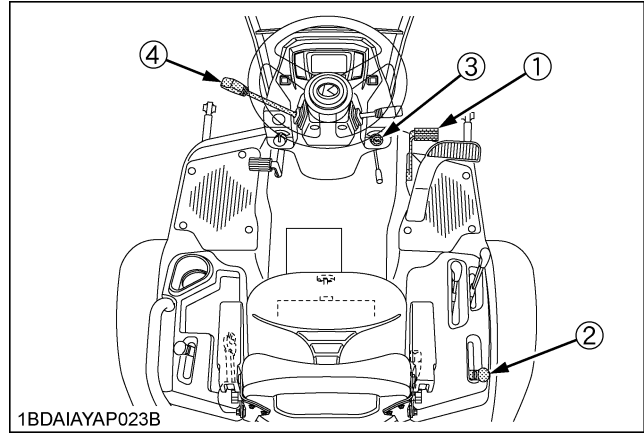

1BDAIAYAP023B

- (1) Brake pedal
- (2) PTO lever
- (3) Key switch
- (4) Throttle lever

■Lubricating All Grease Fittings




WARNING

To avoid serious injury or death:

- Be sure to stop the engine and remove the key before greasing.


Grease the following location.

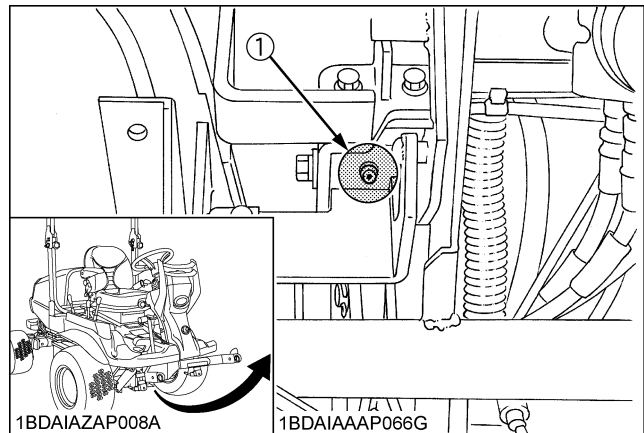


1BDAIAZAP008A

1BDAIAAAP066G


- (1) Speed control pedal shaft

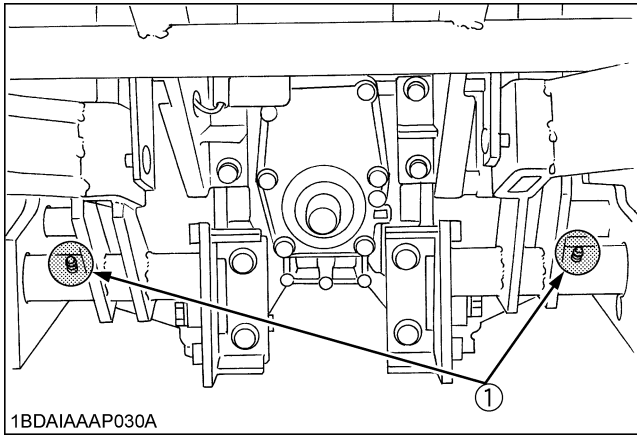


(1) Lift link boss (RH & LH)

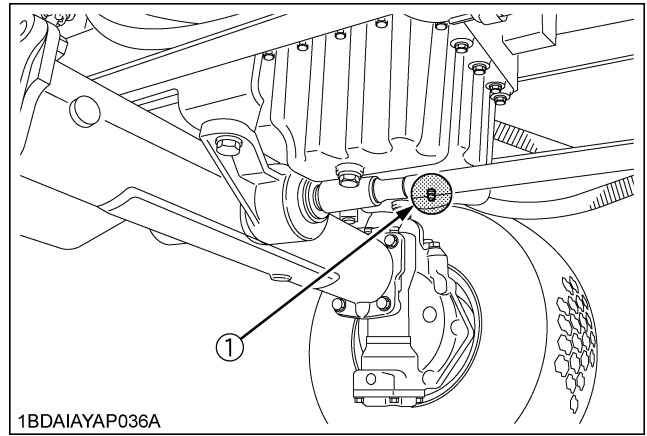


(1) Rear wheel drive shaft (4WD) (Rear side)

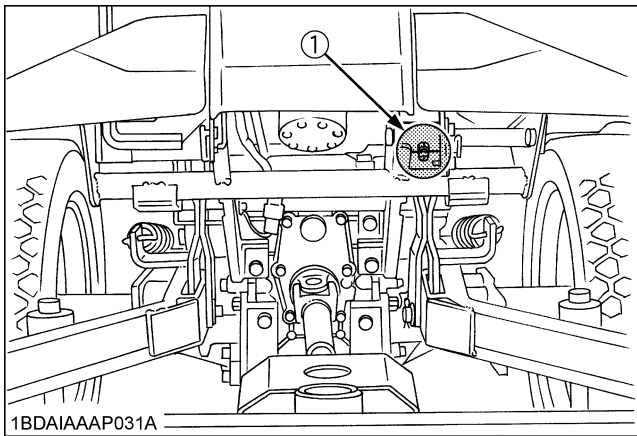


(1) Differential lock pedal boss

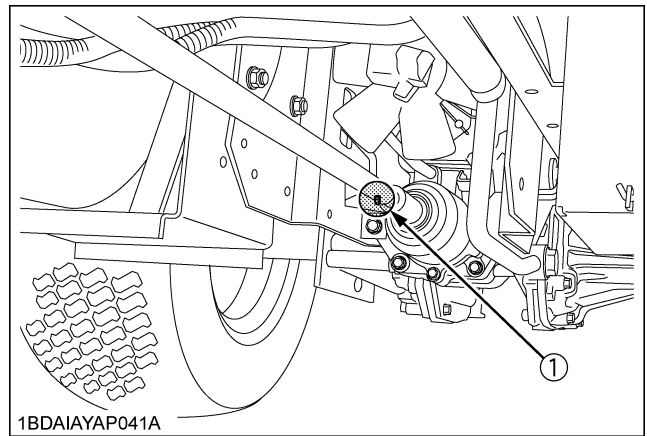

(1) Rear wheel drive shaft (4WD) (Front side)

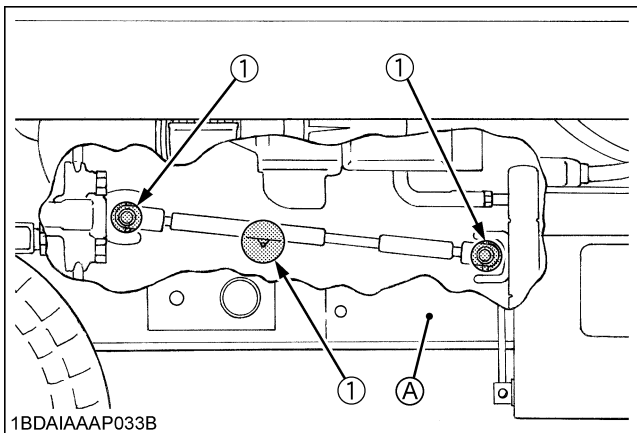

(1) Universal joint (A) Frame

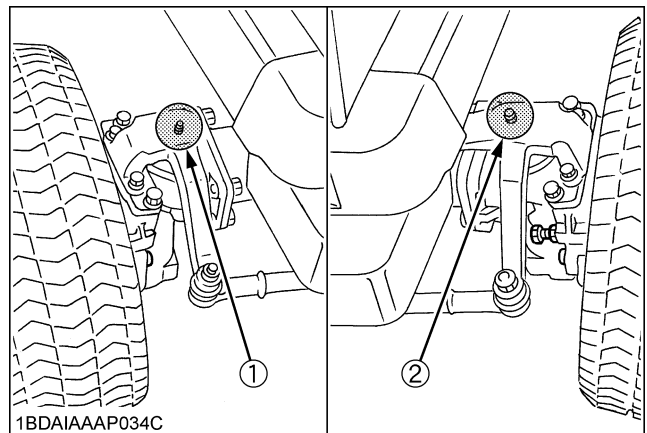

(1) Knuckle arm (Left)
(2) Knuckle arm (Right)

NOTE :

- Apply grease to the indicated points of the universal joint that is inside of the frame.


■ Oiling

! WARNING


To avoid serious injury or death:

- Be sure to stop the engine and remove the key before oiling.

Oil the following locations.

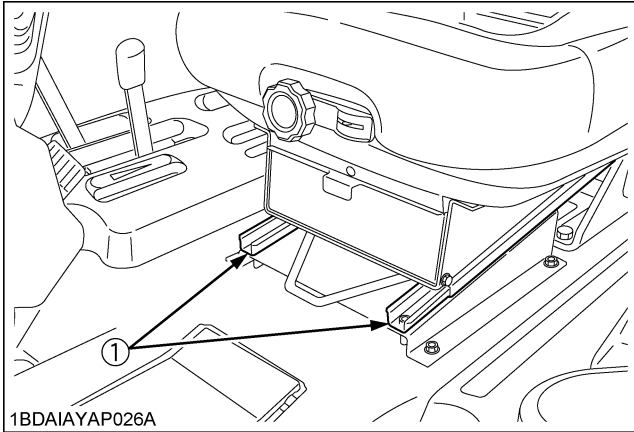

(1) Seat adjuster

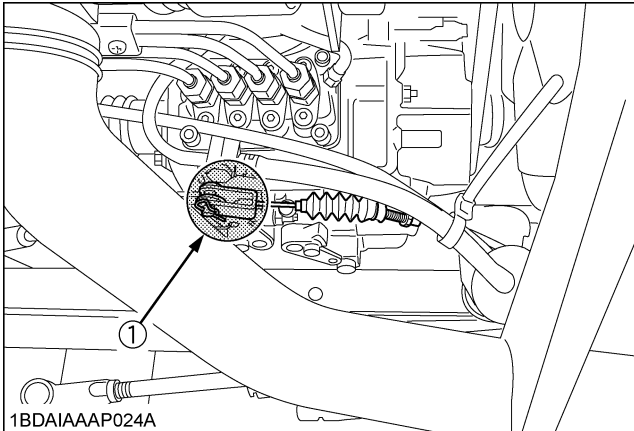

(1) Throttle cable


■ Checking Wheel Bolt Torque

! WARNING

To avoid serious injury or death:

- Never operate machine with a loose rim, wheel, or axle.
- Any time bolts and nuts are loosened, retighten to specified torque.
- Check all bolts and nuts frequently and keep them tight.

Check wheel bolts and nuts regularly especially when new. If they are loose, tighten them as follows.

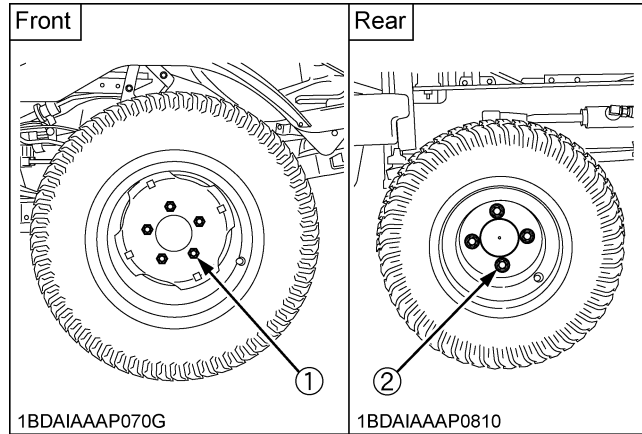

(1) Nut: 48.1 to 55.9 N-m (4.9 to 5.7 kgf-m)

(2) Nut: 69.0 to 73.0 N-m (7.0 to 7.4 kgf-m)

EVERY 100 HOURS

■ Checking Battery Condition

DANGER

To avoid the possibility of battery explosion:
For the refillable type battery, follow the instructions below.

- Do not use or charge the refillable type battery if the fluid level is below the LOWER (lower limit level) mark. Otherwise, the battery component parts may prematurely deteriorate, which may shorten the battery's service life or cause an explosion. Check the fluid level regularly and add distilled water as required so that the fluid level is between the UPPER and LOWER levels.

DANGER

To avoid serious injury or death:

- When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive. Keep open sparks and flames away from the battery at all times, especially when charging the battery.

WARNING

To avoid serious injury or death:


- Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER HANDLING.
- Never remove the battery cap while the engine is running.
- Keep electrolyte away from eyes, hands and clothes. If you come in contact with the electrolyte, wash it away completely with water immediately and get medical attention.
- Keep open sparks and flames away from the battery at all times. Hydrogen gas mixed with oxygen becomes very explosive.
- Wear eye protection and rubber gloves when working around battery.

The factory-installed battery is of non-refillable type. If the battery is weak, charge the battery or replace it with new one.

Mishandling the battery shortens the service life and adds to maintenance costs.

The original battery is maintenance free, but needs some servicing.

If the battery is weak, the engine will be difficult to start and the lights will be dim. It is important to check the battery periodically.

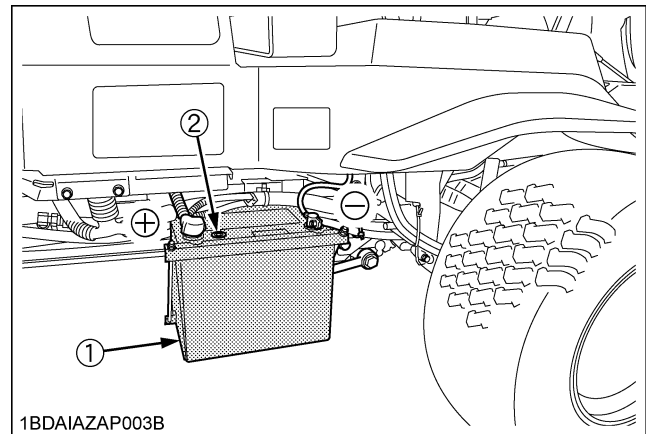

1BDIAZAP003B

- (1) Battery
- (2) Indicator

◆ How to read the indicator

Check the battery condition by reading the indicator.

State of indicator display	
Green	Specific gravity of electrolyte and quality of electrolyte are both in good condition.
Black	Needs charging battery.
White	Needs replacing battery.

◆ Battery Charging

DANGER

To avoid serious injury or death:

- When the battery is being activated, hydrogen and oxygen gases in the battery are extremely explosive. Keep open sparks and flames away from the battery at all times, especially when charging the battery.

WARNING

To avoid serious injury or death:

- When charging the battery, ensure the vent caps are securely in place. (if equipped)
- When disconnecting the cable from the battery, start with the negative terminal first.
When connecting the cable to the battery, start with the positive terminal first.
- Never check battery charge by placing a metal object across the posts.
Use a voltmeter or hydrometer.

1. To slow charge the battery, connect the battery positive terminal to the charger positive terminal and the negative to the negative, then recharge in the standard fashion.
2. A boost charge is only for emergencies. It will partially charge the battery at a high rate and in a short time. When using a boost-charged battery, it is necessary to recharge the battery as early as possible. Failure to do this will shorten the battery's service life.
3. The battery is charged if the indicator display turns green from black.
4. When exchanging an old battery for a new one, use battery of equal specification shown in **table 1**.

[TABLE 1]


Battery Type	Volts (V)	Capacity at 5 H.R (Ah)	Reserve Capacity (min)	Cold Cranking Amps	Normal Charging Rate (A)
80D26R	12	55	133	582	5.5

◆ Direction for Storage

1. When storing the machine for a long period, remove the battery from machine, adjust the electrolyte to the proper level and store in a dry place out of direct sunlight.
2. The battery self-discharges while it is stored. Recharge it once every 3 months in hot seasons and once every 6 months in cold seasons.
3. Nut size for the battery terminals: (+)10 mm (-)10 mm

■ Cleaning Air Cleaner Element

1. Remove the element.
2. Clean the element:
 - (1) When dry dust adheres to the element, blow compressed air from the inside turning the element. Pressure of compressed air must be under 205 kPa (2.1 kgf/cm²).
 - (2) When carbon or oil adheres to the element, soak the element in detergent for 15 minutes, and then wash it several times in water, rinse with clean water and dry it naturally.
 - (3) After element is fully dried, inspect the inside of the element with a light and check if it is damaged or not. (referring to the instructions on the label attached to the case.)
3. Replace the air cleaner element every 1000 hours or every 1 year whichever comes faster.

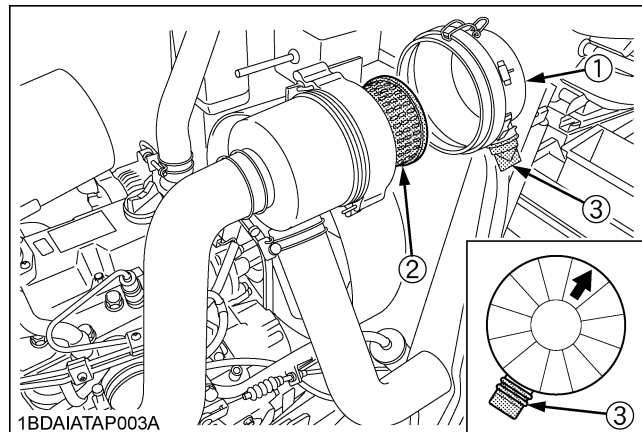

- (1) Cover
 (2) Element
 (3) Evacuator valve

IMPORTANT :

- The air cleaner uses a dry element. Never apply oil.
- Do not run the engine with the filter element removed.
- Be sure to refit the dust cup with the arrow ↑ (on the rear) upright. If the dust cup is improperly fitted, dust passes by the baffle and directly adheres to the element.

■ Checking Fuel Filter

WARNING


To avoid serious injury or death:

- Be sure to stop the engine and remove the key when attempting to make the following checks and changes.
- Never fail to check the fuel lines periodically. The fuel lines are subject to wear and aging. Fuel may leak out onto the running engine, causing a fire.


1. The fuel line is made of rubber and ages regardless of service period.
2. If the fuel line and clamps are found to be damaged or deteriorated, replace them.
3. Check fuel filter, if it is clogged by debris or contaminated with water, replace it.

IMPORTANT :


- When the fuel line is disconnected for maintenance or repair, close both ends of the fuel line with a piece of clean cloth or paper to prevent dust and dirt from entering. In addition, particular care must be taken not to admit dust and dirt into the fuel pump. Entrance of even a small amount dust or dirt cause premature wear and malfunction of the fuel pump and injector components.

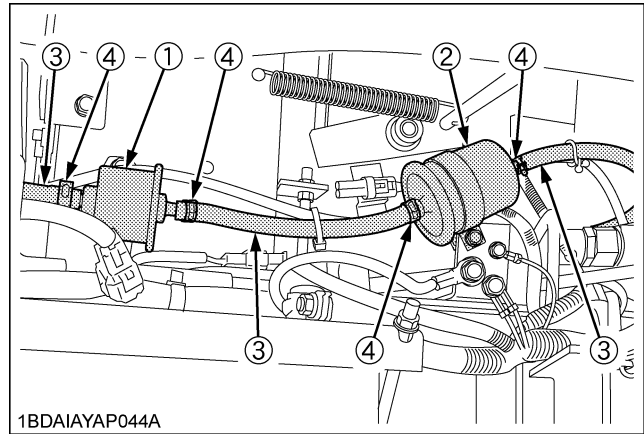

- (1) Fuel pump
- (2) Fuel filter
- (3) Fuel line
- (4) Hose clamp

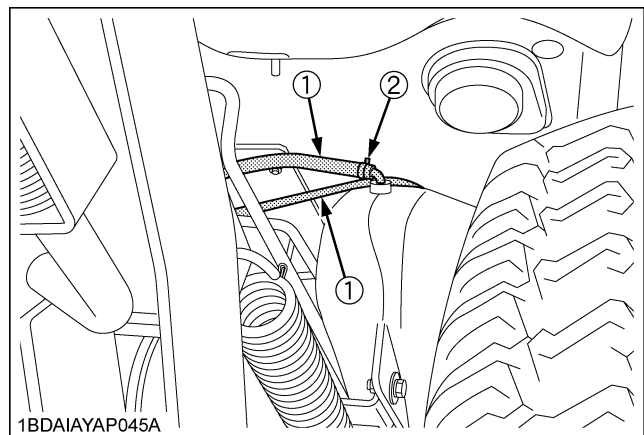

- (1) Fuel line
- (2) Hose clamp

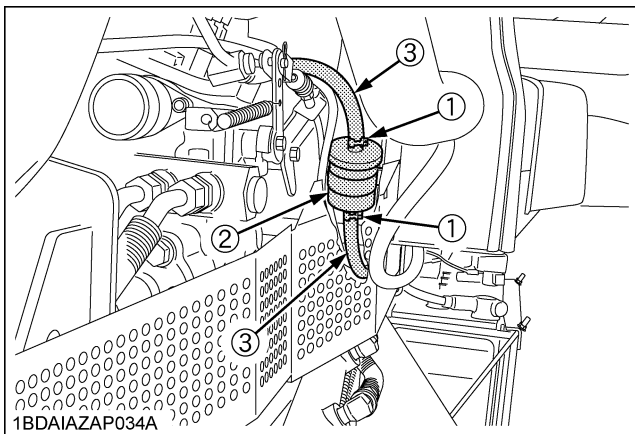

- (1) Hose clamp
- (2) Fuel filter
- (3) Fuel line

■ Checking and Adjusting Brake Pedal



WARNING


To avoid serious injury or death:

- Park the machine on a firm and level surface.
- Stop the engine and chock the wheels before checking the brake pedal.


Proper brake pedal free travel	20 to 40 mm on the pedal travel
--------------------------------	---------------------------------

NOTE :

- If the turn assist brake device is attached, adjust the brake pedal. (See Instruction manual for Turn Assist Brake Pedals.)
 - If the speed set device is attached, remove the speed set release rod before adjusting, and replace it after adjusting. (See Instruction manual for Cruise Control.)
1. Release the parking brake.
 2. Slightly depress the brake pedal and measure free travel at the top of pedal stroke.
 3. If adjustment is needed, loosen the lock nut and turn the turnbuckle to adjust the rod length within acceptable limits.
 4. Retighten the lock nut.

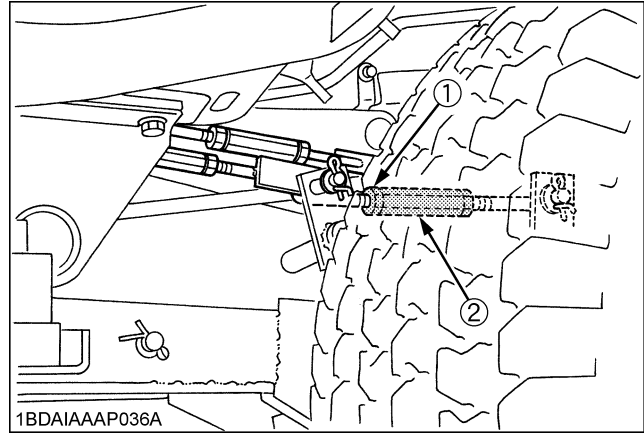

(1) Lock nut
(2) Turnbuckle

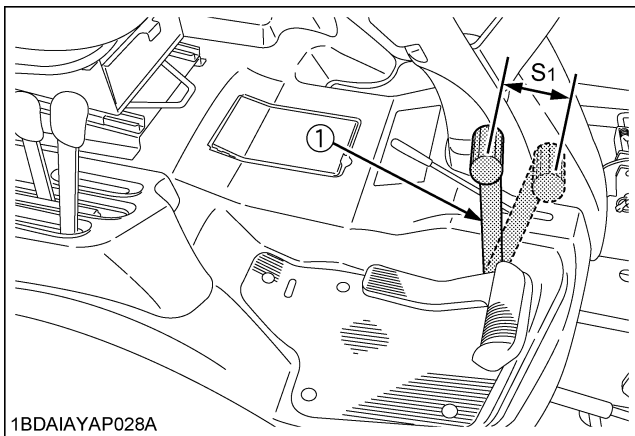

(1) Brake pedal (S₁) Free travel

■ Checking Fan Drive Belt Tension



WARNING

To avoid serious injury or death:


- When making adjustments, park the machine on a level surface, apply the parking brake, stop the engine and remove the key.

Proper fan belt tension	A deflection between 9 to 11 mm when the belt is pressed in the middle of the span.
-------------------------	---

1. Stop the engine and remove the key.
2. Apply moderate thumb pressure to the belt between pulleys.
3. If tension is incorrect, loosen the alternator mounting bolts and, using a lever placed between the alternator and the engine block, pull the alternator out until the deflection of the belt falls within the acceptable limits.
4. Replace the fan belt if it is damaged.

Moderate belt tension:

The belt should deflect approx. 10 mm when the center of the belt is depressed with finger pressure of 98 N (10 kgf).

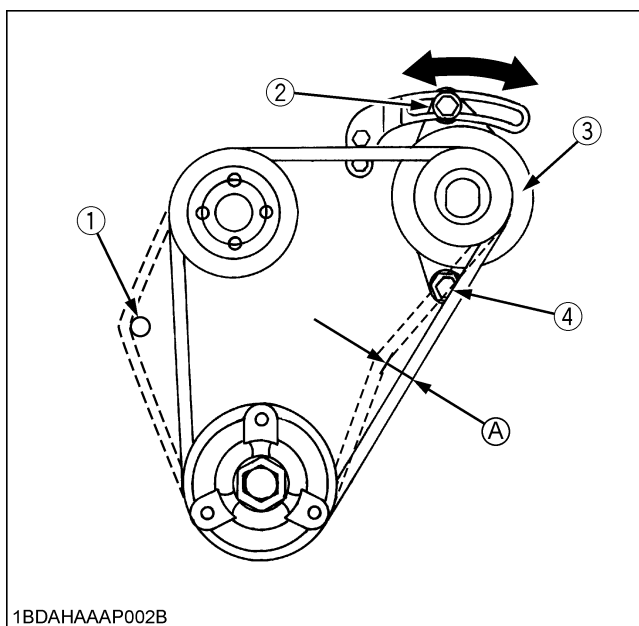

- (1) Cap
- (2) Tension bolt
- (3) Alternator
- (4) Adjusting bolt

(A) 10 mm

IMPORTANT :

- When replacing the fan drive belt, be careful not to catch it on the cap under the water pump.

EVERY 200 HOURS

■ Changing Engine Oil




WARNING

To avoid serious injury or death:

- Be sure to stop the engine and remove the key before changing the oil.
- Allow engine to cool down sufficiently; oil can be hot and may cause burns.

Oil capacity with filter	F2890E	3.5 L
	F3090, F3890	5.0 L

1. To drain the used oil, remove the drain plug at the bottom of the engine and drain the oil completely into the oil pan.
All the used oil can be drained out easily when the engine is still warm.
2. After draining reinstall the drain plug.
3. Fill with the new oil up to the center on the dipstick, between the upper and lower notch.
(See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)

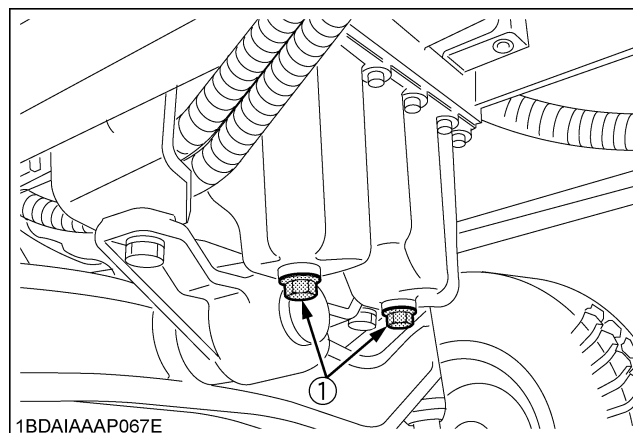

(1) Drain plug


■ Replacing Engine Oil Filter Cartridge

WARNING

To avoid serious injury or death:

- Be sure to stop the engine and remove the key before changing the oil and the oil filter cartridge.
- Allow engine to cool down sufficiently; oil can be hot and may cause burns.

1. Remove the oil filter.
2. Put a film of engine oil on the rubber seal of the new filter.
3. Tighten the filter quickly until it contacts the mounting surface.
4. Tighten the filter by hand an additional 1/2 turn only.
5. After the new filter is replaced, the engine oil normally decreases a little. Check that the engine oil does not leak through the seal and be sure to check the oil level on the dipstick.
6. Then, replenish the engine oil up to the prescribed level.

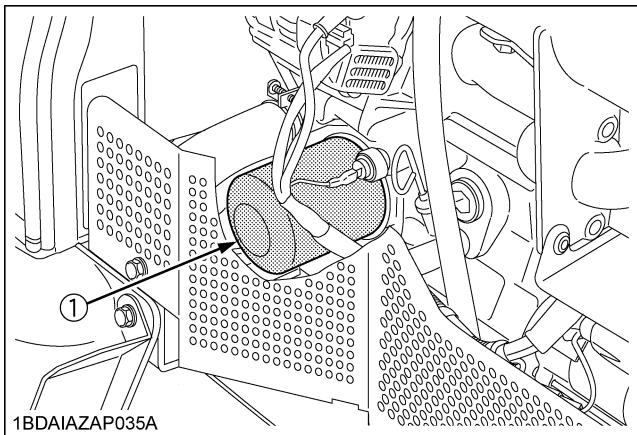

(1) Engine oil filter cartridge

IMPORTANT :

- To prevent serious damage to the engine, use only a genuine KUBOTA filter.

■ Replacing Transmission Oil Filter Cartridge

WARNING


To avoid serious injury or death:

- Be sure to stop the engine and remove the key before changing the oil filter cartridge.
- Allow transmission case to cool down sufficiently; oil can be hot and may cause burns.

1. The oil filter cartridge must be changed every 200 service hours.



(1) Oil filter cartridge

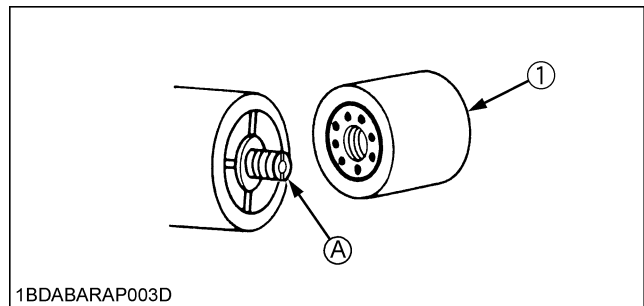

(1) Oil filter cartridge

(A) Screw

2. Remove the oil filter cartridge by using the filter wrench.
3. Apply a slight coat of oil onto the cartridge gasket.
4. To install the new cartridge, screw it in by hand. Over tightening may cause deformation of the rubber gasket.
5. After the new cartridge is replaced, the transmission fluid level normally decreases a little. Add fluid if necessary.
6. Check for oil leaks around the filter gasket.

IMPORTANT :

- To prevent serious damage to a hydraulic system, replace a highly efficient, 10 μm filter. Use only a genuine KUBOTA filter.

- When using the auxiliary hydraulics, replace the filter cartridge after initial 50 service hours of operation.

EVERY 400 HOURS

■ Changing Transmission Fluid



WARNING


To avoid serious injury or death:

- Be sure to stop the engine and remove the key before changing or checking the oil.
- Allow transmission case to cool down sufficiently; oil can be hot and may cause burns.

The fluid in the transmission case is also used for the hydrostatic drive system.


1. To drain oil, remove the drain plug at the bottom of the transmission case and drain oil completely into the oil pan.
2. After draining, reinstall the drain plug.
3. Fill with the new KUBOTA SUPER UDT fluid up to the upper notch on the dipstick.
(See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)
4. After running the engine for a few minutes, stop it and check the oil level again; add oil to the prescribed level.

Oil capacity	14 L
--------------	------

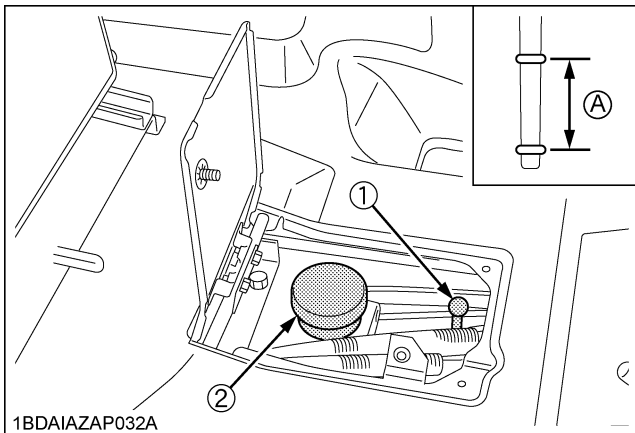

(1) Oil level dipstick
(2) Oil inlet

(A) Oil level is acceptable within this range.

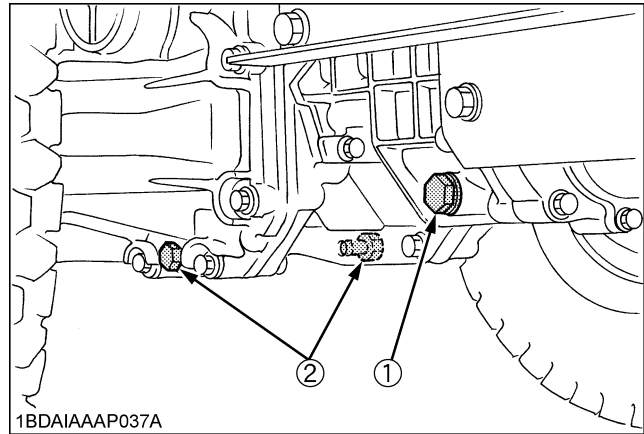

1BDAIAAAP037A


(1) Drain plug (LH)
(2) Drain plugs (Both sides)

IMPORTANT :


- Do not operate the machine immediately after changing the transmission fluid.
- Run the engine at medium speed for a few minutes to prevent damage to the transmission.

■ Cleaning Transmission Strainer

When changing the transmission fluid, remove and clean completely the oil strainers with kerosene. Be careful not to damage the strainer parts when installing.

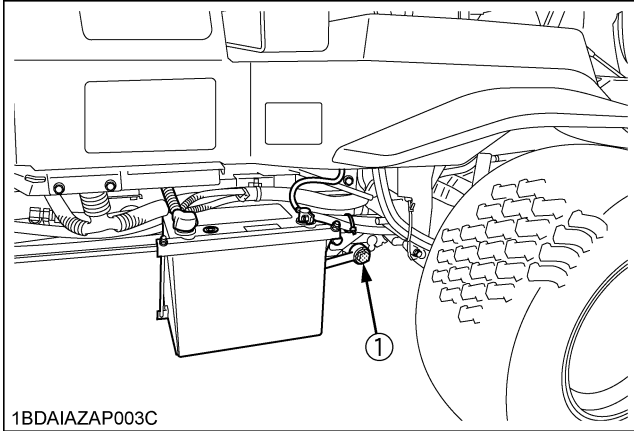

(1) Strainer

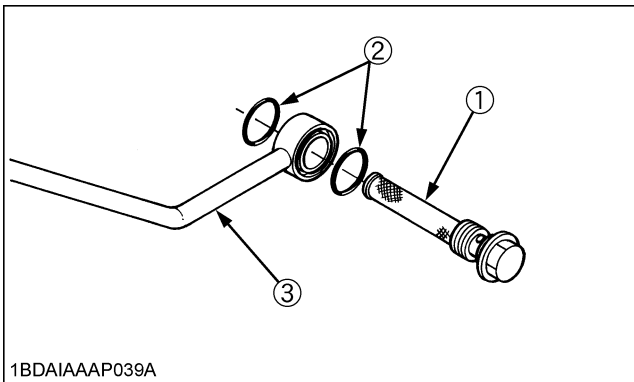

(1) Strainer
(2) O ring
(3) Suction pipe

IMPORTANT :


- The fine filings in the oil could injure the component parts of the hydraulic system, it has been precision build to withstand high pressure that the suction line end is provided within an oil strainer.

■ Changing Rear Axle Differential Case Fluid [4WD]

(See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)

Remove the drain and filling port plug. After draining, replace the drain plug and fill with new oil.

Oil capacity	1.5 L
--------------	-------

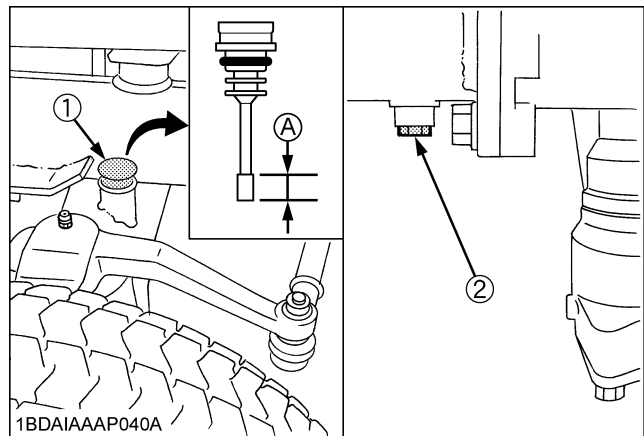


(1) Filling plug with dipstick
(2) Drain plug
(A) Oil level is acceptable within the range.

■ Changing Rear Axle Gear Case Fluid [4WD]

(RIGHT AND LEFT) (See "LUBRICANTS, FUEL AND COOLANT" in "MAINTENANCE" section.)

1. To check the oil level, remove the check plug (bolt).
 - Place the mower on a level surface. Loosen the check plug. Oil should be visible through the opening. If the oil level is too low or high, adjust it.
2. To change gear oil, remove the drain and filling port plug with the hex head wrench to drain the used oil. After draining, replace the drain plug and fill with new oil.

Oil capacity	0.5 L
--------------	-------

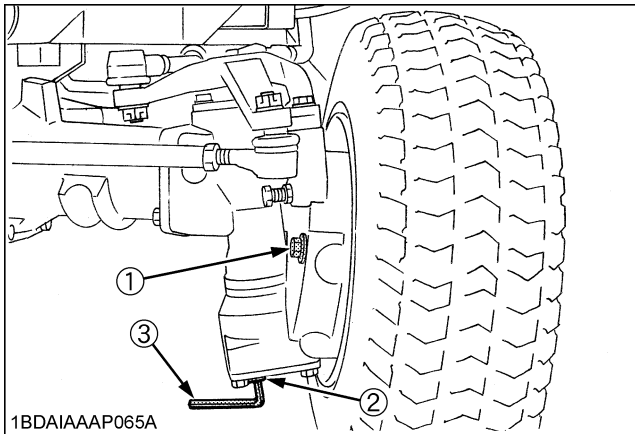


- (1) Filling and checking port plug
- (2) Drain plug
- (3) Hex head wrench

■ Adjusting Rear Axle Pivot

If the rear axle pivot pin adjustment is not correct, rear wheel vibration can occur causing vibration in the steering wheel.

◆ Adjusting procedure

Loosen the lock nut, tighten adjusting screw all the way, and then loosen the screw by 1/6 turn. Retighten the lock nut.

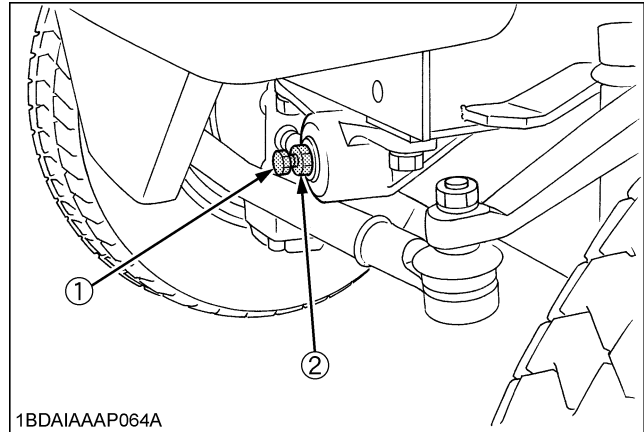

- (1) Adjusting screw
- (2) Lock nut

■ Replacing Fuel Filter

Change fuel filter every 400 hours. This should be done by your local KUBOTA Dealer.

EVERY 800 HOURS

■ Adjusting Engine Valve Clearance

Consult your local KUBOTA Dealer for this service.

EVERY 1000 HOURS or EVERY 1 YEAR

■ Replacing Air Cleaner Primary Element and Secondary Element

(See "Cleaning Air Cleaner Element" in "EVERY 100 HOURS" in "PERIODIC SERVICE" section.)

IMPORTANT :

- To prevent serious damage to the engine, use only a KUBOTA genuine filter.

EVERY 1500 HOURS

■ Checking Fuel Injection Nozzle (Injection Pressure)

Consult your local KUBOTA Dealer for this service.

EVERY 2000 HOURS or EVERY 2 YEARS

Be sure to do the following service once every 2000 hours or every 2 years whichever comes faster.

■ Flush Cooling System and Changing Coolant




WARNING

To avoid serious injury or death:

- Do not remove the radiator cap when the engine is hot. Then loosen cap slightly to the stop to relieve any excess pressure before removing cap completely.


1. Stop the engine and let it cool down.
2. To drain the coolant, remove the drain plug, and then the radiator cap. The radiator cap must be removed to completely drain the coolant.

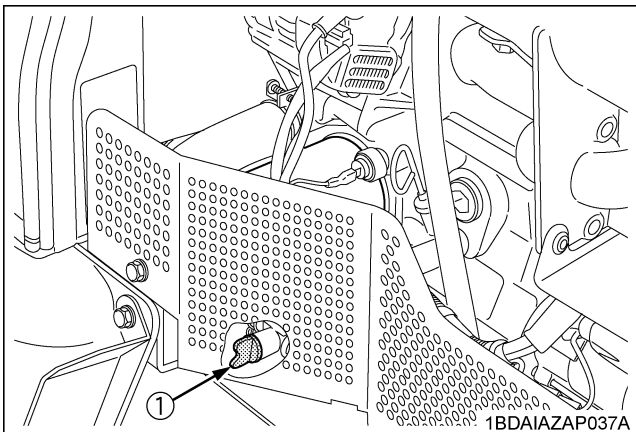

(1) Drain plug

3. After all coolant is drained, install the drain plug.
4. Fill with clean water and cooling system cleaner.
5. Follow directions of the cleaner instruction.
6. After flushing, fill with clean water and anti-freeze until the coolant level is just below the fill port on the radiator.
Install the radiator cap securely.
7. Fill with coolant up to the "FULL" mark on the recovery tank.
8. Start and operate the engine for a few minutes.
9. Stop the engine and let it cool down.
10. Check coolant level of recovery tank and add coolant if necessary.

Coolant capacity	4.6 L
Recovery tank capacity	0.6 L

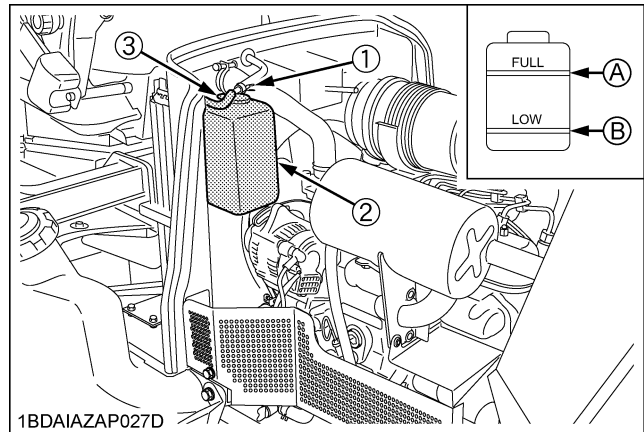

- (1) Clamp (A) "FULL"
 (2) Recovery tank (B) "LOW"
 (3) Recovery tank cap

IMPORTANT :

- Do not start engine without coolant.
- Use clean, distilled water and anti-freeze to fill the radiator and recovery tank.
- When mixing the anti-freeze with water, the anti-freeze mixing ratio is 50%.
- Securely tighten radiator cap. If the cap is loose or improperly fitted, water may leak out and the engine could overheat.

■ Anti-freeze



WARNING

To avoid serious injury or death:

- When using anti-freeze, put on some protection such as rubber gloves. (Anti-freeze contains poison.)
- If it is swallowed, seek immediate medical help. Do NOT make a person throw up unless told to do so by poison control or a health care professional. Use standard first aid and CPR for signs of shock or cardiac arrest. Call your local Poison Control Center or your local emergency number for further assistance.
- When anti-freeze comes in contact with the skin or clothing, wash it off immediately.
- Do not mix different types of Anti-freeze. The mixture can produce chemical reaction causing harmful substances.
- Anti-freeze is extremely flammable and explosive under certain conditions. Keep fire and children away from anti-freeze.
- When draining fluids from the engine, place some container underneath the engine body.
- Do not pour waste onto the grounds, down a drain, or into any water source.
- Also, observe the relevant environmental protection regulations when disposing of anti-freeze.

Always use a 50/50 mix of long-life coolant and clean soft water in KUBOTA engines.

Consult your local KUBOTA dealer concerning coolant for extreme conditions.

1. Long-life coolant (hereafter LLC) comes in several types. Use ethylene glycol (EG) type for this engine.
2. Before employing LLC-mixed cooling water, fill the radiator with fresh water and empty it again. Repeat this procedure 2 or 3 times to clean up the inside.
3. Mixing the LLC
Premix 50% LLC with 50% clean soft water. When mixing, stir it up well, and then fill into the radiator.
4. The procedure for the mixing of water and anti-freeze differs according to the make of the anti-freeze and the ambient temperature. Refer to SAE J1034 standard, more specifically also to SAE J814c.

IMPORTANT :

- When mixing the anti-freeze with water, the anti-freeze mixing ratio is 50%.

Vol % Anti-freeze	Freezing Point	Boiling Point *
	°C	°C
50	-37	108

* At 1.013 x 10⁵ Pa (760 mmHg) pressure (atmospheric).
A higher boiling point is obtained by using a radiator pressure cap which permits the development of pressure within the cooling system.

5. Adding the LLC
 - (1) Add only water if the mixture reduces in amount by evaporation.
 - (2) If there is a mixture leak, add the LLC of the same manufacturer and type in the mixing ratio 50%.
*Never add any long-life coolant of different manufacturer. (Different brands may have different additive components, and the engine may fail to perform as specified.)
6. When the LLC is mixed, do not employ any radiator cleaning agent. The LLC contains anti-corrosive agent. If mixed with the cleaning agent, sludge may build up, adversely affecting the engine parts.
7. Kubota's genuine long-life coolant has a service life of 2 years. Be sure to change the coolant every 2000 hours or every 2 years whichever comes faster.

NOTE :

- The above data represent industry standards that necessitate a minimum glycol content in the concentrated anti-freeze.

EVERY 3000 HOURS


■ **Checking Injection Pump**

Consult your local KUBOTA Dealer for this service.

EVERY 1 YEAR

■ Checking Radiator Hose and Clamp

1. If hose clamps are loose or water leaks, tighten clamps securely.
2. Replace hoses and tighten hose clamps securely, if radiator hoses are swollen, hardened or cracked.

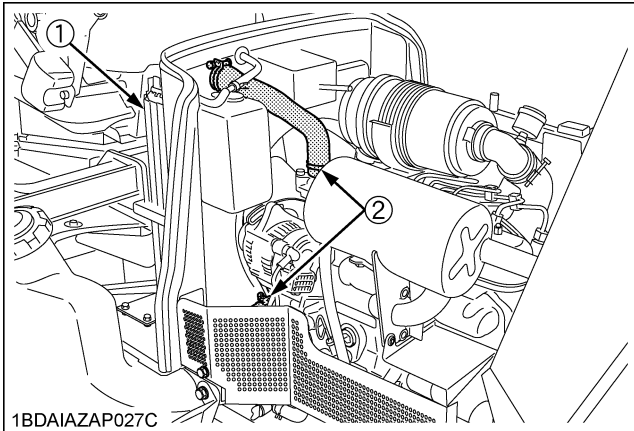

(1) Radiator core
(2) Radiator hose

■ Checking Hydraulic Hose




WARNING


To avoid serious injury or death:

- Be sure to stop the engine and remove the key before checking and replacing hydraulic hose.
- Allow transmission case to cool down sufficiently; oil can be hot and may cause burns.

1. Check to see that all lines and hose clamps are tight and not damaged.
2. If hoses and clamps are found worn or damaged, replace or repair them at once.

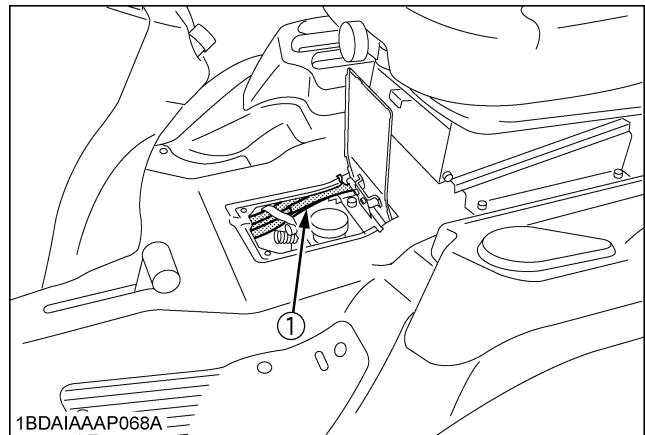

(1) Power steering hoses

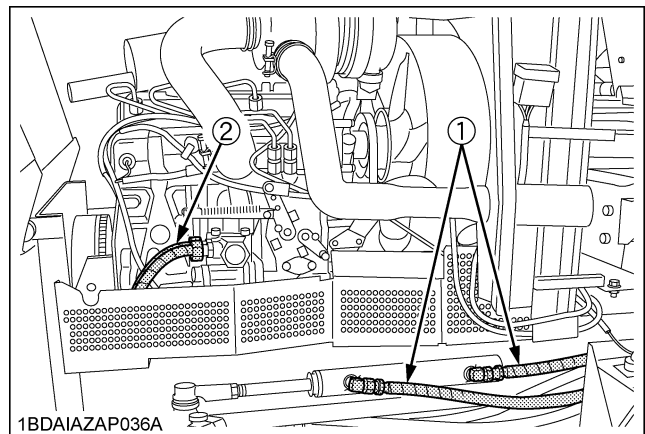


(1) Power steering hoses
(2) Pump hoses

■ Checking Fuel Lines

(See "Checking Fuel Filter" in "EVERY 100 HOURS" in "PERIODIC SERVICE" section.)

■ Checking Intake Air Line

1. Check to see that hoses and hose clamps are tight and not damaged.
2. If hoses and clamps are found worn or damaged, replace or repair them at once.

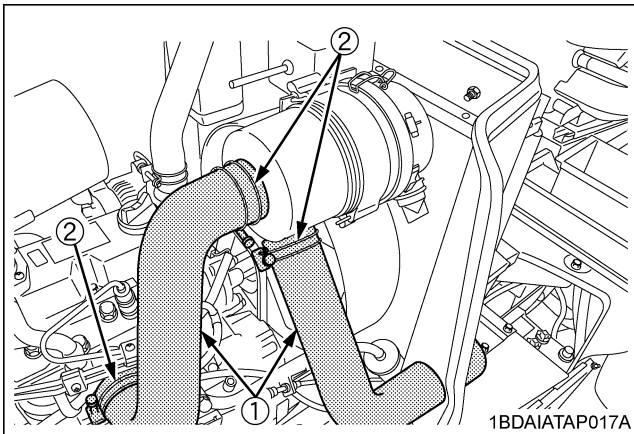

- (1) Hose
(2) Clamp

■ Checking Engine Breather Hose

Consult your local KUBOTA Dealer for this service.

EVERY 4 YEARS

■ Replacing Hydraulic Hose

Replace hoses and hose clamps if you checked and found that hoses are swollen, hardened or cracked.

Consult your local KUBOTA Dealer for this service.

■ Replacing Fuel Lines

Consult your local KUBOTA Dealer for this service.

■ Replacing Engine Breather Hose

Consult your local KUBOTA Dealer for this service.

■ Replacing Radiator Hose

Replace hoses and clamp bands if you checked and found that hoses are swollen, hardened or cracked.

Consult your local KUBOTA Dealer for this service.

■ Replacing Intake Air Line

(See "Checking Intake Air Line" in "EVERY 1 YEAR" in "PERIODIC SERVICE" section.)

SERVICE AS REQUIRED

■ Replacing Fuses

The machine electrical system is protected from potential damage by fuses.

A blown fuse indicates that there is an overload or short somewhere in the electrical system.


If any of the fuses should blow, replace with a new one of the same capacity.

IMPORTANT :


- Before replacing a blown fuse, determine why the fuse blew and make any necessary repairs. Failure to follow this procedure may result in serious damage to the machine electrical system. Refer to the "TROUBLESHOOTING" section of this manual or your local KUBOTA Dealer for specific information dealing with electrical problems.

If any of them should blow, replace with a new one of the same capacity.

Do not use a fuse that is rated for a different capacity.

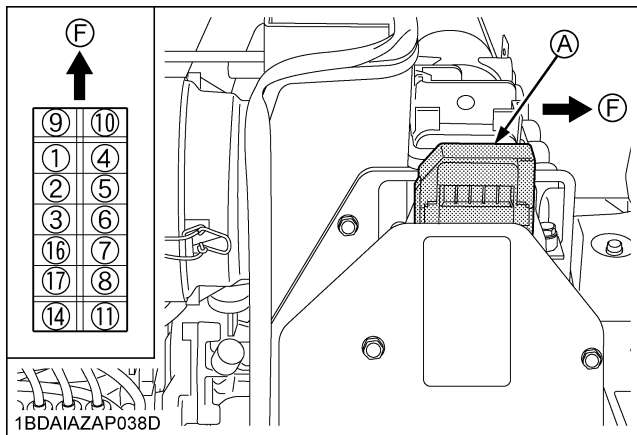


(A) Fuse box
(F) Front

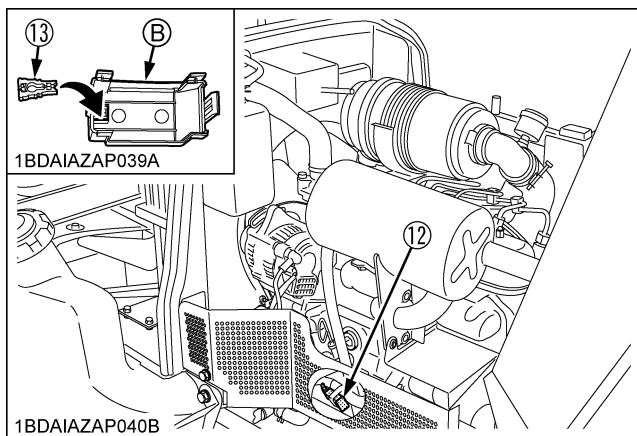

(B) Fuse box cover

If fuse No.15 is equipped

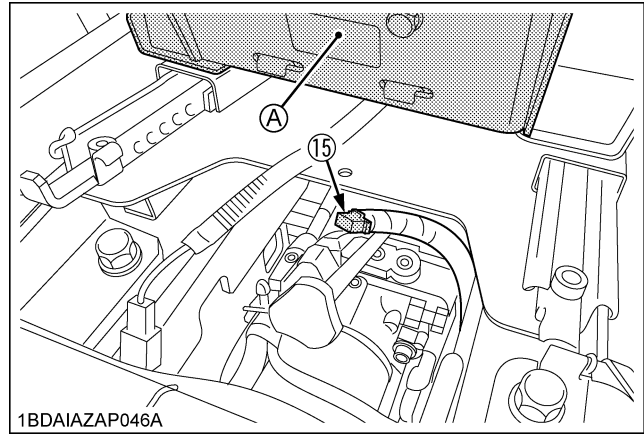

(A) Seat

* If fuse No.16 and 17 are NOT equipped,

FUSE No.	CAPACITY (A)	Protected circuit
①	10	Flasher unit +B (option)
②	10	Fuel pump/head light
③	10	OPC control/rotation sensor
④	5	Glow plug
⑤	20	Combination switch/lamp (option)
⑥	10	Brake lamp (option)
⑦	10	Flasher unit AC (option)
⑧	20	Horn relay/beacon lamp (option)/work light (option)
⑨	10	Spare
⑩	20	Spare
⑪	10	Spare
⑫	Slow blow fuse 50	Check circuit against wrong battery connection
⑬	-	Fuse puller
⑭	7.5	Spare (if equipped)
⑮	7.5	Beacon lamp (option) (if equipped)

* If fuse No.16 and 17 are equipped,

FUSE No.	CAPACITY (A)	Protected circuit
①	15	Flasher unit +B (option)
②	5	Fuel pump
③	5	OPC control/rotation sensor
④	5	Glow plug
⑤	20	Combination switch/lamp (option)
⑥	7.5	Brake lamp (option)
⑦	10	Flasher unit AC (option)
⑧	10	Horn/Head light
⑨	10	Spare
⑩	15	Spare
⑪	5	Spare
⑫	Slow blow fuse 50	Check circuit against wrong battery connection
⑬	-	Fuse puller
⑭	7.5	Spare
⑯	15	Work light (option)
⑰	7.5	Beacon lamp (option)

■ Replacing Light Bulb

1. Head light
Take the bulb out of the light body and replace with a new one.
2. Other lights
Detach the lens and replace the bulb.

Light	Capacity
Head light	55 W
Front lamp	
Front lamp LH, RH	60 W
Turning lamp LH, RH	21 W
Position lamp LH, RH	21 W
Rear lamp	
Brake lamp LH, RH	21 W
Tail lamp LH, RH	5 W
Turning lamp LH, RH	21 W
Number plate lamp	10 W
Beacon lamp	
Beacon lamp	60 W
Work lamp	35 W


■ Bleeding Fuel System

Air must be removed:

1. When the fuel filter or lines are removed.
2. When tank is completely empty.
3. After the machine has not been used for a long period of time.

◆ Bleeding procedure is as follows:

1. Fill the fuel tank with fuel.
2. Start the engine and run for about 30 seconds, and then stop the engine.
3. Open the bleed screw.
When bubbles disappear from fuel coming out of the plug, tighten the bleed screw.

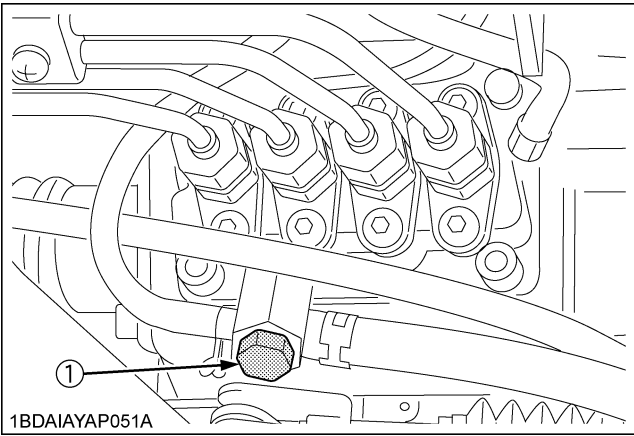


(1) Bleeding screw

■ Adjusting Lift Springs (LH & RH)

In order to help improve traction, adjust the lift springs according to the chart below.

	RCK72-F36, RCK72R-F36, RCK60-F36, RCK60R-F36, RCK54-F28
RH	L = 50 mm
LH	L = 70 mm

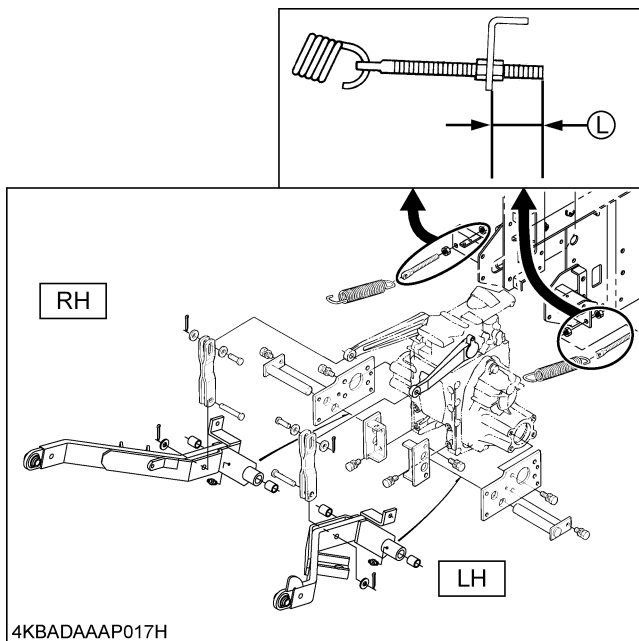

(L) RIGHT HAND: 50 mm
LEFT HAND: 70 mm

STORAGE



WARNING

To avoid serious injury or death:

- To reduce fire hazards, allow the engine and exhaust system to cool before storing the machine in an enclosed space or near combustible materials.
- To avoid the danger of exhaust fume poisoning, do not operate the engine in a closed building without proper ventilation.
- Do not clean the machine with engine running.
- To avoid fire hazards, do not leave grass and leaves in the mower and the grass catcher. (if equipped)
- When storing, remove the key from the key switch to avoid operation by unauthorized persons.

When the machine will not be operated for over 2 months, clean the machine and perform the following operations before storage.

1. Repair parts as necessary.
2. Check bolts and nuts and tighten as necessary.
3. Apply grease or engine oil to parts most likely to rust.
4. Inflate the tires to a little above the standard pressure levels. (Approximately 110%)
5. Lower the mower to the ground.
6. Remove the battery from the machine, recharge it, adjust the electrolyte to the proper level, and store in a cool dry place.
The battery discharges over time even while in storage. Recharge it once a month in hot seasons and once every 2 months in cold seasons.
7. Drain fuel tank, fuel lines.
8. Store the machine where it is dry and sheltered from rain. Cover the machine with a tarpaulin.
9. Moisture content in most grasses can damage the mower and grass catcher (if equipped) if these components are not properly cleaned after use.
Make sure the mower and the grass catcher are clean and completely empty before storage.
10. Jack the machine up and place blocks under the front and rear axles so that all 4 tires are off the ground.
Keep the tires out of direct sunlight and extreme heat.

IMPORTANT :

- When washing the machine, be sure to stop the engine. Allow sufficient time for the engine to cool before washing.
- Cover the machine after the muffler and the engine have cooled down.

REMOVING THE MOWER FROM STORAGE

1. Check the tire air pressure and inflate the tires if they are low.
2. Jack the machine up and remove the support blocks.
3. Install the battery. Before installing the battery, make sure it is fully charged.
4. Check the fan belt tension.
5. Check all fluid levels (engine oil, transmission / hydraulic oil, engine coolant and any attached implements).
6. Start the engine. Observe all gauges. If all gauges are functioning properly and reading normal, move the machine outside.
7. Once outside, park the machine and let the engine idle for at least 5 minutes.
8. Shut the engine off and walk around machine and make a visual inspection looking for evidence of oil water leaks.
9. With the engine fully warmed up, release the parking brake and test the brakes for proper adjustment as you move forward. Adjust the brakes as necessary.

TROUBLESHOOTING

ENGINE TROUBLESHOOTING


If something is wrong with the engine, refer to the table below for the cause and its corrective measure.

Trouble		Cause	Countermeasure
Engine is difficult to start or won't start.		<ul style="list-style-type: none"> No fuel flow 	<ul style="list-style-type: none"> Check the fuel tank and the fuel filter. Replace the filter if necessary.
		<ul style="list-style-type: none"> Air or water is in the fuel system. 	<ul style="list-style-type: none"> Check to see if the fuel line coupler bolt and nut are tight. Bleed the fuel system. (See "Bleeding Fuel System" as required in "PERIODIC SERVICE" section.)
		<ul style="list-style-type: none"> In winter, oil viscosity increases, and engine revolution is slow. 	<ul style="list-style-type: none"> Use oils of different viscosities, depending on ambient temperatures. Use the engine block heater. (Optional)
		<ul style="list-style-type: none"> Battery becomes weak and the engine does not turn over quick enough. 	<ul style="list-style-type: none"> Clean battery cables & terminals. Charge the battery. In cold weather, always remove the battery from the engine, charge and store it indoors. Install it on the machine only when the machine is going to be used.
Insufficient engine power		<ul style="list-style-type: none"> Insufficient or dirty fuel The air cleaner is clogged. 	<ul style="list-style-type: none"> Check the fuel system. Clean or replace the element.
Engine stops suddenly.		<ul style="list-style-type: none"> Insufficient fuel 	<ul style="list-style-type: none"> Refuel. Bleed the fuel system if necessary.
Exhaust fumes are colored.	Black	<ul style="list-style-type: none"> Fuel quality is poor. Too much oil The air cleaner is clogged. 	<ul style="list-style-type: none"> Change the fuel and fuel filter. Check the proper amount of oil. Clean or replace the element.
	Blue white	<ul style="list-style-type: none"> The inside of exhaust muffler is damp from fuel. Injection nozzle trouble Fuel quality is poor. 	<ul style="list-style-type: none"> Heat the muffler by applying load to the engine. Check the injection nozzle. Change the fuel and fuel filter.
Engine overheats.		<ul style="list-style-type: none"> Engine overloaded 	<ul style="list-style-type: none"> Shift to lower gear or reduce load.
		<ul style="list-style-type: none"> Low coolant level 	<ul style="list-style-type: none"> Fill cooling system to the correct level; check the radiator and hoses for loose connections or leaks.
		<ul style="list-style-type: none"> Loose or damaged fan belt 	<ul style="list-style-type: none"> Adjust or replace fan belt.
		<ul style="list-style-type: none"> Dirty radiator screen or bonnet screen 	<ul style="list-style-type: none"> Remove all trash.
		<ul style="list-style-type: none"> Coolant flow route corroded 	<ul style="list-style-type: none"> Flush cooling system.

If you have any questions, contact your local KUBOTA Dealer.

POWER TRAIN TROUBLE SHOOTING

If something is wrong with the power train, the master system warning indicator starts blinking and the error code shown below is displayed on the liquid crystal display, indicating the location of the trouble. If an error code appears, immediately contact your local KUBOTA Dealer for repairs.

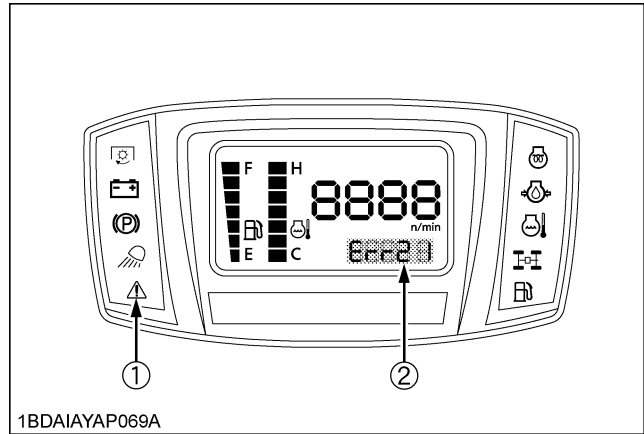

(1) Master system warning indicator
 (2) Error code

Displayed error code	Trouble	Operator's action
Err 1	Water temperature sensor trouble	Contact your local KUBOTA Dealer.
Err 2	Fuel sensor trouble	
Err 3	Meter panel memory reading trouble	

BATTERY TROUBLESHOOTING

Trouble	Cause	Remedy	Preventive measure
Starter does not function.	<ul style="list-style-type: none"> ● Battery overused until lights are dim. 	<ul style="list-style-type: none"> ● Charge the battery sufficiently. 	<ul style="list-style-type: none"> ● Charge the battery properly.
	<ul style="list-style-type: none"> ● Battery has not been recharged. 		
	<ul style="list-style-type: none"> ● Poor terminal connection 	<ul style="list-style-type: none"> ● Clean the terminal and tighten securely. 	<ul style="list-style-type: none"> ● Keep the terminal clean and tight. Apply grease and treat with anticorrosive.
	<ul style="list-style-type: none"> ● Battery life expired. 	<ul style="list-style-type: none"> ● Replace the battery. 	
From beginning starter does not function, and lights soon become dim.	<ul style="list-style-type: none"> ● Insufficient charging 	<ul style="list-style-type: none"> ● Charge the battery sufficiently. 	<ul style="list-style-type: none"> ● Battery must be serviced properly before initial use.
When viewed from top, the top of plates looks whitish.	<ul style="list-style-type: none"> ● Battery was used with an insufficient amount of electrolyte. 	<ul style="list-style-type: none"> ● Add distilled water and charge the battery. 	<ul style="list-style-type: none"> ● Regularly check the electrolyte level.
	<ul style="list-style-type: none"> ● Battery was used too much without recharging. 	<ul style="list-style-type: none"> ● Charge the battery sufficiently. 	<ul style="list-style-type: none"> ● Charge the battery properly.
Recharging is impossible.	<ul style="list-style-type: none"> ● Battery life expired. 	<ul style="list-style-type: none"> ● Replace the battery. 	
Terminals are severely corroded and heat up.	<ul style="list-style-type: none"> ● Poor terminal connection 	<ul style="list-style-type: none"> ● Clean the terminal and tighten securely. 	<ul style="list-style-type: none"> ● Keep the terminal clean and tight. Apply grease and treat with anticorrosive.
Battery electrolyte level drops rapidly.	<ul style="list-style-type: none"> ● There is a crack or pin holes in the electrolytic cells. 	<ul style="list-style-type: none"> ● Replace the battery. 	

If you have any questions, contact your local KUBOTA Dealer.

MACHINE TROUBLESHOOTING

Trouble	Cause	Counter measure
Machine operation is not smooth.	<ul style="list-style-type: none"> ● Hydrostatic transmission fluid is insufficient. ● Filter is clogged. ● Strainer is clogged. 	<ul style="list-style-type: none"> ● Replenish oil. ● Replace the filter. ● Clean the strainer.
Machine does not move while engine is running.	<ul style="list-style-type: none"> ● Parking brake is on. ● Transmission fluid level is insufficient. 	<ul style="list-style-type: none"> ● Release the parking brake. ● Replenish oil.
Machine moves when speed control pedal is not depressed. (Engine is operated.)	<ul style="list-style-type: none"> ● Hydrostatic lever linkage is not correctly adjusted. 	<ul style="list-style-type: none"> ● Ask your dealer for hydrostatic lever linkage adjustment or pressure adjustment.

If you have any questions, contact your local KUBOTA Dealer.

APPENDIX

SOUND AND VIBRATION MEASUREMENTS

◆ Sound Pressure Level Measured Per ISO5395

Model	Engine max speed	A-weighted emission sound pressure level at the operator position	Uncertainty K
F2890E-EU	3100 to 3200 min ⁻¹ (rpm)	89.9 dB (A)	2.2 dB (A)
F3090-EU	3100 to 3200 min ⁻¹ (rpm)	90.2 dB (A)	2.2 dB (A)
F3890-EU	3100 to 3200 min ⁻¹ (rpm)	89.3 dB (A)	2.2 dB (A)

◆ Hand/Arm Vibration Level Measured Per ISO5395

Model	Engine max speed	Hand-Arm Vibration	Uncertainty K
F2890E-EU	3100 to 3200 min ⁻¹ (rpm)	2.0 m/s ²	0.5 m/s ²
F3090-EU	3100 to 3200 min ⁻¹ (rpm)	2.5 m/s ²	0.5 m/s ²
F3890-EU	3100 to 3200 min ⁻¹ (rpm)	3.4 m/s ²	0.5 m/s ²

NOTE :

- The published measurements were obtained through actual field data according to the standard test procedure in EN ISO 5395-1:2013/A1:2018.

The level when in use is dependent on the operating environment, driving style and condition of the machine.
Wear the appropriate hearing protection following its manufacturer's instructions.

◆ Whole Body Vibration Level Measured Per ISO5395

Model	Engine max speed	Whole Body Vibration	Uncertainty K
F2890E-EU	3100 to 3200 min ⁻¹ (rpm)	0.36 m/s ²	0.13 m/s ²
F3090-EU	3100 to 3200 min ⁻¹ (rpm)	0.49 m/s ²	0.13 m/s ²
F3890-EU	3100 to 3200 min ⁻¹ (rpm)	0.44 m/s ²	0.13 m/s ²

NOTE :

- The published measurements were obtained according to the standard test procedure in EN ISO 5395-1:2013/A1:2018.
The level when in use is dependent on the operating environment, driving style and condition of the machine.
Take steps to reduce vibration. eg. correct tire pressure, reducing speed over rough ground.

INDEX

4WD Lock Lever.....	21	Intake Air Line.....	59
Adjustment of Foldable ROPS	17	Key Switch.....	11
Air Cleaner Element	48	Lift Link Lowering Speed Control Knob	20
Air Cleaner Primary Element and Secondary Element	56	Lift Springs (LH & RH)	62
Amount of Fuel and Refueling.....	39	Light Bulb.....	61
Anti-freeze	57	Lubricating All Grease Fittings.....	44
Battery Condition.....	47	Lubricating Oil for New Machines	15
Block Heater (Option).....	12	Machine Break-in.....	15
Brake Pedal.....	50	Movable Parts.....	42
Cold Weather Starting	12	Oiling	46
Coolant Level	42	OPC System.....	44
Coolant Temperature Gauge.....	25	Operator's Seat.....	18
Differential Lock Pedal	23	Overheat Alarm	26
Directions for Use of Power Steering	28	Parking	27
Easy Checker (TM)	24	Parking Brake	22
Engine Break-in.....	15	PTO Lever	22
Engine Breather Hose.....	59	Radiator Hose.....	59
Engine Oil.....	51	Radiator Hose and Clamp	58
Engine Oil Filter Cartridge	52	Radiator Screen and Bonnet Screen to Prevent Overheating.....	40
Engine Oil Level	38	Rear Axle Differential Case Fluid [4WD].....	54
Engine Start System.....	43	Rear Axle Gear Case Fluid [4WD].....	55
Engine Stop Lever and Fuel Valve (Inside the Hood).....	13	Rear Axle Pivot.....	55
Engine Valve Clearance.....	56	Rear Wheels (Steering Wheels)	30
Fan Drive Belt Tension.....	51	Seat Belt.....	19
Flush Cooling System and Changing Coolant.....	56	Seat Belt and ROPS	38
Front Wheels (Drive Wheels)	29	Service Code Display	26
Fuel Filter	49	Speed Control Pedal	23
Fuel Filter	55	Steering Wheel Tilt Lever	19
Fuel Gauge.....	25	Stopping	23
Fuel Injection Nozzle (Injection Pressure).....	56	Throttle Lever	22
Fuel Lines.....	59	Tire Pressure	41
Fuel System	61	To Fold the ROPS	16
Fuses.....	60	To Raise the ROPS to Upright Position.....	17
Glove Box.....	18	Transmission Fluid	53
Head Light Switch	19	Transmission Fluid Level.....	41
High-Low Gear Shift Lever	21	Transmission Oil Filter Cartridge	52
Hourmeter / Tachometer	26	Transmission Strainer.....	54
How To Mount Another Implement.....	7	Warm-up and Transmission Oil in the Low Temperature Range	12
How To Tilt Up.....	7	Wheel Bolt Torque	46
Hydraulic Hose	58		
Hydraulic Hose	59		
Hydraulic Lift Lever.....	20		
Immediately Stop the Engine if:.....	24		
Inflation Pressure	29		
Injection Pump.....	57		

EC-DECLARATION OF CONFORMITY
DECLARATION CE DE CONFORMITE
EG-KONFORMITÄTSEKLRÄRUNG



Maker:
Fabricant:
Hersteller:

KUBOTA

Authorized Representative and responsible person in the Community:
Représentant légal et personne responsable pour la communauté:
Bevollmächtigter Vertreter und für die Öffentlichkeitsarbeit verantwortliche Person:

Kazuo KOIKE
Kubota Technical Center Europe
19 a 25 rue Jules Verceuyse
95101 Argenteuil
France

Model:

F2890E / F3090 / F3890

Modèle:

Modell:

Lawn mower:

RCK54 / RCK60 / RCK72 / RCK60R / RCK72R

Tondeuse à gazon:

Mähwerk:

Serial No.:

10001~99999

N° de série:

Serien-Nr.:

Lawn mower combination	Engine		A-weighted sound power level dB(A)	Uncertainty K dB(A)	Guaranteed sound power level dB(A)	Cutting width cm	Blade speed min ⁻¹ (rpm)
	Type	min ⁻¹ (rpm)					
F2890E + RCK54	D1105	3190	102.6	1.7	104	137.5	3155
F2890E + RCK60	D1105	3190	103.3	1.5	105	152.4	2820
F2890E + RCK60R	D1105	3190	103.0	1.1	104	152.4	2820
F3090 + RCK60	D1305	3175	103.8	0.5	104	152.4	2813
F3090 + RCK72	D1305	3175	103.3	0.4	104	182.9	2501
F3090 + RCK60R	D1305	3175	103.4	1.1	105	152.4	2813
F3090 + RCK72R	D1305	3175	103.4	0.6	104	182.9	2501
F3890 + RCK60	V1505	3180	103.0	1.0	104	152.4	2810
F3890 + RCK72	V1505	3180	103.3	0.6	104	182.9	2510
F3890 + RCK60R	V1505	3180	102.6	1.9	104	152.4	2810
F3890 + RCK72R	V1505	3180	102.5	0.9	103	182.9	2510

Kubota Corporation keeps technical documentation.

64, Ishizu-Kita, Sakai-ku, Sakai-City, Osaka, Japan 590-0823

Notified Body:
Organisme notifié:
Benannte Stelle:

**Société Nationale de Certification
et d'Homologation**
11, route de Luxembourg
L-5230 Sandweiler

This machine complies with the essential health and safety requirements relating to design and construction of machinery, according to EC directive 2006/42/EC and conform to the directive 2000/14/EC amended by 2005/88/EC (ANNEX VI) and also complied with the electromagnetic compatibility according to EC directive 2014/30/EU and the restriction of the use of certain hazardous substances according to RoHS directive 2011/65/EU.

Cette machine est conforme aux exigences essentielles de santé et de sécurité relatives au design et à la construction de machines selon la directive CE 2006/42/CE et la directive 2000/14/CE modifiée par 2005/88/CE (ANNEXE VI) et satisfait également la compatibilité électromagnétique de la directive CE 2014/30/UE et à la limitation de l'utilisation de certaines substances dangereuses conformément à la directive RoHS 2011/65/UE.

Entwurf und Konstruktion dieser Maschine entsprechen den erforderlichen, grundlegenden Gesundheits- und Sicherheitsanforderungen der Richtlinien 2006/42/EG, sowie der Richtlinie 2000/14/EG, die entsprechend 2005/88/EG (ANHANG VI) geändert wurde; ebenso entspricht das Gerät den Vorschriften in Bezug auf elektromagnetische Kompatibilität, wie in der Richtlinie 2014/30/EU festgelegt und der Beschränkungsrichtlinie zur Verwendung bestimmter gefährlicher Stoffe gemäß RoHS-Richtlinie 2011/65/EU.

1 July 2019

Junji Takeda

JUNJI TAKEDA

General Manager of Agricultural and Construction Machinery Manufacturing Dept., Sakai Plant

KUBOTA Corporation

64, Ishizu-Kita, Sakai-ku, Sakai-City, Osaka, Japan 590-0823